



 
 
iJF

Electronic controller for food storage and display units



USER MANUAL

→ **LEGGI E CONSERVA
QUESTE ISTRUZIONI** ←
**READ AND SAVE
THESE INSTRUCTIONS**



**NO POWER
& SIGNAL
CABLES
TOGETHER**

READ CAREFULLY IN THE TEXT!

iJF

+0300100EN - ENG

Up to date version available on

www.carel.com

IMPORTANT WARNINGS:



CAREL bases the development of its products on decades of experience in HVAC, on continuous investments in technological innovations to products, procedures and strict quality processes with in-circuit and functional testing on 100% of its products, and on the most innovative production technology available on the market. CAREL and its subsidiaries/affiliates nonetheless cannot guarantee that all the aspects of the product and the software included with the product respond to the requirements of the final application, despite the product being developed according to start-of-the-art techniques. The customer (manufacturer, developer or installer of the final equipment) accepts all liability and risk relating to the configuration of the product in order to reach the expected results in relation to the specific final installation and/or equipment. CAREL may, based on specific agreements, act as a consultant for the successful commissioning of the final unit/application, however in no case does it accept liability for the correct operation of the final equipment/system. The CAREL product is a state-of-the-art product, whose operation is specified in the technical documentation supplied with the product or can be downloaded, even prior to purchase, from the website www.carel.com. Each CAREL product, in relation to its advanced level of technology, requires setup/configuration/programming/ commissioning to be able to operate in the best possible way for the specific application. Failure to complete such operations, which are required/indicated in the user manual, may cause the final product to malfunction; CAREL accepts no liability in such cases. Only qualified personnel may install or carry out technical service on the product.

The customer must only use the product in the manner described in the documentation relating to the product. In addition to observing any further warnings described in this manual, the following warnings must be heeded for all CAREL products:

- prevent the electronic circuits from getting wet. Rain, humidity and all types of liquids or condensate contain corrosive minerals that may damage the electronic circuits. any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not install the device in particularly hot environments. Too high temperatures may reduce the life of electronic devices, damage them and deform or melt the plastic parts. In any case, the product should be used or stored in environments that comply with the temperature and humidity limits specified in the manual;
- do not attempt to open the device in any way other than described in the manual.
- do not drop, hit or shake the device, as the internal circuits and mechanisms may be irreparably damaged;
- do not use corrosive chemicals, solvents or aggressive detergents to clean the device;
- do not use the product for applications other than those specified in the technical manual.

All of the above suggestions likewise apply to the controllers, serial cards, programming keys or any other accessory in the CAREL product portfolio.

CAREL adopts a policy of continual development. Consequently, CAREL reserves the right to make changes and improvements to any product described in this document without prior warning. The technical specifications shown in the manual may be changed without prior warning. The liability of CAREL in relation to its products is specified in the CAREL general contract conditions, available on the website www.carel.com and/or by specific agreements with customers; specifically, to the extent where allowed by applicable legislation, in no case will CAREL, its employees or subsidiaries/affiliates be liable for any lost earnings or sales, losses of data and information, costs of replacement goods or services, damage to things or people, downtime or any direct, indirect, incidental, actual, punitive, exemplary, special or consequential damage of any kind whatsoever, whether contractual, extra-contractual or due to negligence, or any other liabilities deriving from the installation, use or impossibility to use the product, even if CAREL or its subsidiaries/affiliates are warned of the possibility of such damage.

ATTENTION



Separate the probe cables and the digital input cables as much as possible from the inductive load and power cables to prevent possible electro-magnetic interference. Never introduce power cables and signal cables (including those of electric control board) into the same cable troughs.

DISPOSAL

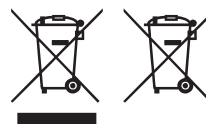


Fig. 1

Fig. 2

DISPOSAL: INFORMATION TO USERS

Please read and keep.

With reference to European Union directive 2012/19/EU issued on 4 July 2012 and related national legislation, please note that:

1. Waste Electrical and Electronic Equipment (WEEE) cannot be disposed of as municipal waste but must be collected separately so as to allow subsequent recycling, treatment or disposal, as required by law;
2. users are required to take Electrical and Electronic Equipment (EEE) at end-of-life, complete with all essential components, to the WEEE collection centres identified by local authorities. The directive also provides for the possibility to return the equipment to the distributor or retailer at end-of-life if purchasing equivalent new equipment, on a one-to-one basis, or one-to-zero for equipment less than 25 cm on their longest side;
3. this equipment may contain hazardous substances: improper use or incorrect disposal of such may have negative effects on human health and on the environment;
4. the symbol (crossed-out wheeled bin – Fig.1) even if, shown on the product or on the packaging, indicates that the equipment must be disposed of separately at end-of-life;
5. if at end-of-life the EEE contains a battery (Fig. 2), this must be removed following the instructions provided in the user manual before disposing of the equipment. Used batteries must be taken to appropriate waste collection centres as required by local regulations;
6. in the event of illegal disposal of electrical and electronic waste, the penalties are specified by local waste disposal legislation.

Warranty on materials:	2 years (from production date, excluding consumables).
Approval:	the quality and safety of CAREL S.p.A. products are guaranteed by the ISO 9001 certified design and production system.

Key to the symbols:



Caution: to bring critical issues to the attention of those using the product.



Notice: to focus attention on important topics; in particular the practical application of the various product functions.



Caution: this product is to be integrated and/or incorporated into the final apparatus or equipment. Verification of conformity to the laws and technical standards in force in the country where the final apparatus or equipment will be operated is the manufacturer's responsibility. Before delivering the product, Carel has already completed the checks and tests required by the relevant European directives and harmonised standards, using a typical test setup, which however cannot be considered as representing all possible conditions of the final installation.

HACCP: CAUTION



Food Safety programs based on procedures such as HACCP and, more generally, certain national regulations, require that the devices used for food storage be periodically checked to ensure that measurement errors are within the limits allowed for the application used. Carel recommends users to follow, for example, the indications of the European standard "Temperature recorders and thermometers for the transport, storage and distribution of chilled, frozen, deep-frozen/quick-frozen food and ice cream - PERIODIC VERIFICATION", EN 13486 - 2001 (or subsequent updates) or similar regulations and provisions in force in the country in question. Further information can be found in the manual regarding the technical characteristics, correct installation and configuration of the product.

Index

1. Introduction	7	7. Parameter table	89
1.1 Functions and main features	7	7.1 Parameter table	89
1.2 Models and accessories	8	7.2 Variable list (read-only)	95
2. Installation	14	7.3 Configuring the iJF controller via the Applica app	96
2.1 Warnings	14	8. Technical specifications	98
2.2 Small version for front panel mounting	14	8.1 Connector/cable table	100
2.3 Small version with SPLIT mounting	15	9. Alarms and signals	101
2.4 Large version for front panel mounting	17	9.1 Signals	101
2.5 Large version with SPLIT mounting	18	9.2 Types of alarms	101
2.6 XL version for front panel mounting	19	9.3 Alarm table	102
2.7 Small version with remote HMI terminal	20	9.4 Low and high temperature alarms LO and HI	103
2.8 Large version with remote HMI terminal	22	9.5 HACCP alarms (HACCP = Hazard Analysis and Critical Control Point)	104
2.9 Small version with remote HMI terminal	23	9.6 Dirty condenser alarm	105
2.10 Description of the terminals	24	9.7 Frost protection alarm	105
2.11 Probe connections	27	9.8 Refrigerant leak alarm rSF	105
2.12 Connection diagrams	27	9.9 Maintenance alarm	106
2.13 Positioning inside the panel	28	9.10 VCC compressor alarms with serial control	106
2.14 Electrical installation	28	10. Logs	107
2.15 Serial port connections	29	10.1 Periodic logs	107
2.16 Installation	29	10.2 Event log	107
3. Configuration tools	30	11. Appendix	108
3.1 Spark: configuration and commissioning software	30	11.1 ir33 and IJ parameter compatibility table	108
3.2 Sparkly: command-line configuration and commissioning software	30	11.2 Input/output configuration procedure	109
3.3 Applica app and Controlla	31	11.3 Setting the default parameters/loading the parameter sets	110
3.4 Applica Desktop	31	11.4 Copy configuration parameters	111
4. User interface	32	11.5 Preparing and using the configurations	111
4.1 Introduction	32	11.6 Alternative buttons and icons	113
4.2 Models with user terminal or remote HMI	33	12. Release notes	114
4.3 SPLIT models without user terminal	37		
5. Commissioning	38		
5.1 Description of the initial configuration parameters	38		
5.2 Set date/time and time bands	39		
5.3 Checks after commissioning	40		
5.4 Device security against unwanted changes	40		
5.5 Upgrading the device software	41		
6. Functions	42		
6.1 ON/OFF	42		
6.2 Inputs and outputs	43		
6.3 Digital inputs	44		
6.4 Analogue outputs	48		
6.5 Digital outputs	48		
6.6 Control	52		
6.7 Control modes	54		
6.8 Night-time operation	56		
6.9 ECO operation	57		
6.10 Continuous cycle	58		
6.11 Custom set points	58		
6.12 Compressor	58		
6.13 Compressor protection times	59		
6.14 Variable capacity compressor (VCC)	59		
6.15 Pump down	65		
6.16 Defrost	66		
6.17 Evaporator fans	72		
6.18 Condenser fans	76		
6.19 Humidity management	78		
6.20 Light management	82		
6.21 Door management	82		
6.22 Door - light interactions	83		
6.23 Curtain management	83		
6.24 Generic functions	83		
6.25 Anti-sweat heater or fan	86		
6.26 Gasket heater	86		
6.27 Condensate drain pan heater	86		
6.28 Temperature monitoring	87		
6.29 High and low voltage protection (HLVP)	88		
6.30 Zero crossing	88		

1. INTRODUCTION

iJF is the range of CAREL electronic controls designed for commercial refrigeration food storage and display applications. The range comprises SMALL, LARGE and XL formats, which differ in terms of the number of inputs/outputs and buttons available. Both formats allow different mounting methods: FRONT PANEL mounting with built-in display or SPLIT mounting, with or without REMOTE HMI DISPLAY. All models come with 115 - 230 Vac switching power supply and NFC (Near Field Communication) connectivity. All standard iJF display interfaces use backlit buttons with a capacitive touch screen.

A vast catalogue of options for integration into the device is available across the entire iJF range:

- Bluetooth to interact in real time with the unit and access the data logs stored on the controller. Bluetooth antenna for connection to the Applica apps (service) and CONTROLLA apps (end user).
- Modbus over RS485 for connection to Carel or third-party supervisory systems (no external converter needed).
- VCC serial output to directly drive a VCC (variable capacity compressor) via serial link, without external adapters.
- Modulating outputs (0-10 V/PWM) to directly drive modulating loads such as frequency-controlled VCC compressors, dimmable lights or variable-speed fans.
- Humidity input to directly read a 0-5 V ratiometric humidity probe.
- Safety package with compressor protection against high and low power supply voltages (HLVP) and zero crossing function for the relays.
- RTC clock
- Different combinations of colours and keypads for the display.

The entire iJF range is integrated into the following CAREL support software and apps:

- Spark software for OEM technical departments; connection via RS485, BMS or port ID2 with specific converters.
- Applica Desktop software for OEM technical departments; connection via RS485, BMS or port ID2 with specific converters.
- Sparkly software for OEM production lines; connection via RS485.
- Applica app for technical service in the field; connection via NFC and BT.
- Controlla app for end users; connection via BT.

1.1 Functions and main features

The functions and most of the parameters available on the iJF range are mainly derived from the Carel ir33+ range. In addition to these, the following functions have been added:

- Read/write parameters via NFC (replacing the programming key).
- Temperature control in the dead band.
- Defrost condensate drain heater.
- Fan cycles to avoid air stratification.
- Fan management for humidity levels (no dedicated probe needed).
- Door gasket heater.
- High and low power supply voltage detection.
- Refrigeration system failure alarm (rSF).

The iJF range has been designed to offer maximum flexibility through the use of modular hardware.

Main features of the basic versions:

- SMALL models, 4 inputs and up to 4 relays.
- LARGE models, 5 inputs and up to 6 relays.
- XL models, 4 inputs and up to 5 relays.
- panel mounting with built-in display.
- split version with remote display.
- split version without remote display.
- 115-230 Vac $\pm 10\%$ (90-264 Vac) switching power supply.
- NFC connectivity.

Fully-integrated options:

- Bluetooth (with real time clock).
- Real time clock.
- 1 RS485 serial port for supervisor with Modbus protocol.
- 1 VCC serial port (*).
- 2 modulating outputs (0-10V/PWM/VCC by frequency) (*).
- 1 x 0-5 V ratiometric input (*).
- Compressor protection against high and low power supply voltages (HLVP) and zero crossing function for the relays.

(*) versions are mutually exclusive

The iJF range controllers come with different ingress protection ratings, as indicated by the last two digits in the part number.

Below are the features of the iJF models, divided by format and mounting. Each product group is identified by the first six digits in the part number, as shown in the explanatory diagram below.

Tab. 12.a

Part number	Coating
BCU*****00	No coating
BCU*****02	Electronic grade coating
BCU*****03	Curable conformal coating + Electronic grade coating

Tab. 12.b

1.2.1 SMALL controllers

Fig. 1.a

Tab. 1.a

Fig. 1.b

Tab. 1.b

Remote HMI terminal



Fig. 1.c

P/N (first 6 digits)	Description
IJFHSA	Basic features: • low voltage power supply from the controller; • NFC; • single or multiple pack; • mini JST terminal for connection to the controller, fixed screw or plug-in; • black or white faceplate (*); • white or red digits (*); • 6 backlit touch buttons. (*) Different colours available on custom models. Optional features: • Bluetooth; • 1 multifunction input, fixed screw or plug-in terminal.

Tab. 1.c

1.2.2 LARGE controllers

FRONT PANEL mounting with built-in display



Fig. 1.d

P/N (first 6 digits)	Description
IJFPLA	Basic features: • switching power supply, 115-230 Vac with high and low voltage detection; • NFC; • 3 probe inputs, 1 digital input, 1 multifunction input; • max 6 relays (2HP 16A 8A 8A 8A 8A or 30A 16A 8A 8A 8A); • plug-in, screw or spade terminals; • single or multiple pack; • black or white faceplate (*); • white or red digits (*); • 8 backlit touch buttons. (*) Different colours available on custom models. Optional features: • Bluetooth with RTC; • RTC; • HLVP, ZC; • 1 RS485 serial port for supervision. Mutually-exclusive options: • 1 VCC serial port; • 2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output); • 1 x 0-5 V ratiometric input; • 1 RS485 Fieldbus serial port (secondary Modbus protocol only).

Tab. 1.d

SPLIT mounting



Fig. 1.e

P/N (first 6 digits)	Description
IJFSLA	Basic features: • switching power supply, 115-230 Vac with high and low voltage detection; • NFC; • 2 probe inputs, 1 digital input, 1 multifunction input; • max 6 relays (2HP 16A 8A 8A 8A 8A or 30A 16A 8A 8A 8A); • plug-in, screw or spade terminals; • single or multiple pack; • JST terminal at front for connection to remote display. Optional features: • Bluetooth with RTC; • RTC; • HLVP, ZC; • 1 RS485 serial port for supervision. Mutually-exclusive options: • 1 VCC serial port; • 2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output); • 1 x 0-5 V ratiometric input; • 1 RS485 Fieldbus serial port (secondary Modbus protocol only).

Tab. 1.e

Remote HMI terminal



Fig. 1.f

P/N (first 6 digits)	Description
IJFHLA	Basic features: • low voltage power supply from the controller; • NFC; • single or multiple pack; • JST terminal for connection to the controller, fixed screw or plug-in; • black or white faceplate (*); • white or red digits (*); • 8 backlit touch buttons. (*) Different colours available on custom models. Optional features: • Bluetooth; • 1 probe input, 1 digital input, 1 multifunction input, with fixed screw or plug-in terminals.

Tab. 1.f

1.2.3 XL controllers

FRONT PANEL mounting with built-in display



Fig. 1.g



Fig. 1.h

P/N (first 6 digits)	Description
IJFPSA	Basic features: • switching power supply, 115-230 Vac with high and low voltage detection; • NFC; • 2 probe inputs, 1 digital input, 1 multifunction input; • max 5 relays (2HP 8A 8A 5A 5A); • plug-in, screw or spade terminals; • single or multiple pack; • black or white faceplate (*); • white or red digits (*); • 6 backlit touch buttons; • LED status bar. (*) Different colours available on custom models. Optional features: • Bluetooth with RTC; • RTC; • HLVP, ZC (see the corresponding chapter for correct use); • 1 RS485 serial port for supervision. Mutually-exclusive options: • 1 VCC serial port; • 2 modulating outputs (0-10V/PWM/VCC by frequency, selectable for each output); • 1 x 0-5 V ratiometric input; • 1 RS485 Fieldbus serial port (Modbus protocol secondary only).

Tab. 1.g

Remote HMI terminal



Fig. 1.i



Fig. 1.j

P/N (first 6 digits)	Description
IJFHSA	Basic features: • low voltage power supply from the controller; • NFC; • single or multiple pack; • mini JST terminal for connection to the controller or plug-in; (*) Different colours available on custom models. Optional features: • Bluetooth; • 1 multifunction input, fixed screw or plug-in terminal

Tab. 1.h

1.2.4 Accessories

Notice: This list of ACCESSORY part numbers is updated as of the release date of this manual; please contact CAREL for any additional part numbers available.

Connector kit



Fig. 1.k

Terminal description - SMALL model (*)

Ref.	Code	Description
J1	BXOPZB50802O1	plug-in connector kit, 2 pins, 5.08 mm pitch, orange (10 pcs)
J2	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs) (NO1; NO1+NO2)
	BXOPZB50805G1	plug-in connector kit, 5 pins, 5.08 mm pitch, green (10 pcs) (NO1+NO2+NO3; NO1+NO2+NO3+NO4)
J3	BXOPZB38105G1	plug-in connector kit, 5 pins, 3.81 mm pitch, green (10 pcs)
J3a	BXOPZB35003B1	plug-in connector kit, 3 pins, 3.5 mm pitch, black (10 pcs)
J3b	BXOPZB35003B1	plug-in connector kit, 3 pins, 3.5 mm pitch, black (10 pcs)
J4	BXOPZI4850000	RS485 converter for TTL serial port
J5	BXOPZB35003B1	plug-in connector kit, 3 pins, 3.5 mm pitch, black (10 pcs)
J7	BXOPZC30E0100	3-pin mini JST/ connector cable for Embraco inverter, 100 cm (1 pc)
	BXOPZC30E0104	3-pin mini JST/ connector cable for Embraco inverter, 100 cm (40 pc)
	BXOPZC30S0100	3-pin mini JST/ connector cable for Secop inverter, 100 cm (1 pc)
	BXOPZC3000050	3-pin mini JST/ free end cable, 50 cm (1 pc)
	BXOPZC3500250	3-pin mini JST/free end shielded cable, 250 cm (1 pc)
J9	BXOPZC4010300	4-pin mini JST/free end cable, 300 cm (1 pc)
	BXOPZC4020010	4-pin mini JST/plug-in cable adapter, 10 cm (1 pc)
J10	BXOPZB35002B1	plug-in connector kit, 2 pins, 3.5 mm pitch, black (10 pcs)

Terminal description - LARGE model (*)

Ref.	Code	Description
J1	BXOPZB50802O1	plug-in connector kit, 2 pins, 5.08 mm pitch, orange (10 pcs)
J2a	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs)
J2b	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs)
J2c	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs)
J2d	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs)
J3a + J3b	BXOPZB50807G1	plug-in connector kit, 7 pins, 5.08 mm pitch, green (10 pcs)
J4	BXOPZI4850000	RS485 converter for TTL serial port
J5	BXOPZB35003B1	plug-in connector kit, 3 pins, 3.5 mm pitch, black (10 pcs)
J7	BXOPZC30E0100	3-pin mini JST cable/ connector for Embraco inverter, 100 cm (1 pc)
	BXOPZC30E0104	3-pin mini JST cable/ connector for Embraco inverter, 100 cm (40 pc)
	BXOPZC30S0100	3-pin mini JST cable/ connector for Secop inverter, 100 cm (1 pc)
	BXOPZC3000050	3-pin mini JST/ free end cable, 50 cm (1 pc)
	BXOPZC3500250	3-pin mini JST/free end shielded cable, 250 cm (1 pc)
J9	BXOPZC4010300	4-pin mini JST/free end cable, 300 cm (1 pc)
	BXOPZC4020010	4-pin mini JST/plug-in cable adapter, 10 cm (1 pc)
J10	BXOPZB35002B1	plug-in connector kit, 2 pins, 3.5 mm pitch, black (10 pcs)

Tab. 1.i

Terminal description - XL model (*)

Ref.	P/N	Description
J1	BXOPZB50802O1	plug-in connector kit, 2 pins, 5.08 mm pitch, orange (10 pcs)
J2A	BXOPZB50803G1	plug-in connector kit, 3 pins, 5.08 mm pitch, green (10 pcs)
J2B	BXOPZB50802G1	plug-in connector kit, 2 pins, 5.08 mm pitch, green (10 pcs)
J2C	BXOPZB50802G1	plug-in connector kit, 2 pins, 5.08 mm pitch, green (10 pcs)
J3	BXOPZB38105G1	plug-in connector kit, 5 pins, 3.81 mm pitch, green (10 pcs)
J4	BXOPZI4850000	RS485 converter for TTL serial port
J5	BXOPZB35003B1	plug-in connector kit, 3 pins, 3.5 mm pitch, black (10 pcs)
J7	BXOPZC30E0100	3-pin mini JST cable/ connector for Embraco inverter, 100 cm (1 pc)
	BXOPZC30E0104	3-pin mini JST cable/ connector for Embraco inverter, 100 cm (40 pc)
	BXOPZC30S0100	3-pin mini JST cable/ connector for Secop inverter, 100 cm (1 pc)
	BXOPZC3000050	3-pin mini JST/ free end cable, 50 cm (1 pc)
	BXOPZC3500250	3-pin mini JST/free end shielded cable, 250 cm (1 pc)
J9	BXOPZC4010300	4-pin mini JST/free end cable, 300 cm (1 pc)
	BXOPZC4020010	4-pin mini JST/plug-in cable adapter, 10 cm (1 pc)
J10	BXOPZB35002B1	plug-in connector kit, 2 pins, 3.5 mm pitch, black (10 pcs)

Tab. 1.j

(*) as per paragraph 2.8

Notice: if using connectors not purchased from CAREL, make sure approved models are used.

Fixing brackets



Fig. 1.l

P/N	Description
BXOPZMBRC0002	Built-in version panel bracket kit, multiple pack (20 pcs)
ACS00CK001602	panel bracket kit for HMI version multiple pack (20 pcs)

Tab. 1.k

Serial cables



Fig. 1.m

P/N	Description
BXOPZC3000050	3-wire cable jst mini/free end 50 cm (1 pc)
BXOPZC3500250	3-wire cable jst mini/free end shielded 250 cm (1 pc)

Tab. 1.l

Cables for HMI display



Fig. 1.n

P/N	Description
BXOPZC4000150	4-wire cable jst mini/jst mini 150cm (1 pc)
BXOPZC4000300	4-wire cable jst mini/jst mini 300cm (1 pc)
BXOPZC4010300	4-wire cable jst mini/free end 300 cm (1 pc)

Tab. 1.m

Serial cables for Embraco VCC compressor inverters



Fig. 1.o

P/N	Description
BXOPZC30E0100	3-pin mini JST shielded cable/connector for Embraco inverter, 100 cm (1 pc)
BXOPZC30E0104	3-pin mini JST shielded cable/connector for Embraco inverter, 100 cm (40 pc)

Tab. 1.n

Serial cable for Secop VCC compressor inverter



Fig. 1.p

P/N	Description
BXOPZC30S0100	3-pin mini JST shielded cable/connector for Secop inverter, 100 cm (1 pc)

Tab. 12.c

Adapter kits



Fig. 1.q

P/N	Description
BXOPZC4020010	4-wire cable JST mini/removable adapter 10cm (1 pc)

Tab. 1.o

Converters



Fig. 1.r

P/N	Description
BXOPZIOWD0000	USB/1-wire converter for Digital Input (DI2)
BXOPZI4850000	RS485 converter for TTL serial port
CVSTDUMOR0	USB/RS485 converter

Tab. 1.p

Gaskets



Fig. 1.s

P/N	Description
BXOPZMGKS0001	Gasket for rear mounting - Split Small (10 pcs)
BXOPZMGKI0001	Gasket for rear mounting - Split Large (10 pcs)

Tab. 1.q

1.2.5 Temperature sensors



Fig. 1.t

P/N	Type	Description	Range
NTC***HP0*	10 kΩ±1%@25°C, IP67 β 3435	Temperature probe	-50 to 50°C (105°C in air)
NTC***HF01	10 kΩ±1%@25°C, IP67 β 3435	Evaporator outlet temperature probe	-50 to 90°C strap-on
PT1060HP01	PT1000 Class B, IP67	Temperature probe	-50T105°C in air
PT1***HF01	PT1000 Class B, IP67	Evaporator outlet temperature probe	50T105°C in air
DPRC*	NTC 10KΩ@25°C β3435 - 0...5 Vdc	Ambient temperature and humidity probe	-10T60°C - 10...90% U.R

Tab. 1.r

Notice: see manuals +040010025 (ITA- ENG) /+040010026 (FRE-GER) for guidelines on installing the sensors on the unit.

Installation example with one evaporator

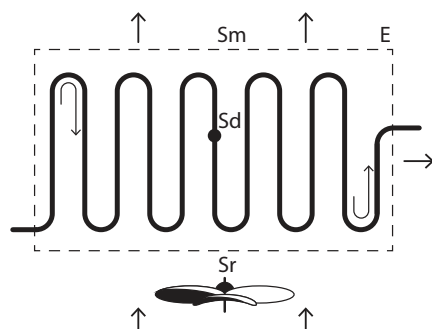


Fig. 1.u

Key:

P/N	Description
Sm	Outlet probe
Sr	Intake probe
Sd	Defrost probe
E	Evaporator

Tab. 1.s

2. INSTALLATION

2.1 Warnings

⚠ Caution: avoid installing the controller in environments with the following characteristics:

- temperature and humidity that do not comply with the ambient operating conditions (see "Technical specifications");
- strong vibrations or knocks;
- exposure to water sprays or condensate;
- exposure to aggressive and polluting atmospheres (e.g.: sulphur and ammonia gases, saline mist, smoke) which may cause corrosion and/or oxidation;
- strong magnetic and/or radio frequency interference (thus avoid installation near transmitting antennae);
- exposure to direct sunlight and the elements in general;
- wide and rapid fluctuations in ambient temperature;
- exposure of the controller to dust (formation of corrosive patina with possible oxidation and reduction of insulation);

2.2 Small version for front panel mounting

2.2.1 Dimensions mm (inch)

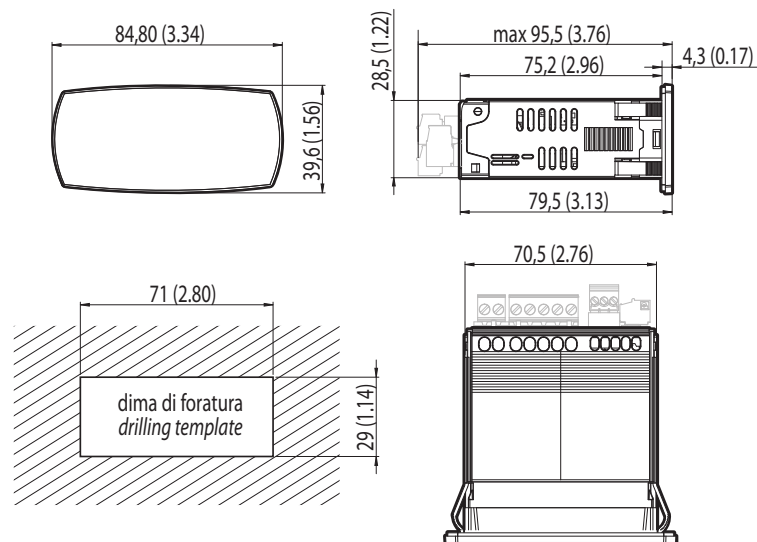


Fig. 2.a

2.2.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

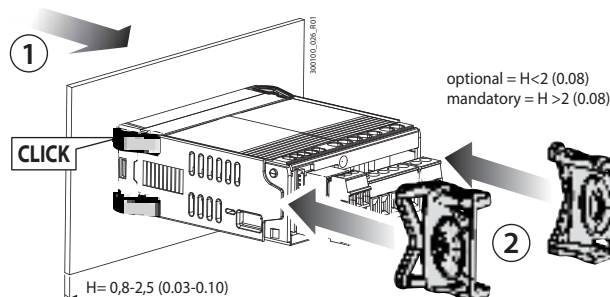


Fig. 2.b

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.



Caution: IP65 front protection is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied: ≤ 120 μ m.



Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.2.3 Removal

Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

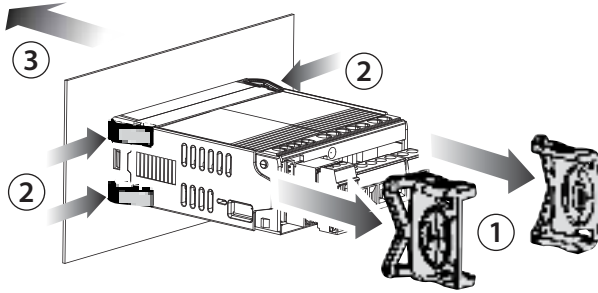


Fig. 2.c

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

2.3 Small version with SPLIT mounting

2.3.1 Dimensions - mm (in)

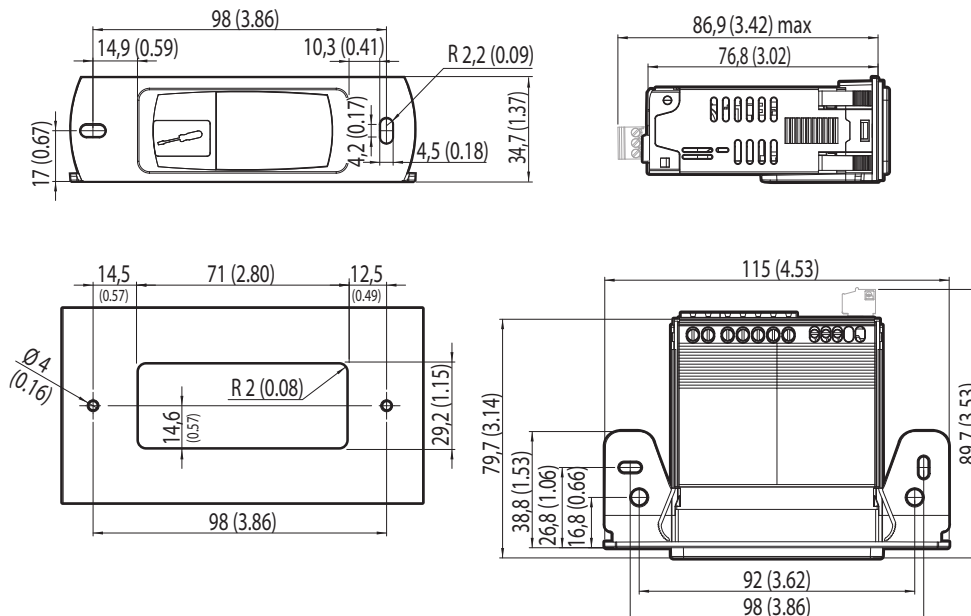


Fig. 2.d

2.3.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

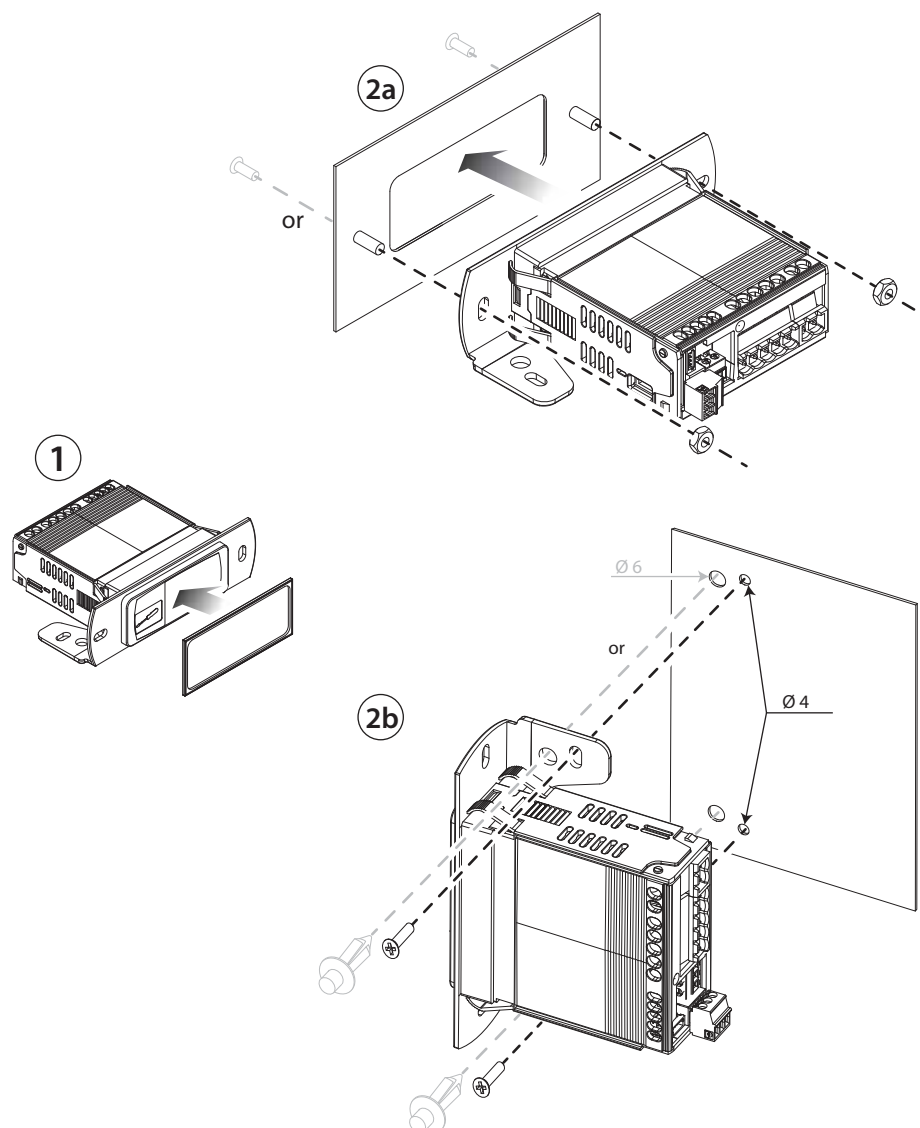


Fig. 2.e

1. Place the gasket on the front of the controller (for surface mounting only);
2. Place the controller over the drilling template or in the fixing position;
3. Tighten the fixing screws or insert the clips into the holes provided, as shown in the figure.

⚠ Caution: IP20 or IP45 front protection (with or without user interface connected, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface: $\leq 0.5 \text{ mm}$ (0.02 in);
- maximum roughness of the surface where the gasket is applied: $\leq 120 \text{ }\mu\text{m}$.

📌 Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.3.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. unscrew the fixing screws or remove the clips.

2.4 Large version for front panel mounting

2.4.1 Dimensions - mm (in)

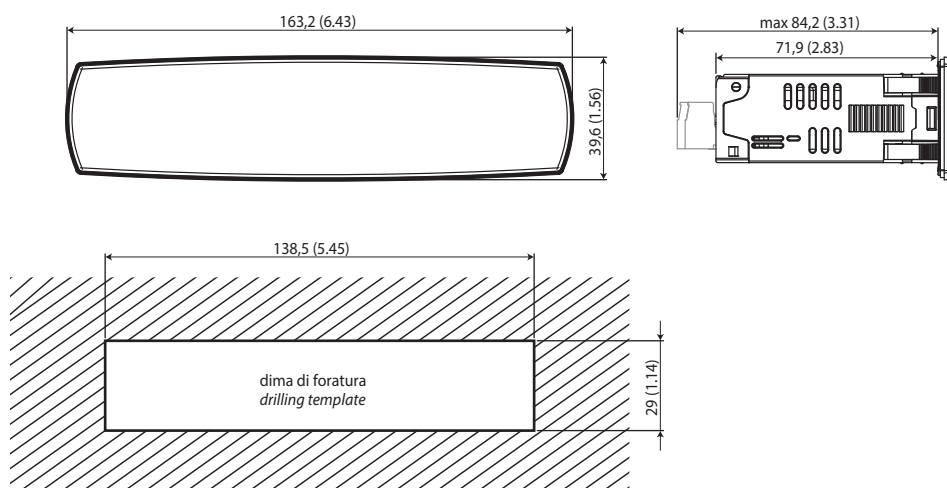


Fig. 2.f

2.4.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

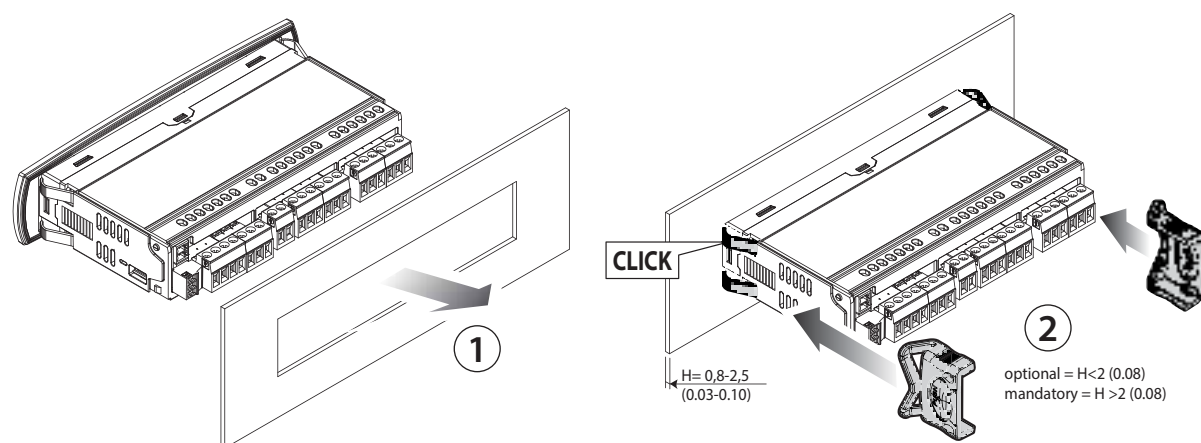


Fig. 2.g

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.

⚠ Caution: IP65 or IP43 front protection (with or without fixing brackets, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied: ≤ 120 μ m.

📌 Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.4.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

2.5 Large version with SPLIT mounting

2.5.1 Dimensions - mm (in)

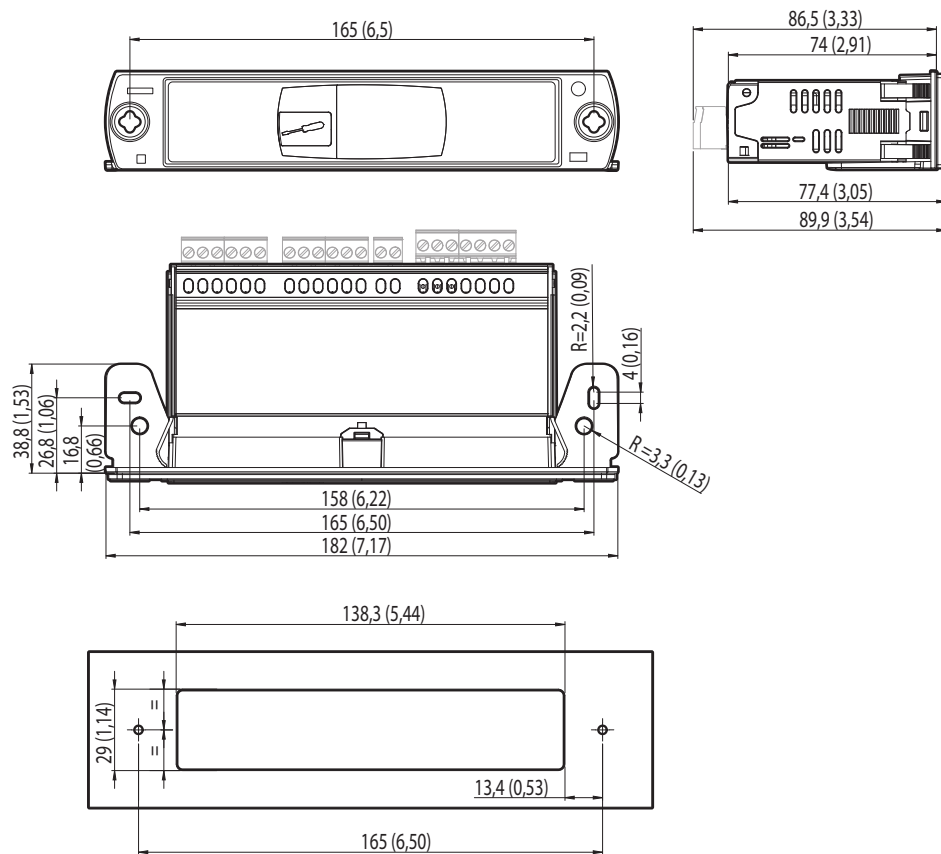


Fig. 2.h

2.5.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

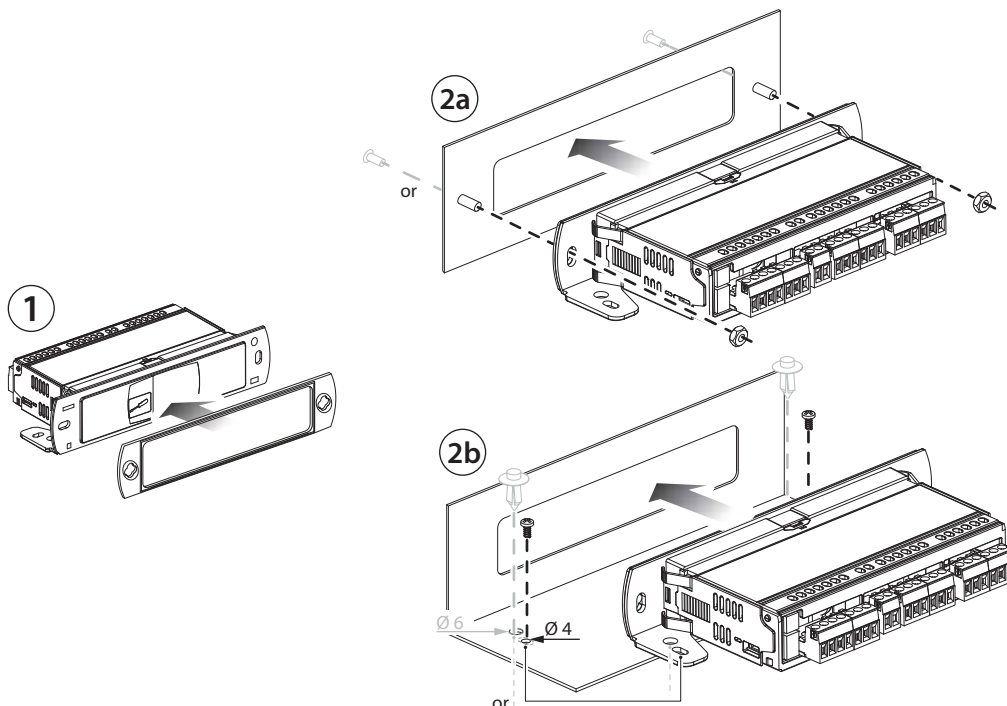


Fig. 2.i

1. Place the gasket on the front of the controller (for surface mounting only);
2. Place the controller over the drilling template or in the fixing position;
3. Tighten the fixing screws or insert the clips into the holes provided, as shown in the figure.

⚠ Caution: IP20 or IP45 front protection (with or without user interface connected, respectively) is guaranteed only if the following conditions are met:

Maximum deviation of the rectangular opening from flat surface: $\leq 0.5 \text{ mm}$ (0.02 in);

Maximum roughness of the surface where the gasket is applied: $\leq 120 \text{ }\mu\text{m}$.

📌 Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.5.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. unscrew the fixing screws or remove the clips.

2.6 XL version for front panel mounting

2.6.1 Dimensions mm (inch)

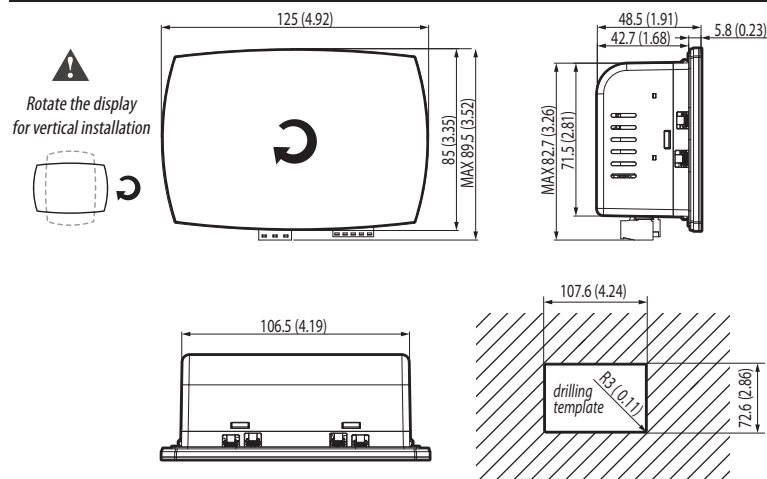


Fig. 2.j

2.6.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

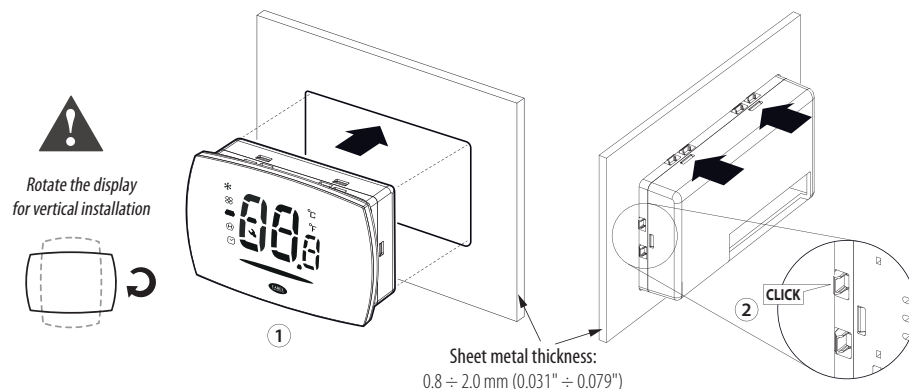


Fig. 2.k

1. Align the controller with the rectangular opening in the panelling, turning it so that the connectors are facing the opening. The connectors are the bulkiest part of the component and must pass through the opening first.
2. Gently insert the control into the panel, first passing the connectors through the rectangular opening.
3. Once the connectors have passed through the panelling, rotate the controller until it is parallel to the surface of the panelling. During this step, the large connector on the rear edge can be used as a guide, making it easier to rotate and align the device.
4. Push the controller fully in, making sure all 12 retaining tabs click into place and that the component is correctly anchored to the panelling.

⚠ Caution: IP65 front protection is only guaranteed if the following conditions are met: maximum deviation of the rectangular opening from the flat surface: ≤ 0.5 mm (0.02 in); thickness of the panelling: 0.8 to 2.0 mm (0.03 to 0.1 in). Maximum roughness of the surface where the gasket is applied: ≤ 120 μ m.

🔍 Notice: the thickness of the sheet metal (or other material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.6.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. Using a flat-bladed tool (such as a flat-blade screwdriver), apply light pressure to the tabs, flexing them inward to free them from the panelling.
2. While keeping pressure on the tabs, push the controller outwards. The pressed-in tabs will rest against the edge of the opening in the panelling, making it easier for the component to come out.
3. Proceed in sequence: start from one of the long sides of the controller, then continue clockwise or anti-clockwise along the perimeter (moving to the next short side), until all the tabs have been completely released.
4. Once the tabs are completely released, remove the controller in the same way it was fitted: first slide out the part with the connectors, the bulkiest part of the controller.

2.7 Small version with remote HMI terminal

2.7.1 Dimensions - mm (in)

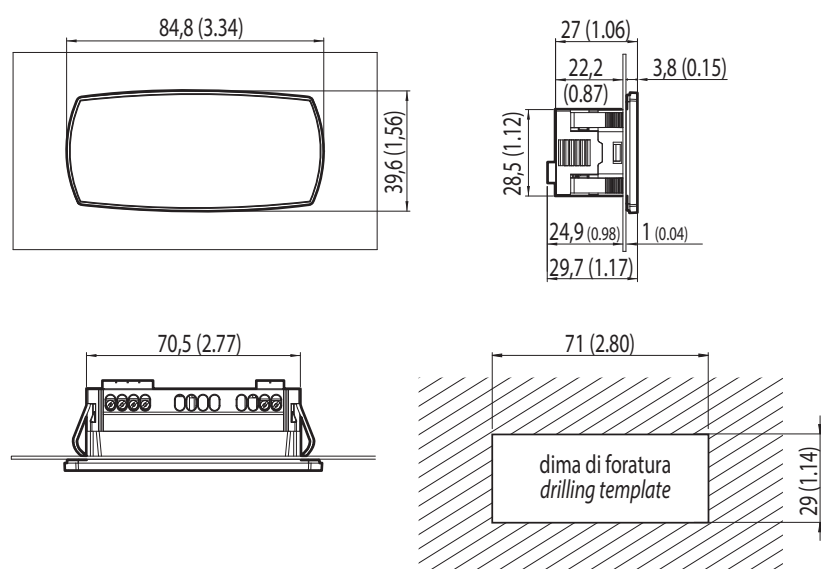


Fig. 2.1

2.7.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

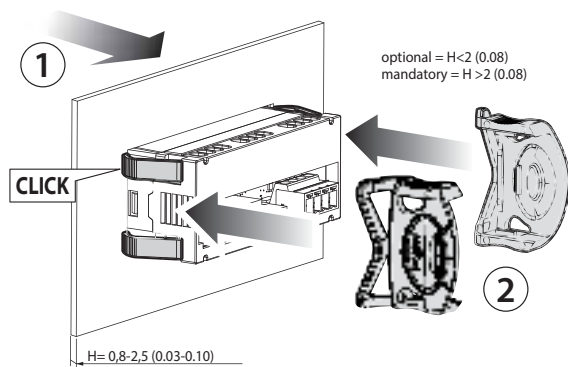


Fig. 2.m

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.

⚠ Caution: IP65 front protection is guaranteed only if the following conditions are met:
 Maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm (0.02 in);
 Thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
 Maximum roughness of the surface where the gasket is applied: ≤ 120 μ m.

📢 Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.7.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

2.7.4 HMI connection

⚠ Caution: disconnect the controller before carrying out any maintenance.

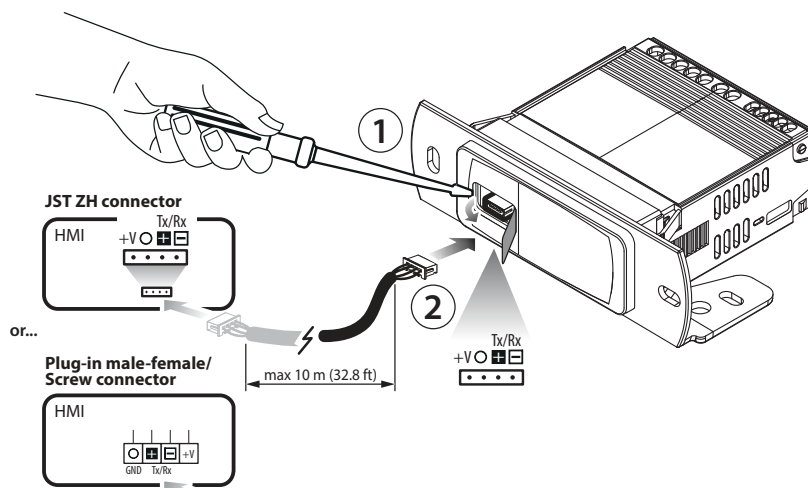


Fig. 2.n

Open the electrical panel and from the rear:

1. using a screwdriver, remove the rubber protection from the front of the Split controller;
2. connect the 4-wire cable to the mini JST connector on the controller;
3. connect the 4-wire cable to the mini JST or screw/plug-in connector on the user interface.



Caution: for HMI's with screw or plug-in terminals, respect the order of the wiring.



Notice: see "Introduction" for the cable part numbers.

2.8 Large version with remote HMI terminal

2.8.1 Dimensions - mm (in)

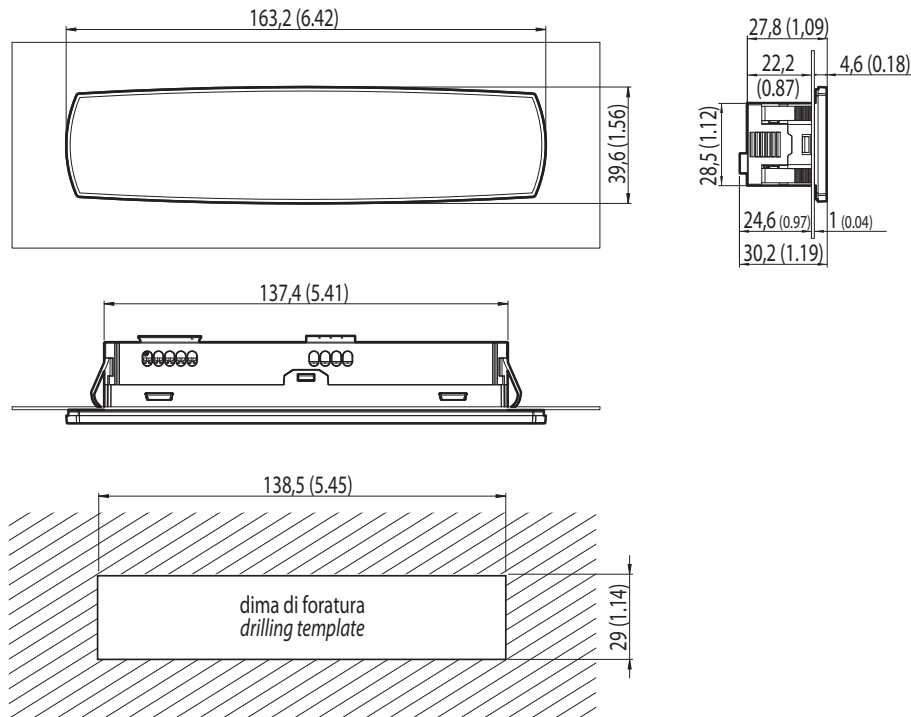


Fig. 2.0

2.8.2 Assembly



Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

1. Place the controller in the opening, pressing lightly on the side anchoring tabs.
2. Then press on the front until fully inserted (the side tabs will bend, and the catches will attach the controller to the panel, up to a maximum thickness of 2 mm).
3. If necessary, fit the fixing brackets.



Caution: IP65 or IP43 front protection (with or without fixing brackets, respectively) is guaranteed only if the following conditions are met:

- maximum deviation of the rectangular opening from flat surface: ≤ 0.5 mm (0.02 in);
- thickness of the electrical panel sheet metal: 0.8-2 mm (0.03-0.1 in); for thicknesses from 2-2.5 mm (0.08-0.10 in), the optional fixing brackets are required;
- maximum roughness of the surface where the gasket is applied: ≤ 120 μm .



Notice: the thickness of the sheet metal (or material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.8.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. remove the fixing brackets (if fitted);
2. gently press the side anchoring tabs on the controller;
3. exert slight pressure on the controller until it is removed.

2.8.4 Remote HMI terminal connection

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

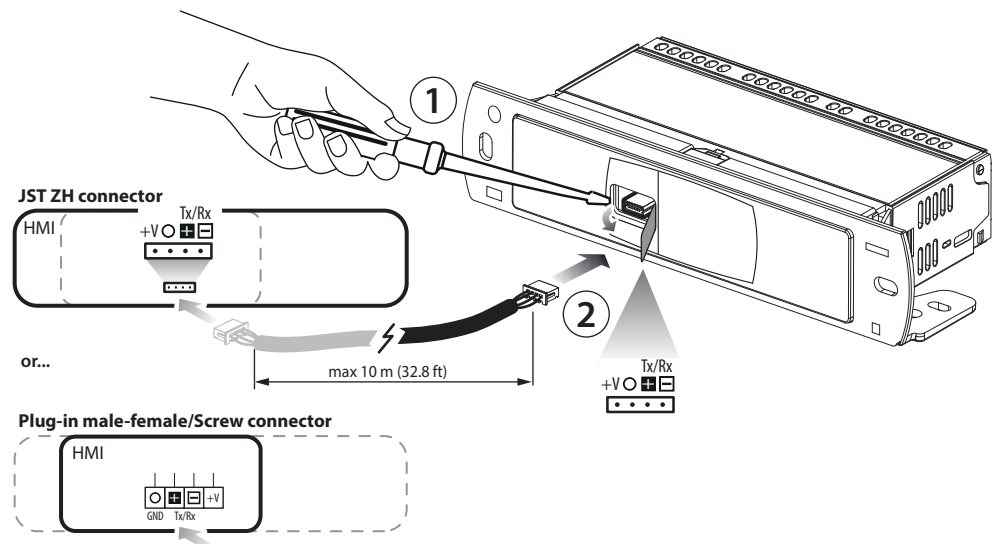


Fig. 2.p

Open the electrical panel and from the rear:

1. using a screwdriver, remove the rubber protection from the front of the Split controller;
2. connect the 4-wire cable to the mini JST connector on the controller;
3. connect the 4-wire cable to the mini JST or screw/plug-in connector on the user interface.

⚠ Caution: for HMIs with screw or plug-in terminals, respect the order of the wiring.

📌 Notice: see "Introduction" for the cable part numbers.

2.9 Small version with remote HMI terminal

2.9.1 Dimensions - mm (in)

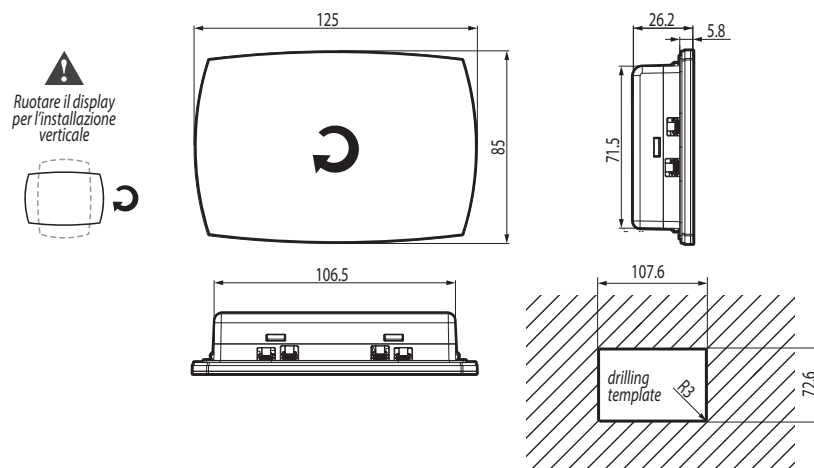


Fig. 2.q

2.9.2 Assembly

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

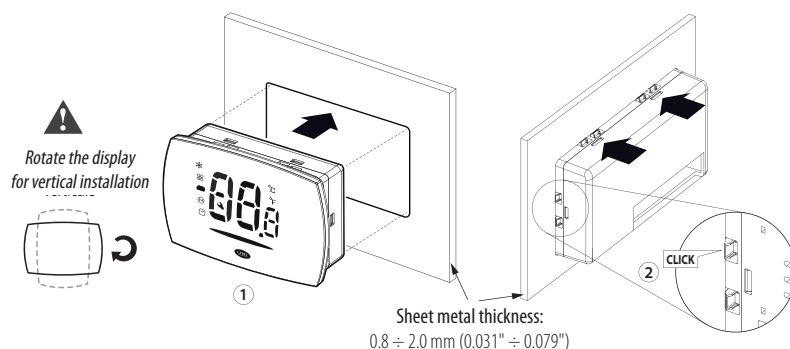


Fig. 2.r

1. Place the controller over the rectangular opening in the panelling, keeping it parallel to the surface.
2. Insert the controller directly into the opening, applying even pressure.
3. Push it in until the locking tabs click into place, meaning the controller is anchored to the panelling.

⚠ Caution: IP65 front protection is only guaranteed if the following conditions are met: maximum deviation of the rectangular opening from the flat surface: ≤ 0.5 mm (0.02 in); thickness of the panelling: 0.8 to 2.0 mm (0.03 to 0.1 in). Maximum roughness of the surface where the gasket is applied: ≤ 120 μ m.

📢 Notice: the thickness of the sheet metal (or other material) used to make the electrical panel must be adequate to ensure safe and stable mounting of the product (0.8-2.5 mm / 0.03-0.10 in).

2.9.3 Removal

⚠ Caution: before carrying out any maintenance, disconnect the controller from the power supply by moving the main system switch to "off".

Open the electrical panel and from the rear:

1. Using a flat-head screwdriver or flat-blade tool, press the tabs inwards to release them from the edge of the opening.
2. While maintaining pressure, remove the controller by sliding it out.
3. Repeat progressively on all sides until all the tabs are released and the controller is detached.

2.10 Description of the terminals

Small model

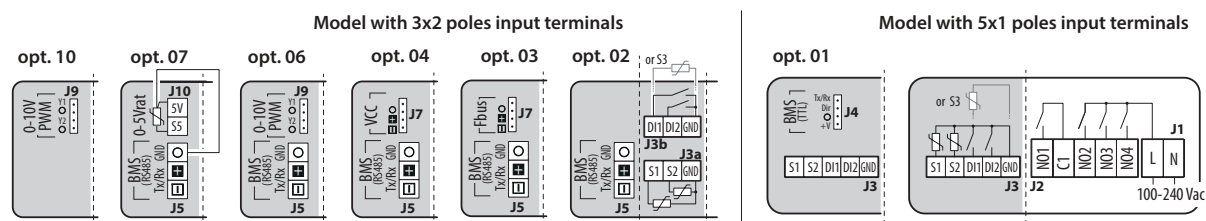


Fig. 2.s

Ref.	Description	Ref.	Description
J1	L N	J5	- BMS serial port (RS485): Rx-/Tx- + BMS serial port (RS485): Rx+/Tx+ O BMS serial port (RS485): GND
J2	NO1 Digital output (relay) 1 C1 Common for relay 1 NO2 Digital output (relay) 2 NO3 Digital output (relay) 3 NO4 Digital output (relay) 4	J7	- VCC serial port: Rx-/Tx- + VCC serial port: Rx+/Tx+ O VCC serial port: GND
J3, J3a, J3b	S1 Analogue input 1 (NTC, PTC or PT1000, NTC_HT and NTC_LT) S2 Analogue input 2 (NTC, PTC or PT1000, NTC_HT and NTC_LT) DI1 Digital input 1/Analogue input 3 (NTC, PTC or PT1000, NTC_HT and NTC_LT) DI2 Digital input 2 GND GND: reference for probes, digital inputs and analogue outputs	J9	Y1 Analogue output 1 O GND: analogue output reference Y2 Analogue output 2 O GND: analogue output reference
J4	Tx/Rx TTL port: Tx/Rx Dir TTL port: Dir +V TTL port: +V O TTL port: GND	J10	5V Ratiometric probe power supply S5 Analogue input 5 (ratiometric probe)

Tab. 12.d

Large model

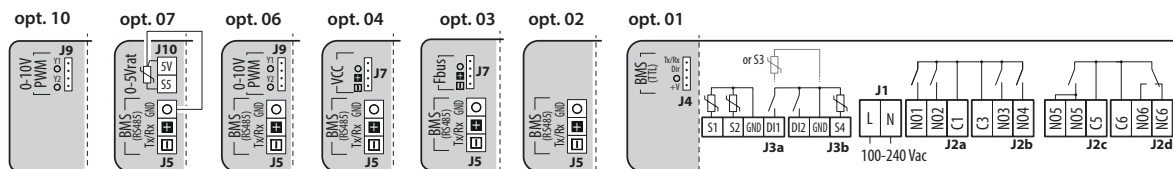


Fig. 2.t

Ref.	Description	Ref.	Description
J1	L	J4	Tx/Rx
	N		TTL port: Tx/Rx
J2a	NO1		Dir
	C1		TTL port: Dir
	NO2		O
	C3		TTL port: GND
J2b	NO3		+V
	NO4		TTL port: +V
J2c	NO5	J5	-
	C5		BMS serial port (RS485): Rx-/Tx-
	NO6		BMS serial port (RS485): Rx+/Tx+
	C6		BMS serial port (RS485): GND
J2d	NC6	J7	-
	NO6		VCC serial port: Rx-/Tx-
J3a	S1		VCC serial port: Rx+/Tx+
	S2		O
	GND		VCC serial port: GND
	DI1	J9	Y1
	DI2		Analogue output 1
J3b	GND		GND: analogue output reference
	S4		Y2
			Analogue output 2
		J10	O
			GND: analogue output reference
			5V
			Ratiometric probe power supply
			S5
			Analogue input 5 (ratiometric probe)

Tab. 12.e

XL rail model

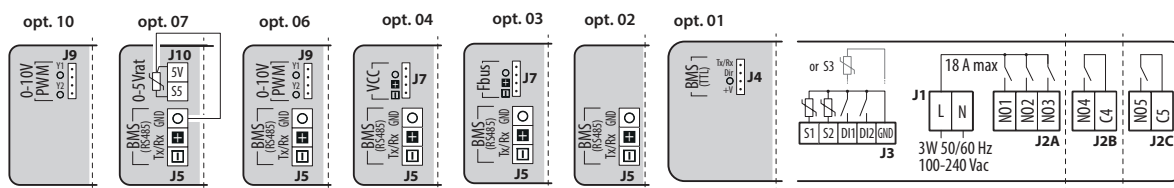



Fig. 2.u

Ref.	Description	Ref.	Description
J1	L	J4	Tx/Rx
	N		TTL port: Tx/Rx
J2A	NO1		Dir
	NO2		TTL port: Dir
	NO3		O
	NO4		TTL port: GND
J2B	NO5		+V
	C5		TTL port: +V
J2C	NO6	J5	-
	C6		BMS serial port (RS485): Rx-/Tx-
J3	S1		BMS serial port (RS485): Rx+/Tx+
	S2		BMS serial port (RS485): GND
	DI1/S3	J7	-
	DI2		VCC serial port: Rx-/Tx-
	GND		VCC serial port: Rx+/Tx+
			O
			VCC serial port: GND
		J9	Y1
			Analogue output 1
			GND: analogue output reference
			Y2
			Analogue output 2
			O
			GND: analogue output reference
		J10	5V
			Ratiometric probe power supply
			S5
			Analogue input 5 (ratiometric probe)

Tab. 2.t

HMI

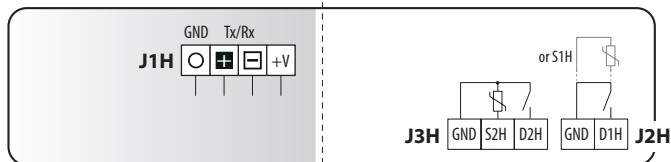Plug-in male-female/ Screw connector



JST ZH connector


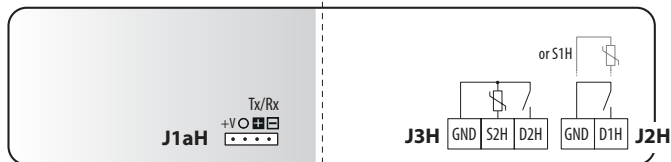



Fig. 2.v

Small model (IJFHS*)

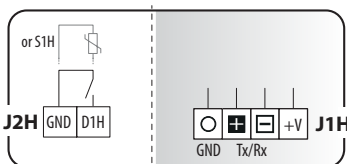Plug-in male-female/ Screw connector




JST ZH connector

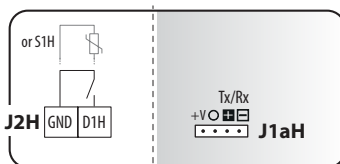


HMI XL model

HORIZONTAL VERSION

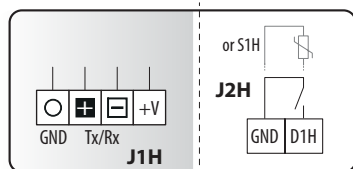Plug-in male-female/ Screw connector



JST ZH connector

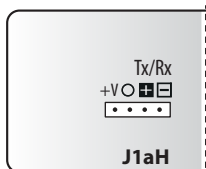

VERTICAL VERSION

Plug-in male-female/ JST ZH connector

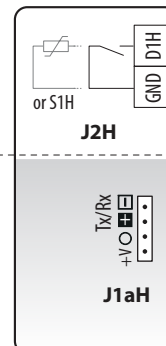


Fig. 2.w

Ref. small		Description
J1H, J1aH	-	HMI serial port: Rx-/Tx-
	+	HMI serial port: Rx+/Tx+
	O	HMI serial port: GND
	+V	HMI serial port: power supply
J2H	D1H	HMI digital input 1/HMI analogue input 1 (NTC)
	GND	GND: reference for probes, HMI digital inputs
J3H	GND	GND: reference for probes, HMI digital inputs
	S2H	HMI analogue input 2 (NTC)
	D2H	HMI digital input 2

Tab. 2.u

2.11 Probe connections



Notice:

- the probe connections relate to the default parameter configuration;
- probes S1, S2, S3, S4 can be configured as NTC, PTC, PT1000, NTC_HT or NTC_LT; probes S1H, S2H can only be configured as NTC;
- the temperature probes must all be the same type.

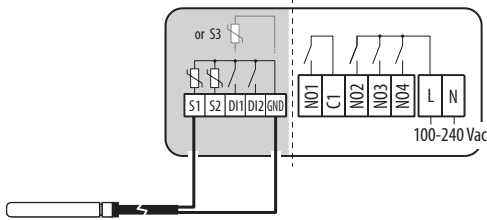


Fig. 2.x

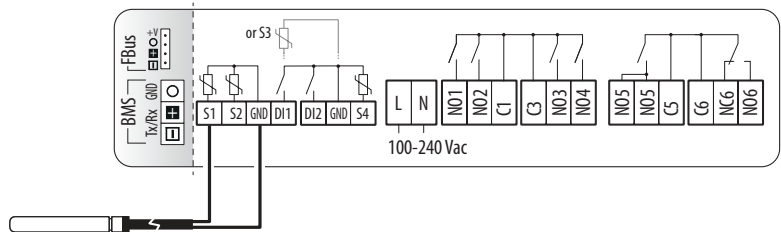


Fig. 2.y

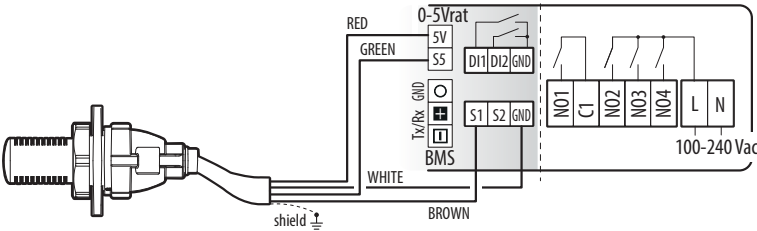


Fig. 2.z

2.12 Connection diagrams



Notice: the "Applica" app and the configuration tool (see the corresponding chapter) can be used to change the configuration of the probes without needing to rewire or change the assignment of the relays to specific functions, thus taking advantage of different capacities when needed.

2.12.1 Small model

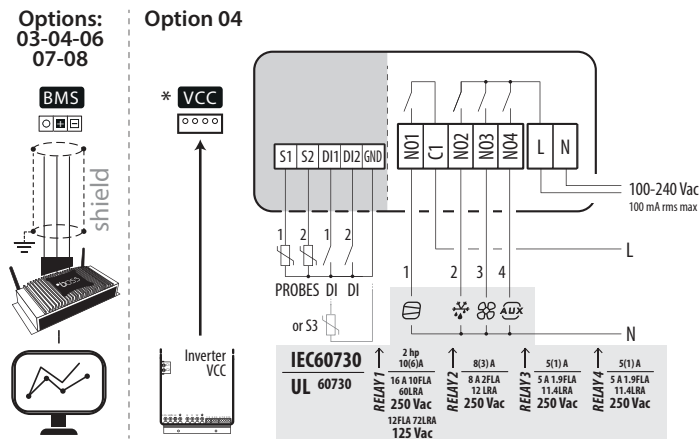


Fig. 2.aa

Correspondence of terminals for serial connection (*)

IJ VCC	SECOP	EMBRACO
+V	NOT USED	NOT USED
GND	GND	O
-	O	IN
+	CIK	OUT

Tab. 2.v

2.12.2 Large model

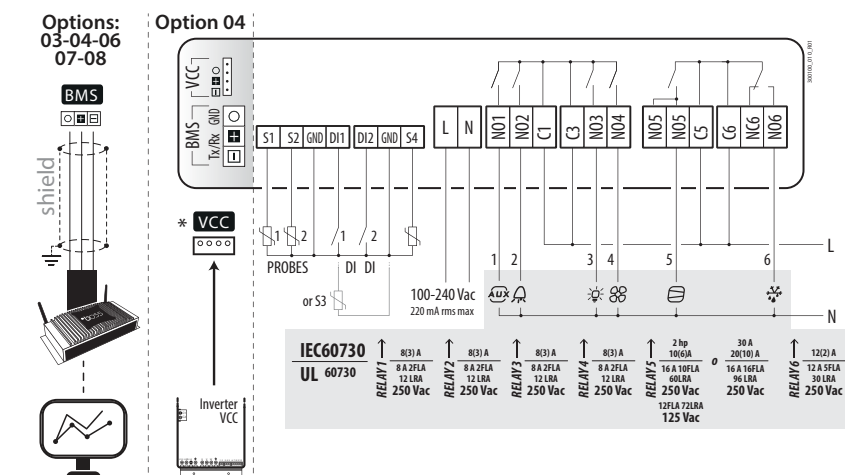


Fig. 2.ab

2.12.3 XL model

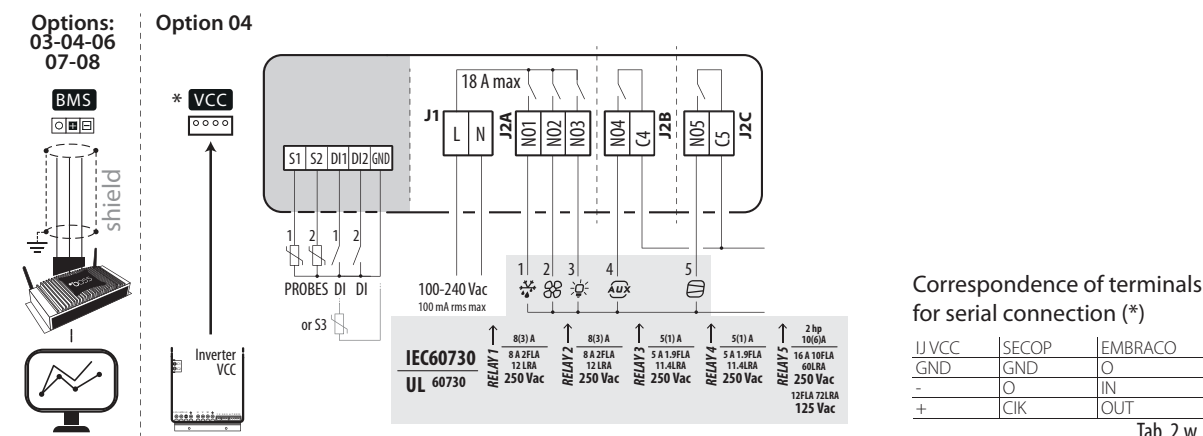


Fig. 2.ac

2.13 Positioning inside the panel

The position of the controller in the electrical cabinet must be chosen so as to guarantee correct physical separation from the power components (solenoids, contactors, actuators, inverters, ...) and the connected cables. Proximity to such devices/cables may create random malfunctions that are not immediately evident. The structure of the panel must allow the correct flow of cooling air.

2.14 Electrical installation

Caution: when laying the wiring, "physically" separate the power part from the control part. The proximity of these two sets of wires will, in most cases, cause problems of induced disturbance or, over time, malfunctions or damage to the components. The ideal solution is to house these two circuits in two separate cabinets. Sometimes this is not possible, and therefore the power part and the control part must be installed in two separate areas inside the same panel.

For the control signals, it is recommended to use shielded cables with twisted wires. If the control cables have to cross over the power cables, the intersections must be as near as possible to 90 degrees, always avoiding running the control cables parallel to the power cables.

Pay attention to the following warnings:

- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws. When the operation is completed, slightly tug the cables to check they are sufficiently tight;
- separate as much as possible the probe signal, digital input and serial line cables from the cables carrying inductive loads and power cables to avoid possible electromagnetic disturbance. Never run power cables (including the electrical cables) and probe signal cables in the same conduits. Do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers or similar);
- reduce the path of the probe cables as much as possible, and avoid spiral paths that enclose power devices;
- avoid touching or nearly touching the electronic components fitted on the boards to avoid electrostatic discharges (extremely damaging) from the operator to the components;
- do not secure the cables to the terminals by pressing the screwdriver with excessive force, to avoid damaging the controller: maximum tightening torque: 0.22-0.25 N·m.
- for applications subject to considerable vibrations (1.5 mm pk-pk 10/55 Hz), secure the cables connected to the controller around 3 cm from the connectors using cable ties;
- all the extra low voltage connections (analogue and digital inputs, analogue outputs, serial bus connections, power supplies) must have reinforced or double insulation from the mains network.

2.15 Serial port connections

For serial connections (FieldBus and BMS ports), the cables used must be suitable for the RS485 standard (shielded twisted pair, see the specifications in the following table).

Main device	Serial port	Lmax (m)	Wire/wire capacitance (pF/m)	Resistance on last device	Max secondary devices on bus	Data rate (bit/s)
IJ%	VCC	500	<90	-	1	600
PC (supervision)	BMS	500	<90	120 Ω	-	19200 (*)
PC (supervision)	TTL	2	<90	-	-	19200 (*)

Tab. 12.f

(*) modifiable by parameter.

⚠ Caution: connect the shield to the GND of the control, do not connect GND to earth. Connect a 120 Ω terminating resistor between the Tx/Rx+ and Tx/Rx- terminals on the last controller on the RS485 line.

2.16 Installation

For installation proceed as follows, with reference to the wiring diagrams:

- before performing any operations on the control board, disconnect the main power supply by turning the main switch in the electrical panel OFF;
- avoid touching the control board, as electrostatic discharges may damage the electronic components;
- the index of protection required for the application must be ensured by the manufacturer of the cabinet or by suitable assembly of the controller;
- connect any digital inputs, Lmax = 10 m;
- connect the actuators: the actuators should only be connected after having programmed the controller. Carefully evaluate the maximum ratings of the relay outputs as indicated in "Controller electrical and physical specifications";
- program the controller: see "User interface";
- for safety devices (e.g. circuit breakers), comply with the following requirements:
 - IEC 60364-4-41;
 - standards in force in the country;
 - connection technical requirements of the power company.

⚠ Caution: the following warnings must be observed when connecting the controllers:

- incorrect connection to the power supply may seriously damage the controller;
- use cable ends suitable for the corresponding terminals. Loosen each screw and insert the cable ends, then tighten the screws and lightly tug the cables to check correct tightness;
- separate as much as possible the probe and digital input cables from cables to inductive loads and power cables, so as to avoid possible electromagnetic disturbance. Never run power cables (including the electrical panel cables) and probe signal cables in the same conduits;
- do not install the probe cables in the immediate vicinity of power devices (contactors, circuit breakers, etc.). reduce the path of probe cables as much as possible, and avoid spiral paths that enclose power devices.

3. CONFIGURATION TOOLS

3.1 Spark: configuration and commissioning software

Spark is configuration software for laptops that provides the following functions:

- configure access and password levels;
- change parameter sets and create custom read/write lists to upload to the device;
- add languages and parameter descriptions;
- view the trends of physical quantities in real time, with the possibility to save data in Excel format.

In order to carry out the operations mentioned above, it is necessary to have a specific "workspace" file (file with .spark extension), which can be downloaded from ksa.carel.com.

Notice: the workspace is specific for each firmware version; the correct combination of file-controller firmware version is required for correct communication.

For the electrical connection, use the USB/RS485 converter CVSTDUMOR0 for models equipped with BMS port option.

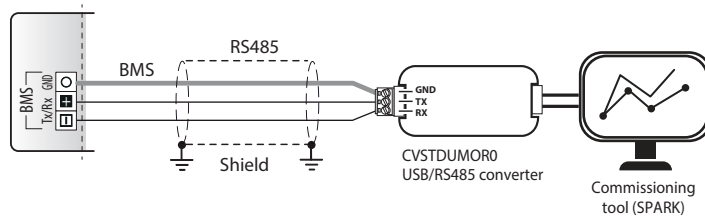


Fig. 3.a

For models without BMS port option, the USB/ID converter BXOPZIOWD0000 can be used, connecting to digital input ID2 and completing the specific procedure on Spark.

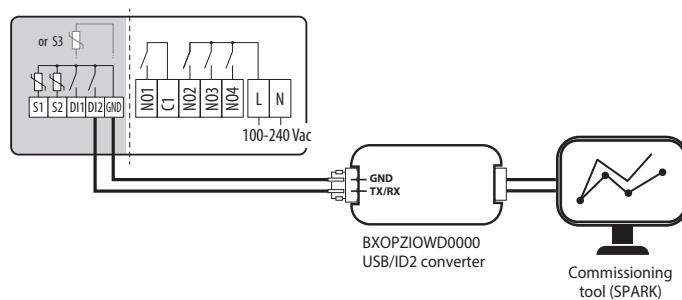


Fig. 3.b

3.2 Sparkly: command-line configuration and commissioning software

Sparkly is the command-line version of the configuration tool, and can be used for configuring and commissioning iJF. Contact Carel for support.

3.3 Applica app and Controlla

The Carel apps can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) or BLE (Bluetooth Low Energy). Supported devices: Android 7 or higher, and iOS 11 or higher; Bluetooth® 4.0 and higher.

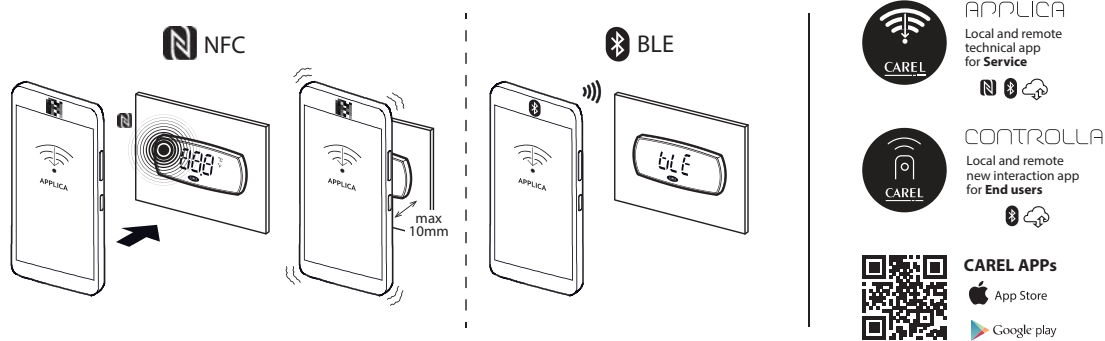


Fig. 3.c

Procedure (modify parameters):

- download the CAREL "Applica" or "Controlla" app from Apple Store or Google Play;
- (on the mobile device) enable NFC and/or Bluetooth communication and mobile data;
- open Applica (or Controlla);
- select NFC or Bluetooth® communication, depending on the model of iJF model;
- move the mobile device near to the user terminal, maximum distance 10 mm (for NFC only), so as to recognise the configuration;
- if using "Applica", select the profile and enter the password; if using "Controlla", the profile is selected as User by default and only the password is required; thus can be changed once having logged in;
- set the parameters as needed;
- move the mobile device near to the user terminal again to upload the configuration parameters (for NFC only).

(*) pre-assigned by the unit manufacturer to allow maintenance only by authorised service technicians, default "44". See the parameter table.



Notice:

- make sure NFC or Bluetooth have been enabled. Some smartphones may experience problems if location is not enabled.
- during Bluetooth® connection, the iJF user terminal is disabled and shows the message "bLE".

3.4 Applica Desktop

Applica Desktop is configuration software for laptops that provides the following functions:

- configure the controller;
- change parameter sets and create custom lists to upload to the device;
- view the trends of physical values in real time, with the possibility to save data in Excel format.

For the electrical connection, see "Spark: configuration and commissioning software"

3.4.1 NFC communication for split and HMI models

All iJF models are equipped with NFC memory, which can be used to set the parameters. Due to its operating characteristics, the NFC memory is always active, even when the device is turned off. However, there are limitations for setting the parameters on the SPLIT and HMI models using NFC, as shown in the table.

Model	Programmability via NFC	
	Controller off	Controller on
Panel	YES	YES
Split	NO	YES
HMI	NO	YES

Tab. 12.g



Notice:

- when the HMI is connected to the SPLIT controller, the NFC memory on the controller is disabled.
- If replacing the HMI, when first starting the iJF split controller the working parameters are written to the HMI NFC memory.

Communication with the NFC memory can be disabled at any time by setting parameter "nFE". If nFE = 0, writes to NFC memory are ignored by the controller.

4. USER INTERFACE

4.1 Introduction

iJF is available in panel versions with front mounting and built-in display, or in the split version with rear panel mounting, with or without HMI terminal. For rear panel mounting, however, a basic user interface is provided, comprising two status LEDs, while the front panel and remote terminal feature the display and keypad with backlit or non-backlit buttons (depending on the models) for carrying out some of the controller programming operations. The user interface display features three digits with sign for below-zero temperatures and decimal point, a buzzer for signalling alarms and nine icons. The terminal features wireless connectivity and an NFC (Near Field Communication) or Bluetooth interface (depending on the model) for interaction with mobile devices (on which the CAREL "Applica" app has been installed, available on Google Play for the Android operating system and on the Apple Store for iOS devices (Bluetooth only).



Notice: for simplicity, the set of parameters accessible from the user interface is a subset of all the parameters available via the Applica app.

The information available on the user terminal and in the Applica app may vary according to the type of profile, the password entered and the configuration parameters set by the manufacturer.

See the parameter table.



Notice: the user and service passwords can be changed directly by accessing the parameter list in the Applica app, and can contain up to 8 alphanumeric and special characters.

Code	Description	Def.	Min	Max	UOM	User	User terminal
PDM	Manufacturer password	44	0	999	-	M	NO
PDS	Service password	22	0	999	-	S	NO
PDU	User password	0	0	999	-	U	NO

Parameter /5 can be set to change the unit of measure of the values shown on the display, while parameter /6 selects whether or not to display the decimal point.



Notice: parameter /5 only affects the controller's display and not Applica and the configuration tool, which need to be set accordingly.

Code	Description	Def.	Min	Max	UOM	User
/5	Unit of measure: 0 = °C; 1 = °F	0	0	1	-	U
/6	Display decimal point (main screen only): 0 = Yes; 1 = NO	0	0	1	-	S

Parameter Hb can be set to enable or disable the buzzer (on models where featured).

Code	Description	Def.	Min	Max	UOM	User
Hb	Enable buzzer: 0 = disabled; 1 = enabled	1	0	1	-	U

Parameter /nE can be used to enable or disable navigation via the user terminal, while parameter BtE can be used to disable Bluetooth communication.

Due to its operating characteristics, the NFC memory is always active, while parameter nFE can be used to have the controller ignore writes to NFC memory.

Code	Description	Def.	Min	Max	UOM	User
/nE	Lock navigation 0 = Disabled; 1 = Enabled	0	0	1	-	M
BtE	Bluetooth communication 0 = Disabled; 1 = Enabled	1	0	1	-	M
nFE	Communication with NFC memory 0 = Disabled; 1 = Enabled	1	0	1	-	M

Parameters /Lb and /Sb can be set to change how the terminal behaves in standby; specifically, /Lb enables or disables the lighting on the status LEDs (icons), including ON/OFF, while /Sb enables or disables the lighting on the PRG button.

Code	Description	Def.	Min	Max	UOM	User
/Lb	Status LEDs on in standby (including ON/OFF): 0 = off; 1 = on.	0	0	1	-	M
/Sb	PRG button always ON in standby: 0 = off; 1 = on.	1	0	1	-	M

4.2 Models with user terminal or remote HMI

User terminal

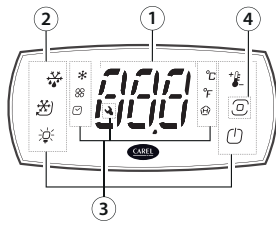


Fig. 4.a

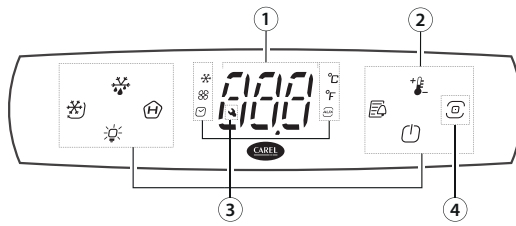


Fig. 4.b

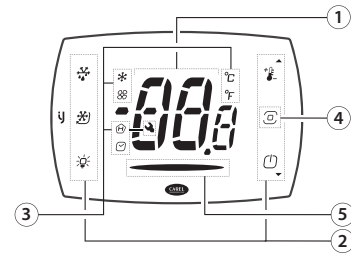


Fig. 4.c

Legenda:

1	Display
2	Icons/function buttons
3	Icons
4	Icon/PRG (Program) button*

- 5 The LED bar displays certain unit operating conditions based on the colour of the lights and whether they are on steady or flashing. The status can be as follows, in order of priority:
- on steady red: alarm active
 - bar off: unit OFF (if Bluetooth connection active, the message 'bLE' will flash).
 - bar off and BLE flashing: Bluetooth connection active; flashing white: connection to commissioning tool or keypad unlocked
 - on steady white: control active
 - on steady green: ECO mode



Notice:

- (*) the PRG button "Ⓞ" accesses the various programming menus; if the button is different, for example "❄️" or "🏠", contact the manufacturer for the specific manual.
- the user terminal can only be used to set the frequent (User) and (Service) parameters and display the value of the probes connected to iJF. The Service- and Manufacturer-level parameters are set using the Applica app or the configuration software, depending on the access profile. See the parameter table and the paragraph "Parameter categories visible on the user terminal";
- Parameter /t1 is used to choose the variable to be shown on the display during normal operation:
- Parameter /5 is used to change the unit of measure .
- Parameter /d6 is used to choose the value to be shown on the display when defrosting:

Code	Description	Def.	Min	Max	UOM	User	User terminal
/5	Unit of measure: 0 = °C; 1 = °F	0	0	1	-	U	YES
/6	Display decimal point: 0 = Yes; 1 = No	0	0	1	-	S	NO
/t1	Display on user terminal: 0 = Not configured 1 = value of S1 2 = value of S2 3 = value of S3 4 = value of S4 5 = value of S5 6 = value of S1H 7 = value of S2H 8 = not available 9 = virtual probe mitigated based on /3 10 = virtual probe 11...14 = not available 15 = actual control set point	9	0	15	-	S	NO
d6	Display on terminals during defrosts: 0 = temperature alternating with 'dEF'; 1 = freeze display; 2 = 'dEF'	1	0	2	-	U	NO

Keypad

Icon/button	Description	On	Flashing
⬆️	Set point/Up arrow	• Increase value • Scroll menu • Direct access to change set point	-
Ⓞ	PRG (Program)	Pressed briefly: enter menu branch save value and return to the parameter code Pressed and held (3 s): enter programming mode return to the previous level	-
⬇️	On-Off/ Down arrow	Unit ON Decrease value Scroll menu Switch unit on/off	-
❄️	Defrost	Active/stop	Awaiting/start
🔄	Continuous cycle	Active/stop	Awaiting/start
💡	Lights	Active/stop	Activation
🏠	HACCP	HACCP alarms present Direct access to HACCP menu	-
📋	Alarm log	Logged alarms present Direct access to the alarm log menu	-
AUX	Auxiliary output	Active	-
❄️	Compressor	Active	Awaiting
🌀	Evaporator fan	Active	-
🕒	Clock	Scheduler active	-

Icon/button	Description	On	Flashing
°C	°C	Unit of measure °C	-
°F	°F	Unit of measure °F	-
	Service Maintenance	Active alarms	-

Tab. 4.a

Notice: during navigation, the buttons will be on/flashing only if enabled.

Notice: standard or configured iJF models may have alternative buttons/icons to the defaults, as illustrated in the appendix under the paragraph "Alternative buttons and icons".

4.2.1 Navigation

The figure shows how to navigate between the screens on the display; specifically, the grey part shows programming mode for setting the parameters. The screens and functions of the buttons available on each screen are described in detail below.

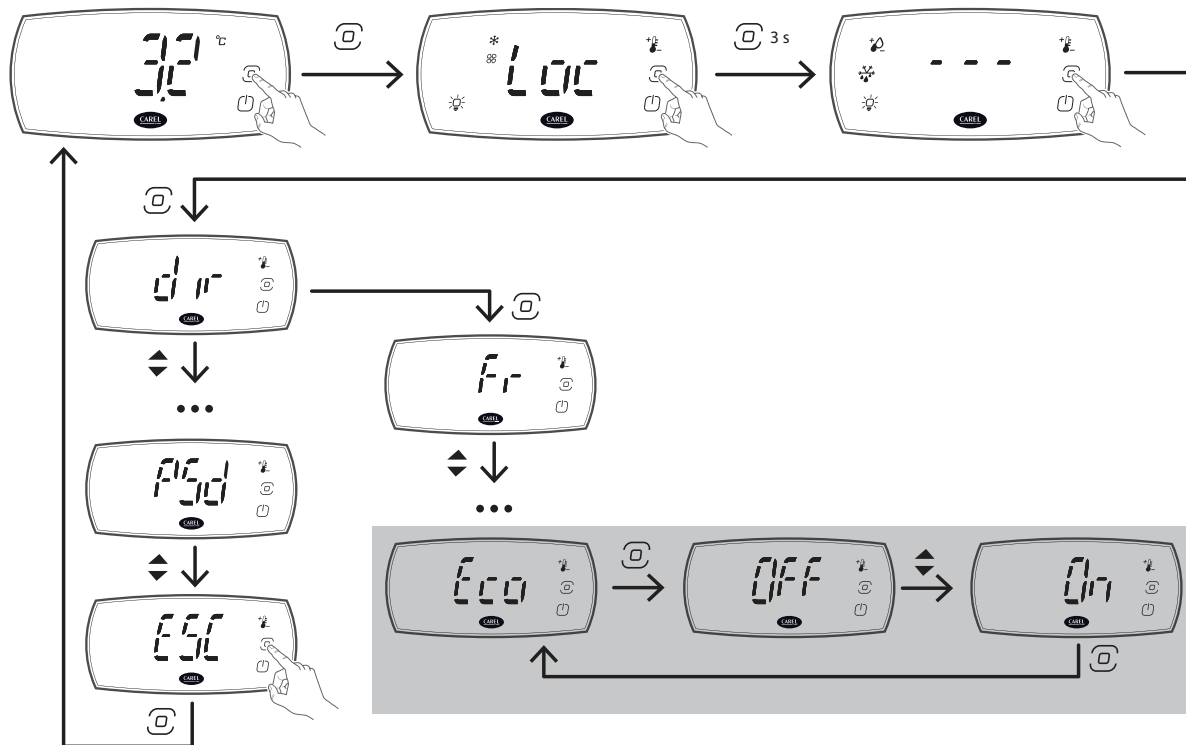


Fig. 4.d

4.2.2 Screens

The possible states of the terminal are shown in the table below.

Status Standby	Status Display active loads	Status Direct activation of loads and functions from the keypad	Status Programming menu
Description The display shows the main value, alternating with any alarms and signals	Description The terminal shows any active loads, the keypad is locked	Description The loads can be activated or deactivated and the direct functions accessed from the keypad	Description Scroll the programming menu using the arrow buttons


Status

Parameter programming/display values

Description

Set the parameters using the arrow buttons or display read-only values


Status

Bluetooth connection

Description

The display is disabled, as the controller is connected to an app via Bluetooth Low Energy

Standard display

At power on, the user terminal briefly shows the firmware version and then the standard display. The standard display depends on the setting of parameter /t1:

- control temperature (control probe temperature or calculated based on two probes, see "Functions");
- value of one of the probes connected to the analogue inputs;
- control/virtual probe;
- temperature set point.



Notice: if there is an active alarm, press any button to mute the buzzer.

Display active actuators/functions and direct activation of actuators/functions

When pressing any button, the display shows the message "Loc" and the icons corresponding to the currently-active actuators/functions come on to indicate the status of the unit. On pressing PRG for 3 s, the display shows 3 dashes in sequence and enters actuator/function direct activation mode. In this mode:

- the buttons that are on steady indicate that the corresponding actuator/function is active, and can be deactivated by pressing the button;
- the buttons that are flashing indicate that the actuator/function is not active and can be activated by pressing the button;

When pressing the button, the display shows information on the status of the selected actuator/function (On/Off).

Icon	iJF small	iJF large	iJF XL	On/Off
	.	.	.	Lights
	.	.	.	Continuous cycle
	.	.	.	Defrost
	.	.	.	Direct access to set point
	.	.	.	Unit On/Off
	-	.	.	Direct access to HACCP alarms
	-	.	.	Direct access to alarm log

Tab. 4.b



Notice: if no button is pressed, after 7 seconds the terminal will automatically return to the standard display.

4.2.3 Programming mode

In actuator/function direct activation mode, pressing PRG enters programming mode, where the unit's main operating parameters can be set. To access the Service parameters, go to the "PSd" menu item (see the table below) and enter the password (default 22). The user terminal only provides access to the basic configuration parameters, such as direct functions and active alarms without password protection, or, with password protection (Service).



Notice: in the default settings the user password is set to 0 and is not required when entering programming mode; if the password has been set to a value other than 0, this needs to be entered to access programming mode. Access to the Service level is also available by entering the default password 22.



Notice: for optimisations use Applica, which provides access to all of the parameters available for the corresponding profile.

Parameter categories visible on the user terminal

The menu items available and parameters visible on the user terminal are listed below. The menu branches/parameters protected by the Service password (default 22) are shown in **bold italics**.

dir (*) (Direct functions)	CtL (Control)	Pro (Display probes)	dEF (Defrost)	HcP (HACCP)	CnF (Configuration)	ALM (Alarms)	PSd	ESC
See the following table	St	/5	dl	Htd	Hb	AH/AHA		
	rd	/6	dP1	HAn	H0	AL/ALA		
	Sth	/t1	dt1	HFn	H10	Ad		
	rdh	ESC	dP2	rHP	H11	Add		
	HU		dt2	ESC	ESC	rSA		
	rM		d6			rAL		
	rt (**)		d8			ESC		
	IS (**)		ESC					
	rSC							
	ESC							

Tab. 4.c

(*) The visibility of the direct functions can be set using the corresponding parameters, and depends on whether the functions are available on the controller.

(**) Visible if there is at least one configuration loaded on the controller (see "Appendix")

Direct functions

Acr.	Descrizione	Visibilità	Acr.	Descrizione	Visibilità
Auc	Activate auxiliary output	DOC > 0	rH	Maximum value of control probe	rM = 1
BtE	Enable Bluetooth	if present	rL	Minimum value of control probe	rM = 1
CnC	Activate continuous cycle	cc > 0	rtL	Reset min/max control probe	rM = 1
dFM	Start defrost		SAh	Display alarm log	
Ec1	Load embedded configuration 1	IS_max=2 (disabled by default via Fct_Ec1_disable)	Sc	Condenser probe	/Fo > 0
Ec2	Load embedded configuration 2	IS_max=2 (disabled by default via Fct_Ec2_disable)	Sd	Defrost probe	/Fb > 0
Eco	Activate Eco mode		SHu	Humidity probe	/FP > 0
Fr	Firmware version		Sm	Outlet probe	/Fa > 0
HAC	Direct access to HACCP menu		SPr	Product probe	/FR > 0
HL	Dim lights	/AF > 0	Sv	Virtual probe	
HU	Set humidity level	F2 = 3	St	Set control set point	
Lht	Activate lights	DOE > 0	Sth	Set humidity set point	/FP > 0
OnF	Unit ON/OFF				

Tab. 4.d

Procedure

To navigate the menu tree, use the following buttons:

- UP and DOWN to navigate the menu and set the values;
- PRG to enter the menu items and save the changes made;
- Select the menu item or ESC to return to the previous branch.

Example of how to set parameter St (set point):



4. Wait for the standard display to be shown;



5. Press PRG to enter display active actuators/functions mode



6. Press PRG 3 s to access actuator/function direct activation mode



7. Press PRG to enter programming mode; the UP and DOWN buttons will flash and the first category of parameters dir (=direct functions) will be displayed;



8. Press DOWN until reaching the parameter category Ctl (=control)



9. Press PRG to display the first menu item: St (=set point). Press PRG to display the parameter value



10. Press UP/DOWN to modify the value



11. Press PRG to save the setting and return to the menu
Caution: if the PRG button is not pressed, the new setting will not be saved.



12. Press UP/DOWN to select ESC and press PRG to return to the parameter categories;



13. Press DOWN to move to the next category and follow steps 6 to 9 to set the other parameters;



14. Once the settings have been made, to exit the categories select ESC and press PRG.

➡ **Notice:** if no button is pressed, after 20 seconds the terminal will automatically return to the standard display.

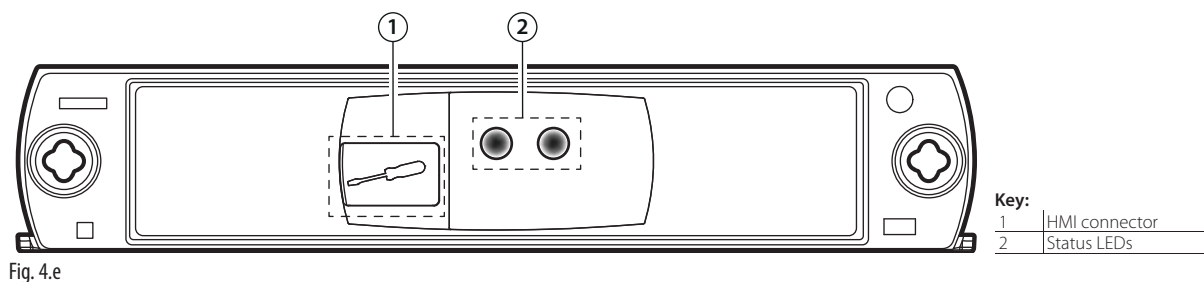
Mobile device and PC

The controller can be configured via NFC (Near Field Communication) or Bluetooth from a mobile device (smartphone, tablet) using Applica, or via serial connection (laptop) using the configuration tools. The controller can be programmed according to the profile used for access to Applica or Spark, with different parameter visibility depending on the rights associated with each profile (User, Service, Manufacturer). See "Configuration tools".

➡ **Notice:** when changing the parameter settings, it is recommended to power the controller off and on again to realign any timings in progress. Caution: wait at least 5 seconds after changing the parameter settings before powering the controller off, to allow the data to be correctly saved to the memory.

4.3 SPLIT models without user terminal

For Split mounting versions, a basic user interface is provided, comprising two status LEDs.



The meaning of the status LEDs is described in the table below.

Red LED	White LED	No. flashes	Description	Red LED	White LED	No. flashes	Description
		-	Unit OFF			4	Defrost alarms: Ed1, Ed2
		1	Unit ON			5	Pumpdown alarms: Pd, LP, AtS
		2	- Defrost active (dEF) - Continuous cycle active - ECO mode			6	Parameter configuration alarms: EE, EF
		1	Probe alarms: rE, E1, E2, E3, E4, E5			7	Refrigerant leak alarm: rSF
		2	Temperature alarms: LO, HI, Afr, cht, CHt, dor			8	Clock alarm: Etc
		3	Alarms from external contact: IA, dA			9	HACCP alarms: HA, HF

Tab. 4.e

5. COMMISSIONING

Once the electrical connections have been completed (see "Installation") and the power supply has been connected, the operations required for commissioning the controller depend on the type of interface used, however essentially involve setting the so-called initial configuration parameters. The configuration procedure can be run on the user terminal, a mobile device (with the Applica app), or configuration tool. The parameters used for commissioning are shown in the Parameter table.



Caution:

- the parameters that can be set on the user terminal and in the Applica app may vary according to the rights assigned to the access profile, defined by the manufacturer. Therefore, not all of the following parameters may be visible or modifiable.
- Some operations can only be performed using Applica or the configuration tools, for example, configuring the temperature probe type or setting the date/time and time bands

Commissioning parameters

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
St	Ctl	Temperature control set point	50/122	r1	r2	°C/°F	U
/5	Pro	Unit of measure: 0 = °C; 1 = °F	0	0	1	-	U
/6	Pro	Display decimal point (main screen only): 0 = Yes; 1 = NO	0	0	1	-	S
/t1	Pro	Display on user terminal: 0 = Not configured 1 = value of S1 2 = value of S2 3 = value of S3 4 = value of S4 5 = value of S5 6 = value of S1H 7 = value of S2H 8 = not available 9 = virtual probe mitigated based on /3 10 = virtual probe 11 to 14 = not available 15 = actual control set point	10	0	16	-	S
d6	dEF	Display during defrosts: 0 = temperature alternating with dEF; 1 = freeze display; 2 = dEF	1	0	2	-	S
dl	dEF	Maximum interval between defrosts	8	0	240	h	S
dP1	dEF	Maximum defrost duration	45	1	240	min	S
AH	ALM	Relative high temperature alarm threshold	0	0	555/999	Δ °C/°F	S
AL	ALM	Relative low temperature alarm threshold	0	0	200/360	Δ °C/°F	S
Hb	CnF	Enable buzzer: 0 = disabled; 1 = enabled	1	0	1	-	U
/P1	-	Configuration of probes S1, S2, S3, S4: 0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.	2	0	4	-	S
/P2	-	Configuration of multifunction input S3/ ID1: 0, 1, 2, 3, 4 = S3; 5 = ID1.	5	0	5	-	S

Tab. 5.a

(*): U = User; S = Service; M = Manufacturer (OEM).

5.1 Description of the initial configuration parameters

St: temperature control set point

Parameter St is used to set the temperature control set point.

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
St	Ctl	Temperature control set point	50/122	r1	r2	°C/°F	U

rd: temperature control differential

Parameter rd is used to set the temperature control differential (see "Control").

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
rd	Ctl	Temperature control differential	2.0/3.6	0.1/0.2	99.9/179.2	Δ °C/°F	S

/5, /6, /t1: display on user terminal

Parameters /5, /6 and /t1 are used to set the display shown on the user terminal. Parameter /5 sets the unit of measure °C or °F, parameter /6 sets whether or not the decimal point is displayed, and parameter /t1 sets the value shown on the display. By default, the mitigated virtual probe is shown in °C and with decimal places.

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
/5	Pro	Unit of measure: 0 = °C; 1 = °F	0	0	1	-	U
/6	Pro	Display decimal point (main screen only): 0 = Yes; 1 = NO	0	0	1	-	S
/t1	Pro	Display on user terminal: 0 = Not configured 1 = value of S1 2 = value of S2 3 = value of S3 4 = value of S4 5 = value of S5 6 = value of S1H 7 = value of S2H 8 = not available 9 = virtual probe mitigated based on /3 10 = virtual probe 11 to 14 = not available 15 = actual control set point	9	0	15	-	S

d6: display on user terminal during defrosts

Parameter d6 is used to set the display shown on the user terminal when defrosting, chosen between the value selected by parameter /t1 alternating with the message 'dEF', the last value shown before defrosting, or 'dEF' alone on steady. If d6 = 1, the normal display resumes when the control temperature reaches the set point, the temperature displayed is lower than the value locked on the display or, in any case, after the time set as "bypass alarm after defrosting" (d8). By default, the value displayed before defrosting is shown (d6=1).

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
d6	dEF	Display during defrosts: 0 = temperature alternating with dEF; 1 = display locked; 2 = dEF	1	0	2	-	S

dl, dP1: defrost parameters

Parameter dl is used to set the maximum possible interval between defrosts, while parameter dP1 is used to set the maximum defrost duration. See "Functions" for more details.

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
dl	dEF	Maximum interval between defrosts	8	0	240	h	S
dP1	dEF	Maximum defrost duration	45	1	240	min	S

Hb: enable buzzer

Parameter Hb is used to enable or disable the buzzer built into the controller; the buzzer is enabled by default.

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
Hb	CnF	Enable buzzer: 0 = disabled; 1 = enabled	1	0	1	-	U

/P1, /P2: Probe types

Probes S1, S2, S3, S4 can be configured as NTC, PTC, PT1000, NTC-HT or NTC-LT. Parameter /P1 is used to set the type of temperature probe.

Parameter /P2 is used to choose whether the multifunction input S3/DI1 is configured as a temperature probe (and in this case it will be same type set by parameter /P1) or as a digital input. Parameters /P1 and /P2 can only be set using Applica or configuration tool.

 **Notice:** the temperature probes must all be the same type.

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
/P1	-	Configuration of probes S1, S2, S3, S4: 0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.	2	0	4	-	S
/P2	-	Configuration of multifunction input S3/ DI1: 0, 1, 2, 3, 4 = S3; 5 = DI1.	5	0	5	-	S

AH/AL: relative high and low temperature alarm thresholds

Parameters AH and AL are used to set the thresholds relative to the set point for the high and low temperature alarms. For details on the high and low temperature alarms, see "Alarms".

Par.	Menu	Desc.	Def.	Min	Max	UOM	User
AH	ALM	Relative high temperature alarm threshold	0	0	555/999	Δ °C/°F	S
AL	ALM	Relative low temperature alarm threshold	0	0	200/360	Δ °C/°F	S

5.2 Set date/time and time bands

The smartphone's date and time can be used to set the controller's date/time, via the drop-down menu on the side in Applica, selecting "settings-->device-->set date/time".

Procedure for setting the time bands:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering your profile credentials;
3. open the "Scheduler" section;
4. define the time bands for the different days of the week;
5. apply the set schedule to the controller (upload button at the top-right for connection via NFC).

 **Notice:** 8 daily time bands can be configured by setting parameters tS1, tE1 to tS8, tE8.

 **Notice:** always check the correct date and time setting for using the logs and other functions that refer to the RTC.

The correct setting of date and time is necessary for the operation of some features of the iJF control:

- activation of the light or auxiliary output (par. H8) according to the set time bands;
- management of defrosts by time bands;
- monitoring and recording of a temperature;
- counting of operating hours and activation of the maintenance alarm when a settable threshold is exceeded;
- recording of periodic and event logs.

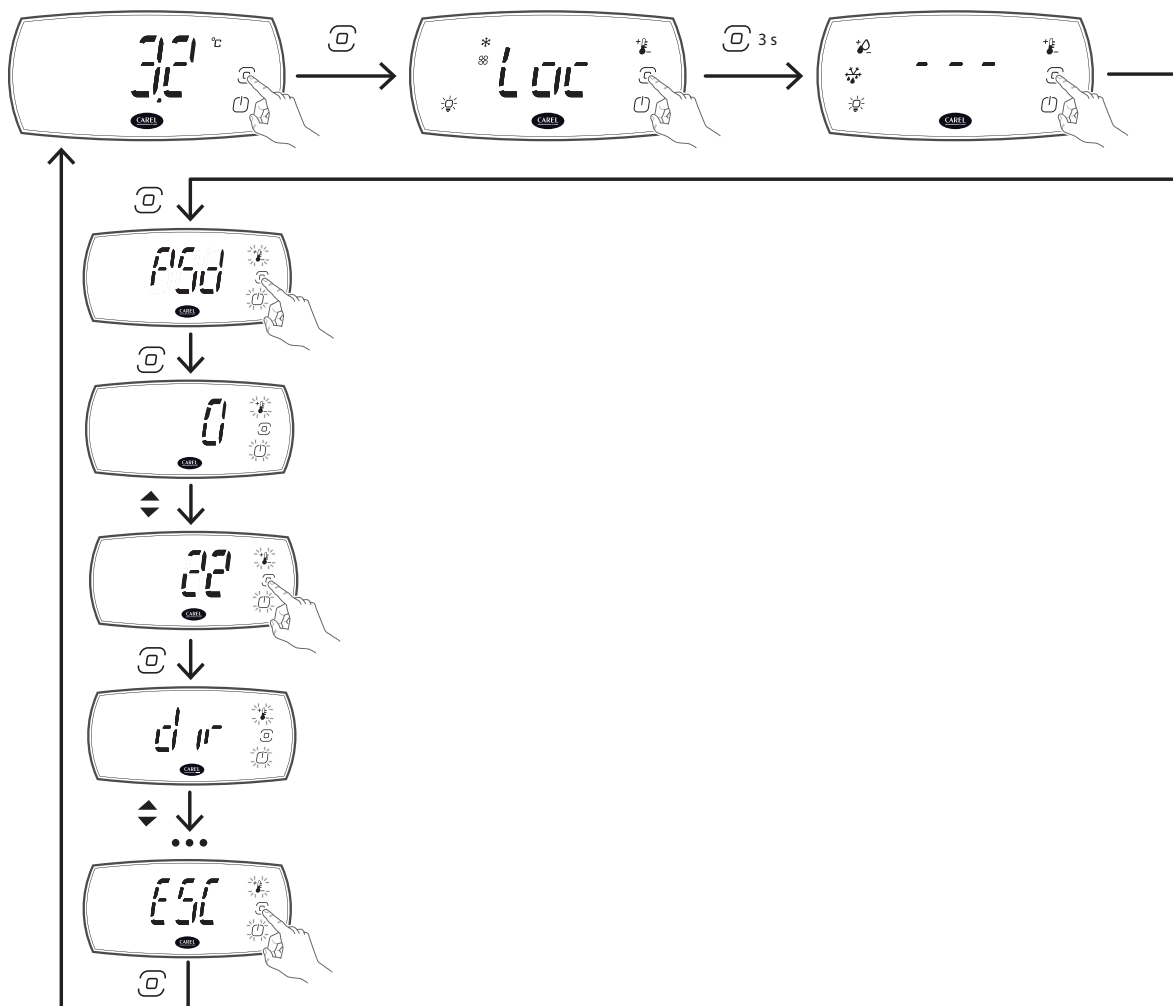
 **Notice:** using parameter dl it is possible to perform cyclic defrosts every "dl" hours, even in the absence of the RTC clock.

 **Caution:** a change in the time set in the iJF control exceeding 140 minutes causes the loss of the stored logs.

Once having completed the installation, configuration and programming operations, after commissioning the controller check that:

- **Caution:** at the end of the commissioning procedure, the alarm log can be reset via the Applica app. See “Alarms”.

If the user password is changed from the value 0 following the PSd password prompt, the desired access profile password needs to be entered (user or service), specifically:



40 | Commissioning

Resetting the parameters to the factory values using parameter "rSC" restores the service and user passwords to the default values.

To access the device via the APPLICA mobile or desktop application, the user and service passwords need to be entered. Changing the value of parameters PDU and PDS changes the passwords to be entered when connecting to the device via these apps.

To access the device via the CONTROLLA mobile app, the user password needs to be entered. Changing the value of parameter PDU changes the password to be entered when connecting to the device via this app.

5.4.2 Restrictions on access for setting the parameters

In order to avoid undesired changes to the parameters by third parties, it is strongly recommended to restrict access to the parameters after the device has been commissioned. This recommendation applies particularly to the NFC and Bluetooth connections. In fact, these do not need to be near the device for an extended time and thus can expose it to malicious attacks.

Parameter /nE can be used enable or disable navigation via the user terminal; in particular, the following values can be set:

0 = navigation via user terminal enabled (default value);

1 = navigation via user terminal disabled.

Due to its operating characteristics, the NFC memory is always active; parameter nFE can be set to ensure that any NFC memory writes are ignored by the controller; in particular, the following values can be set:

0 = copy parameters via NFC disabled;

1 = copy parameters via NFC enabled (default value).

Parameter BtE can be used to disable Bluetooth™ communication, if available as a hardware option; in particular, the following values can be set:

0 = Bluetooth™ communication disabled;

1 = Bluetooth™ communication enabled (default value).

5.5 Upgrading the device software

When the software is upgraded, certain parameters may be reset to their default values. The following procedure describes how to perform a firmware upgrade while maintaining the configuration set on the device. The software can be upgraded using the following tools:

- Applica app on a mobile device (smartphone or tablet) via Bluetooth connection
- Applica desktop using a personal computer via RS485 connection

To connect the device to the configuration tools, see "Configuration tools".

5.5.1 Upgrading the device via APPLICA

To complete the upgrade correctly, proceed as follows:

1. connect to the device entering the password for the desired profile (preferably OEM);
2. save the configuration to the mobile device;
3. export the configuration:
 - select "share" in the left menu
 - save the configuration to a folder on the mobile device
4. update the device by selecting the .pack file previously downloaded or indicated by the firmware update procedure
5. import the previously saved configuration
6. apply the configuration

Steps 3 and 5 can be skipped if using the APPLICA app version 1.11.2376 or higher; starting from this version, the configurations are also visible between different device firmware versions.

5.5.2 Upgrading the device via APPLICA DESKTOP/SPARK

To complete the upgrade correctly, proceed as follows:

1. connect to the device entering the password for the desired profile (preferably OEM);
2. save the existing configuration:
 - select the "Configurations" menu
 - select the "New" > "New configuration" button to create a new configuration and assign it a name
 - select the "Edit" > "Applica live values" button to load the parameter values currently present on the device
 - select the "File" > "Export" button to save the configuration to a folder on your personal computer
3. select the "Target" menu and upgrade the device via the "Download" button and selecting the previously downloaded .pack file
4. import the previously saved configuration by selecting "File" > "Import"
5. apply the configuration by selecting "Apply" > "Apply configuration".

For further details on creating configurations, see the "Configurations" section.

6. FUNCTIONS

The following paragraphs describe how to implement a detailed parameter configuration.

The parameters described below can be configured via the Spark configuration software or the Applica app.

⚠ Caution: the information available in Applica may vary according to the password set and the configuration defined by the unit manufacturer, and consequently not all of the parameters shown may be visible or modifiable. For details on the parameters and the related access levels, see the "Parameter table".

6.1 ON/OFF

The unit can be switched on or off in different ways: user interface (button or parameter), supervisor and digital input.

Parameter On is used to switch the controller ON/OFF. If there is a digital input configured as remote ON/OFF, this has higher priority than the supervisor command or the On parameter.

P/N	Desc.	Def.	Min	Max	UOM	User	User terminal
DIF	Assign remote ON/OFF digital input - see DIA	0	0	4	-	U	NO
On	ON/OFF command 0= OFF; 1 = ON.	1	0	1	-	U	YES

In this operating mode, the display shows the standard display set by parameter /t1, alternating with the message "OFF".

Functions enabled/disabled in OFF status

Function	Enabled	Disabled
Compressor control (off and pump down valve closed)		●
Dead band control		●
Auxiliary compressor control with and without rotation		●
Defrost		●
Evaporator fan control		●
Humidity control		●
Continuous cycle		●
Condensing fan control (if enabled)		●
Temperature monitoring	●	
Logs	●	
Low temperature alarm LO		●
High temperature alarm HI		●
Immediate alarm from external contact IA		●
Delayed alarm from external contact dA		●
Defrost ended due to timeout alarm Ed1, Ed2		●
Pump down ended after maximum time alarm Pd		●
Low pressure alarm from external contact LP		●
Autostart in pump down alarm AtS		●
High condenser temperature warning and alarm cht, CHt	●	
Open door alarm dor		●
Frost protection alarm AFr		●
Type HA and HF HACCP alarm	●	
Buzzer (off) and alarm relay (non-alarm status)		●
HACCP control		●
Defrost according to scheduled time bands		●
Timed defrost (timer "dl" updated)		●
Defrost from digital input (if enabled)		●
Defrost from keypad and supervisor		●
High and low power supply voltage alarm EHI and ELO		●
Generic alarm with high threshold GHI and GLO		●
Refrigerant leak alarm rSF	●	
Maintenance request SrC		●
Operating error UFC and VCC communication error COM		●
Parameter setting and display	●	
Auxiliary relay on/off	●	
Autostart compressor in pump down (if enabled)	●	
Door switch limited to light management	●	
Control probe error alarm rE	●	
Probe error alarm E1, E2, E3, E4	●	
Clock not updated (if featured) alarm Etc	●	
Configuration not terminated correctly alarm SF	●	
Configuration write error CE	●	
Light or aux on/off based on scheduled time bands		●
Set point changed based on scheduled time bands	●	

Tab. 6.b

📌 Notice: in Off status, the defrost interval dl is always updated, in order to maintain the cyclical nature of this interval. If a defrost interval expires when the unit is off, the event is recorded and, when the unit is switched on, a defrost request is generated.

The transition from On to Off occurs as follows:

- the compressor protection times are observed;
- pump down is performed (if enabled);
- defrosting is forcibly terminated and will not resume when switching On;
- the continuous cycle is forcibly terminated and will not be resumed when switching On.

The transition from Off to On occurs as follows:

- the compressor protection times are observed;
- defrosting is not performed at power-on (if enabled), this in fact refers to power-on;
- the compressor and fan delay at power-on c0 is not set, and refers to power-on.

6.2 Inputs and outputs

On the panel models, the iJF controller has a maximum of 3 analogue inputs, 2 digital inputs and 1 multifunction input. In addition, on some models, an additional analogue input is available for connecting a humidity probe. iJF has a maximum of 6 digital outputs, and on some models a maximum of 2 analogue outputs. The HMI models have a maximum of 1 analogue input, 1 digital input and 1 multifunction input, in addition to those available on the connected panel version. See the description of the terminals in "Description of the terminals".

NTC, PT1000, PTC, NTC HT or NTC LT temperature probes can be connected to the analogue inputs; all probes must be the same type, except for any connected to the HMI terminal, which can only be NTC. The analogue outputs are VCC by frequency (PWM) or 0-10 V and are independently configurable. See the parameter table.

Analogue inputs and outputs

Model	Code	Probes					Active 0 to 5 V ratiometric	Outputs (Y1, Y2)	
		Passive						PWM	0...10 Vdc
		NTC (-50T90°C)	Pt1000 (-60T120°C)	PTC (-50T150°C)	NTC HT (-40T150°C)	NTC LT (-80T105°C)			
SMALL, panel o split	IJ**SA*****	YES	YES	YES	YES	YES	NO	NO	NO
	IJ**SA**06****	YES	YES	YES	YES	YES	NO	YES	YES
	IJ**SA**07****	YES	YES	YES	YES	YES	YES	NO	NO
SMALL, HMI LARGE, panel o split	IJ*HSA*****	YES	NO	NO	NO	NO	NO	NO	NO
	IJ**LA*****	YES	YES	YES	YES	YES	NO	NO	NO
	IJ**LA**06****	YES	YES	YES	YES	YES	NO	YES	YES
	IJ**LA**07****	YES	YES	YES	YES	YES	YES	NO	NO
	IJ*HLA*****	YES	NO	NO	NO	NO	NO	NO	NO
	IJ**XA*****	YES	YES	YES	YES	YES	NO	NO	NO
LARGE, HMI XL panel	IJF*VA*****	YES	YES	YES	YES	YES	NO	NO	NO
	IJF*XA**06****	YES	YES	YES	YES	YES	NO	YES	YES
	IJF*XA**07****	YES	YES	YES	YES	YES	YES	NO	NO
	IJF*VA**06****	YES	YES	YES	YES	YES	NO	YES	YES
	IJF*VA**07****	YES	YES	YES	YES	YES	YES	NO	NO
	IJFHXA0*00****	YES	NO	NO	NO	NO	NO	NO	NO
HMI XL	IJFHVA0*00****	YES	NO	NO	NO	NO	NO	NO	NO

Tab. 6.c

6.2.1 Probes (analogue inputs)

Analogue input	Small / XL				Large				HMI Small / XL		HMI Large	
	S1	S2	S3		S1	S2	S3	S4	S1H		S1H	S2H
Parameter for type of probe	/P1	/P1	/P2		/P1	/P1	/P2	/P1	/P7		/P7	-
0: PT1000	●	●	●		●	●	●	●				
1: PTC	●	●	●		●	●	●	●				
2: NTC	●	●	●		●	●	●	●	●		●	●
3: NTC-LT	●	●	●		●	●	●	●				
4: NTC-HT	●	●	●		●	●	●	●				
5: Digital input				●					●		●	

Tab. 6.d

Caution: for the maximum current that can be supplied to the ratiometric probes, see the Technical specifications table.

To assign the function to each physical probe, configure parameters /FA, /Fb, ... /FR. See the parameter table.

Probe	Par.	Probe	Par.	Probe	Par.
Outlet (Sm)	/FA	Auxiliary temperature 1 (Saux 1)	/FG	Condensing temperature	/Fo
Defrost (Sd)	/Fb	Auxiliary temperature 2 (Saux 2)	/FH	Ambient humidity	/Fp
Intake (Sr)	/Fc	Ambient temperature	/FI	Frost protection temperature	/Fq
Defrost probe 2 (Sd2)	/FF	Glass temperature	/FM	Product temperature	/FR

Tab. 6.e

Example of probe configuration.

To associate a function with a physical probe, set the value of the corresponding parameter /Fx to the value corresponding to the probe, as shown in the following table. For example, to assign the outlet temperature to probe S1, set parameter /FA to 1.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
/FA	Outlet probe configuration: 0: Disabled - 1: S1 - 2: S2 - 3: S3 - 4: S4 - 5: S5 - 6: S1H - 7: S2H	1	0	7	-	U	No

The default configuration for assigning the control probes is as follows:

- S1 = Outlet probe (Sm);
- with the default settings, this probe corresponds to the virtual control probe Sv.

The default configuration also sets these three probes as standard CAREL NTC. However, other types of probes can be connected by setting parameter /P1.

**Notice:**

- the configuration /FA = 0 and /Fc = 0 will cause the 'rE' alarm (control probe alarm), as it means that no control probe is associated.
- For a description of the probe functions, see the following paragraphs.

Calibration (parameters /cA to /cr)

iJF allows the possibility to calibrate values read by the probes associated with the various functions set by parameters /FA to /FR. In particular, parameters /cA to /cy are used to increase or decrease the values read by the probes connected to the analogue inputs, consistently with the unit of measure.



Caution, HACCP: this modification may not be allowed by HACCP procedures as it alters the measured value. Verify that you have authorisation and record the changes where required.

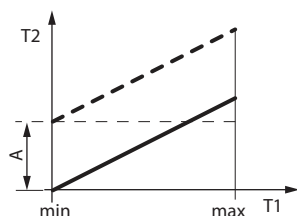


Fig. 6.a

Description

T1	Temperature read by the probe
T2	Calibrated temperature
A	Calibration offset
min, max	Field of measurement

/2: Analogue probe measurement stability and refresh display

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
/2	Analogue probe measurement stability: 0 = probe reading not delayed; ... 9 = maximum probe reading delay	5	0	9	-	M	No
/3	Display probe value: 0 = disabled; 1 = fast update; ... 15 = slow update.	0	1	15	-	M	No

Parameter /2 defines the coefficient used to stabilise the temperature measurement. Low values assigned to this parameter allow a prompt response of the sensor to temperature variations; the reading however become more sensitive to disturbance.. High values slow down the response, but guarantee greater immunity to disturbance, that is, a more stable, precise and filtered reading.

Parameter /3 is used to refresh the probe readings displayed; low values of /3 mean the display is refreshed quickly, high values mean it is refreshed slowly.

/3	Display delay	/3	Display delay	/3	Display delay	/3	Display delay
0	Disabled	4	20 s	8	50 s	12	105 s
1	5 s	5	25 s	9	60 s	13	120 s
2	10 s	6	30 s	10	75 s	14	150 s
3	15 s	7	40 s	11	90 s	15	180 s



Note: parameter /3 only affects the display of the probe readings and not the value used for control.

6.3 Digital inputs

iJF manages up to 2 physical digital inputs and 1 multifunction input on the PANEL and SPLIT models, and up to 1 additional digital input and 1 multifunction input on the HMI models. See "Installation". To associate an input to each available function, set parameters DIA, DIb, ... DIr to the value relating to the physical or virtual digital input. See the parameter table.

Digital input functions

Digital input assignment for:	Par.	Contact (*)	
		Open	Closed
immediate external alarm	DIA	Alarm active	Alarm not active
delayed external alarm	DIb	Alarm active	Alarm not active
enable defrost	DIc	Defrost not enabled	Defrost enabled
start defrost	DI d	No effect	Start defrost
door switch with stopping control	DIe	Door open	Door closed
remote ON/OFF	DIF	OFF	ON
curtain switch/light	DIG	Day status	Night status (ECO mode)
start/stop continuous cycle	DIH	Stop continuous cycle	Start continuous cycle
change set of parameters	DIo	Set 1	Set 2
door switch without stopping control	DIP	Door open	Door closed
generic alarm function	DIS	Alarm active	Alarm not active
low pressure switch	DIt	Alarm active	Alarm not active
auxiliary input	DIU	Auxiliary input deactivated	Auxiliary input activated

Tab. 6.f

(*) Default configuration with parameters rIA, rIB, ..., rIU = 0; by setting the corresponding parameters rIA, rIB, ..., rIU = 1, the contact logic is reversed and therefore the meanings of open/closed are also reversed.

Example of digital input configuration.

To associate a function with a digital input, set the value of the corresponding parameter DIx to the value corresponding to the input, as shown in the following table. For example, to assign the immediate external alarm to input ID1, set parameter DIA to 1.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIA	Immediate external alarm configuration: 0: Disabled - 1: DI1 - 2: DI2 - 3: DI1H - 4: DI2H	1	0	4	-	U	No

The default configuration does not include an assigned input.

If the opposite logic to the default setting is required, or to correct a wiring error, the logic of the functions associated with the digital inputs using parameters rIA, rIB, ... rIU can be reversed.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
rIA, rIB, ..., rIU	Reverse digital input logic	0	-	0	1	U	No

Immediate external alarm (par. DIA)

Activation of the alarm causes:

- message 'IA' shown on the display and the "Service" icon comes on;
- activation of the buzzer (see par. Hb);
- activation of the alarm relay (see par. DOB);
- deactivation of the compressor output (see par. DOA).



Notice: activation of the external alarm shuts down the evaporator fan only if this follows the status of the compressor output, as set for parameter /F2. The compressor is shut down immediately due to an external alarm, and consequently the compressor ON time is ignored (parameter c3).

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIA	Assign digital input for immediate external alarm. 0: Disabled - 1: DI1 - 2: DI2 - 3: DI1H - 4: DI2H	0	0	4	-	U	No

Delayed external alarm (par. DIb)

The behaviour of this alarm is the same as for the immediate external alarm, with a delay in activation set by parameter A7. If set to 0, the alarm is signal-only.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIb	Assign delayed external alarm digital input - see DIA	0	0	4	-	U	No

Enable defrost (par. DIc)

Used to disable any defrost requests. When the contact is open, all defrost calls are ignored. Par. d5 can be used to delay activation.



- Notice:**
- if the contact is open while a defrost is in progress, this is immediately stopped, the defrost icon flashes on the display indicating the defrost request is active (this starts again when the contact closes);
 - this function may be useful to prevent defrosts on units exposed to the public during store opening hours.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIc	Assign enable defrost digital input - see DIA	0	0	4	-	U	No
d5	Defrost delay at power on or after command from digital input	0	0	240	min	M	No

Start defrost (par. DIId)

Closing the digital contact starts a defrost, if enabled.



Notice: if the defrost is disabled by another digital input configured as "enable defrost", the defrost calls are ignored.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIId	Assign start defrost digital input - see DIA	0	0	4	-	U	No
d5	Defrost delay at power on or after command from digital input	0	0	240	min	M	No

Door switch with compressor stop (par. DIE)

Door open:

- stop compressor and evaporator fan; alternatively, the compressor can stay on by setting parameter DIP (see the description below);
- light on (see par. DOE);
- Service/Maintenance icon flashing;
- disable temperature alarms.

Door closed:

- resume control;
- light off (see par. DOE) with delay set by par. H14;
- Service/Maintenance icon stops flashing;
- enable temperature alarms with delay Ad after bypass time defined by par. Add.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIE	Assign digital input for door switch with solenoid/compressor and evaporator fans OFF - see DIA	0	0	4	-	U	No
DOE	Assign light digital output - see DOA	4 (small) 3 (large/XL)	0	6	-	U	No
H14	Time light stays on after closing the door	0	0	240	min	U	No
Add	Open door alarm delay and high temperature alarm bypass time for open door	5	0	240	min	U	No



Caution: check compatibility of disabling/delaying the alarm with the site's HACCP procedures.



Notice:

- when control resumes, the compressor times are observed (see the paragraph "Compressor");
- if the door remains open for longer than the value of par. Add, control resumes in any case. The light remains on, the buzzer and alarm relay (if enabled) are activated, temperature alarms are enabled with delay Ad. The display also shows the open door alarm (dor).

Door switch without compressor stop (par. DIP)

Operating mode that allows the door to be opened without stopping the compressor. In this case, when opening the door, the evaporator fan will stop. This operating mode can be configured by setting parameter DIP with one of the digital inputs. Opening the door introduces a temperature alarm delay as described for the door switch function (par. DIE).

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIP	Assign door switch without control stop digital input - see DIA	0	0	4	-	U	No

Remote ON/OFF (par. DIF)

When the controller is OFF:

- the user terminal shows the value measured by the set probe (parameter /t1) alternating with the message OFF;
- the auxiliary relays set as AUX and light remain active, while the other auxiliary outputs are deactivated;
- the buzzer and alarm relay are deactivated;
- the following are not performed: control, defrosts, continuous cycle, temperature alarm signals;
- in the transition from ON to OFF the compressor protection times are observed.

When the controller is ON again, the compressor times are observed and all of the functions are reactivated, except for the defrost on start-up and compressor and evaporator fan delay at power on (par. c0).



Notice:

- the OFF command from digital input has priority over those from the keypad or supervisor;
- if the controller remains OFF for a longer time than the value set for parameter dl, a defrost is performed when the controller is switched on again.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIF	Assign remote ON/OFF digital input - see DIA	0	0	4	-	U	No
dl	Maximum interval between consecutive defrosts	8	0	240	hours	M	Yes
c0	Delay to enable solenoid/compressor and evaporator fans at power on	0	0	240	min	M	No

Curtain switch (par. DIG)

Digital input used to manage a curtain and switch from day to night (ECO).

During night status (ECO mode):

- the night-time set point Stn is used for control, calculated based on the set point St plus the offset defined by parameter r4 ($Stn = St + r4$) and r4d is used as the control differential. The control probe can also be modified according to the setting of parameter r6a (0 = virtual probe, 1 = probe), see the paragraph "Control";
- the AUX or light output is deactivated according to the setting of parameter H8.

During day status:

- normal operation resumes: set point = St, virtual probe used as control probe;
- AUX or light output activated according to the setting of parameter H8.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIG	Assign curtain switch digital input - see DIA	0	0	4	-	U	No
H8	Output switched with time bands 0 = Light - 1 = AUX	0	0	1	-	S	No
r4	Automatic night set point variation	0	-50/-90	50/90	°C/°F	S	No
r4d	Temperature control differential in ECO mode	4/7.2	0.1/0.2	99.9/ 179.2	°C/°F	S	
r6a	Probe for night-time control 0=virtual probe Sv 1=air on probe Sr	0	0	1	-	S	No

Start/stop continuous cycle (par. DIH)

When the contact is closed, the continuous cycle is activated, based on parameters cc and ccE (see "Functions").

When the contact opens again, the continuous cycle is deactivated.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIH	Assign start/stop continuous cycle digital input - see DIA	0	0	4	-	U	No

Change working set (par. Dlo)

In this case, it is possible to choose between the configuration set for parameter rS1 (digital input open) and the configuration set for parameter rS2 (digital input closed). When the controller is switched on, the status of digital input Dlo is verified and the corresponding parameter set is loaded. Changeover between parameter sets also occurs on transition of the input status.

 **Caution:** when changing sets, the default parameters for the chosen configuration are loaded, and any settings made by the user to the current set of parameters may be overwritten.

 **Notice:** use the Spark configuration software to set the two default configurations. (see "Installation").

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
Dlo	Assign working parameter set change digital input - see DIA	0	0	4	-	U	No
rS1	Working parameter set associated with open digital input	1	0	max no. conf.	-	M	No
rS2	Working parameter set associated with closed digital input	2	0	max no. conf.	-	M	No

Generic alarm from digital input (par. DIS)

Activation of the alarm depends on parameter GFA_E. Activation of the alarm causes:

- GHI shown on the display and the service icon comes on;
- activation of the buzzer (see par. Hb);
- activation of the alarm relay (see par. DOB);

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIS	Assign digital input for generic alarm from digital input - see DIA	0	0	4	-	U	No
GFA_E	Generic alarm function, enable 0 = always; 1 = unit ON; 2 = unit OFF; 3 = defrost; 4 = not used; 5 = continuous cycle; 6 = duty setting; 7 = standby; 8 = control; 9 = door open; 10 = active alarm.	0	0	10	-	M	No

Low pressure switch (par. Dlt)

If a low pressure switch is connected, the LP alarm is activated on opening. If pump down by pressure is enabled, the pressure switch is used to switch off the compressor and the autostart procedure.

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
Dlt	Assign low pressure switch digital input - see DIA	0	0	4	-	U	No

Digital input for activating the output configured as AUX (par. DIU)

Digital input that can be used to activate/deactivate the output configured as AUX (parameter DOC).

Code	Desc.	Def.	Min	Max	UOM	User	User terminal
DIU	Assign AUX output activation digital input - see DIA	0	0	4	-	U	No
DOC	Assign AUX auxiliary digital output - see DOA	4 (XL)	0	6	-	U	No

6.4 Analogue outputs

On some models iJF has up to two 0-10 V or PWM analogue outputs (Y1, Y2), which can be configured separately by setting the corresponding parameter. The analogue outputs set as PWM can be used as a control signal to manage VCC by frequency (PWM) compressors (the overall impedance resulting from the parallel connection of all the input impedances of the individual inverters shall not be lower than 400 Ohm and the minimum driving voltage required by the inverter shall not exceed 4.5V). The 0-10 V outputs can be used as a control signal for fans, anti-sweat heaters, LED dimmers or generic loads.

Par.	Description	Def	Min	Max	UOM	User	User terminal
/AA	Assign analogue output for modulating evaporator fans: 0 = not configured; 1 = analogue output 1 (Y1); 2 = analogue output 2 (Y2)	0	0	2	-	M	NO
/Ac	Assign analogue output for modulating anti-sweat heaters - see /AA	0	0	2	-	M	NO
/Ad	Assign analogue output for generic function - see /AA	0	0	2	-	M	NO
/AE	Assign analogue output for modulating condenser fan - see /AA	0	0	2	-	M	NO
/AF	Assign analogue output for modulating lights - see /AA	0	0	2	-	M	NO
/AG	Assign analogue output for modulating compressor - see /AA	0	0	2	-	M	NO

6.5 Digital outputs

iJF features up to 6 digital outputs - NO1 to NO6. To associate the digital outputs with the available functions, set parameters DOA, DOB, ... DOz to the value of the physical digital output. See the parameter table.

Digital output functions

Assegnazione uscita digitale per:	Par.	Default iJF small	Default iJF large	Default iJF XL
Solenoid/compressor	DOA	Digital output 1 (NO1)	Digital output 5 (NO5)	Digital output 5 (NO5)
Alarm	DOB	-	Digital output 2 (NO2)	-
Auxiliary output	DOC	-	Digital output 1 (NO1)	Digital output 4 (NO4)
Light	DOE	Digital output 4 (NO4)	Digital output 3 (NO3)	Digital output 3 (NO3)
Defrost	DOG	Digital output 2 (NO2)	Digital output 6 (NO6)	Digital output 1 (NO1)
Auxiliary evaporator defrost	DOH	-	-	-
Evaporator fans	DOI	Digital output 3 (NO3)	Digital output 4 (NO4)	Digital output 2 (NO2)
Dehumidification heater	DOj	-	-	-
Auxiliary compressor without rotation	DOk	-	-	-
Liquid valve	DOl	-	-	-
Condensate drain heater	DOP	-	-	-
Anti-sweat heater	DOQ	-	-	-
Generic digital output	DOS	-	-	-
Condenser fans	DOt	-	-	-
Humidifier	DOU	-	-	-
Heading in dead band	DOv	-	-	-
Auxiliary parallel compressor	DOw	-	-	-
Gasket heater	DOx	-	-	-
Auxiliary compressor with rotation	DOy	-	-	-
External dehumidifier	DOz	-	-	-
Condenser fan at low speed	DOad	-	-	-
Condenser fan at high speed	DOah	-	-	-

Tab. 6.g

If the opposite logic to the default setting is required, or to correct a wiring error, the logic of the functions associated with the digital outputs using parameters rOA, rOb, ... rOz can be reversed.

Code	Description	Def	Min	Max	UOM	User	User terminal
rOA, rOb, ..., rOz	Digital output logic: 0=direct; 1=reverse	0	0	1	-	S	NO

Solenoid/compressor (par. DOA)

This is used to assign the compressor or liquid solenoid valve output.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOA	Assign solenoid/compressor digital output 0 = not configured 1 = digital output 1 (NO1) 2 = digital output 2 (NO2) 3 = digital output 3 (NO3) 4 = digital output 4 (NO4) 5 = digital output 5 (NO5) 6 = digital output 6 (NO6)	1 (small) 5 (large/XL)	0	6	-	U	NO

Alarm (par. DOB)

This is used to assign the alarm output. The relay associated with the alarm function can work as follows:

- normally de-energised: the relay is energised when an alarm occurs (rOA = 0);
- normally energised: the relay is de-energised when an alarm occurs (rOA = 1);

 **Notice:** operation with the relay normally energised (rOA = 1) when an alarm occurs ensures maximum safety when the alarm is due to a power failure or power cable disconnection.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOB	Assign alarm digital output - see DOA	0 (small/XL) 2 (large)	0	6	-	U	NO

AUX auxiliary output (par. DOc)

The relay can be activated/deactivated from the supervisor and on changeover between day/night status (linked to the curtain switch or the time band settings). Activation/deactivation of the actuator is signalled by the icon switching on/off (if present). The AUX output to be activated or deactivated based on the night/day time band can be selected (see parameters tS1...8, tE1...8 and H8).

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOc	Assign AUX auxiliary digital output - see DOA	0 (small) 1 (large) 4 (XL)	0	6	-	U	NO

Light (par. DOE)

The relay can be activated/deactivated using the direct functions on the user terminal, from the supervisor and on changeover between day/night status (linked to the curtain switch or the time band settings). Activation/deactivation of the actuator is signalled by the light icon switching on/off (if present). The light output to be activated or deactivated based on the night/day time band can be selected (see parameters tS1...8, tE1...8 and H8).

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOE	Assign light digital output - see DOA	4 (small) 3 (large/XL)	0	6	-	U	NO

Defrost (par. DOG)

The relay is activated/deactivated based on the defrost settings (see "Defrost"). Activation/deactivation of the actuator is signalled by the defrost icon switching on/off on the user terminal (if present).

Auxiliary evaporator defrost (par. DOH)

The relay is activated/deactivated based on the defrost settings (see "Defrost").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOH	Assign auxiliary evaporator defrost digital output - see DOA	0	0	6	-	U	NO

Evaporator fans (par. DOI)

The relay is activated/deactivated based on the evaporator fan settings (see "Evaporator fans"). Activation/deactivation of the relay is signalled by the evaporator fan icon switching on/off on the display (if present).

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOI	Assign evaporator fan digital output - see DOA	3 (small) 4 (large) 2 (XL)	0	6	-	U	NO

Dehumidification (par. DOj)

Select the digital output used to manage the dehumidification function. See "Control".

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOj	Assign dehumidification heater digital output - see DOA	0	0	6	-	U	NO

Auxiliary compressor without rotation (par. DOk)

Select the output for the auxiliary compressor without rotation (see "Control"). Setting this output enables an auxiliary compressor that is activated as a second control step, without rotation, i.e. always switching on after the main compressor. In the event of simultaneous request for both steps, the auxiliary compressor is activated after a delay time set by parameter c11, to avoid simultaneous starts.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOk	Assign auxiliary compressor without rotation digital output - see DOA	0	0	6	-	U	NO
c11	Second compressor start delay	4	0	250	s	M	NO

Pump down valve (par. DON)

Digital output for pump down valve management.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DON	Assign pump down valve digital output - see DOA	0	0	6	-	U	NO

Condensate drain heater (par. DOP)

During defrosting there may be frozen condensate on the bottom of the cabinet that prevents the water thawed from the evaporator from being drained correctly. The digital output can be configured to manage the condensate drain heater function. The heater is switched on before defrosting (dHA) and remains on after the defrost ends, for the time dHE. The heater can be activated by selecting a digital output with par. DOP.

 **Notice:** the heater must be protected against overheating (e.g. thermal protector).

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOP	Assign drain heater digital output - see DOA	0	0	6	-	U	NO
dHA	Condensate drain heater activation time before defrosting	3	1	120	min	M	No
dHE	Condensate drain heater activation time after defrosting	2	1	dd	min	M	No

Anti-sweat heater (par. DOQ)

Select the digital output for demisting the glass (see "Anti-sweat heater or fan").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOQ	Assign anti-sweat heater digital output - see DOA	0	0	6	-	U	NO

Generic function output (par. DOS)

Select the digital output for the generic function with ON/OFF output (see "Generic functions").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOS	Assign generic function digital output - see DOA	0	0	6	-	U	NO

Condenser fans (par. DOT)

The relay is activated/deactivated based on the condenser fan settings (see "Condenser fans").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOT	Assign condenser fan digital output - see DOA	0	0	6	-	U	NO

Humidifier output (par. DOu)

Select the humidification output (see "Humidity management").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOu	Assign humidification digital output - see DOA	0	0	6	-	U	NO

Reverse dead band output (par. DOv)

Select reverse output for dead band control (see "Control").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOv	Assign reverse digital output with dead band control - see DOA	0	0	6	-	U	NO

Auxiliary parallel compressor (par. DOw)

Select the auxiliary parallel compressor output (see "Control"). Setting this output enables an auxiliary compressor that works in parallel with the main compressor. A delay time can be set using parameter c11 to avoid simultaneous starts.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOw	Assign auxiliary parallel compressor digital output - see DOA	0	0	6	-	U	NO
c11	Second compressor start delay	4	0	250	s	M	NO

Gasket heater (par. DOx)

Select the digital output for the door gasket heater (see "Gasket heater").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOx	Assign gasket heater digital output - see DOA	0	0	6	-	U	NO

Auxiliary compressor with rotation (par. DOy)

Select the output for the auxiliary compressor with rotation (see "Control"). Setting this output enables an auxiliary compressor that is activated as a second control step, with rotation, i.e. alternating with the compressor that starts first so as to balance the operating hours of the two compressors. In the event of simultaneous request for both steps, the second compressor is activated after a delay time set by parameter c11, to avoid simultaneous starts.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOy	Assign auxiliary compressor with rotation digital output - see DOA	0	0	6	-	U	NO
c11	Second compressor start delay	4	0	250	s	M	NO

External dehumidifier (par. DOz)

Select the digital output for activation of an external dehumidifier (see "Humidity management").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOz	Assign external dehumidifier digital output - see DOA	0	0	6	-	U	NO

Condenser fan at low speed (par. DOad)

Select digital output for condenser fan at low speed (see "Dual-speed condenser fan").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOad	Assign digital output for condenser fan low speed - see DOA	0	0	6	-	U	NO

Condenser fan at high speed (par. DOah)

Select digital output for condenser fan at high speed (see "Dual-speed condenser fan").

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOah	Assign digital output for condenser fan at high speed - see DOA	0	0	6	-	U	NO

6.5.1 Test output mode

The iJF control provides the possibility to test the operation of the analogue and digital outputs, either from the configuration tool or via the Applica app, by accessing Service area > Test mode.

Par.	Description	Def	Min	Max	UOM	User	User terminal
MA1	Test mode, activate analogue output 1: 0 = disabled; 1 = automatic; 2 = activated at the value of MAr1	0	0	1	-	S	NO
MA2	Test mode, activate analogue output 2 - see MA1	0	0	1	-	S	NO
MAr1	Test mode, analogue output 1 request	0	0	100	%	S	NO
MAr2	Test mode, analogue output 2 request	0	0	100	%	S	NO
Mr1	Test mode, activate relay 1: 0 = disabled; 1 = automatic; 2 = activated	1	0	2	-	S	NO
Mr2	Test mode, activate relay 2 - see Mr1	1	0	2	-	S	NO
Mr3	Test mode, activate relay 3 - see Mr1	1	0	2	-	S	NO
Mr4	Test mode, activate relay 4 - see Mr1	1	0	2	-	S	NO
Mr5	Test mode, activate relay 5 - see Mr1	1	0	2	-	S	NO
Mr6	Test mode, activate relay 6 - see Mr1	1	0	2	-	S	NO
Mt	Manual mode duration (0 = manual mode always active)	10	0	90	min	S	NO

Parameters Mr* are used to activate the relays manually:

- Mr* = 0 the corresponding relay is deactivated;
- Mr* = 1 the corresponding relay is activated/deactivated automatically by the controller based on the associated function;
- Mr* = 2 the corresponding relay is activated.

Parameters MA* are used to activate the analogue outputs manually:

- MA* = 0 the corresponding output is deactivated;
- MA* = 1 the corresponding output is activated/deactivated automatically by the controller based on the associated function;
- MA* = 2 the corresponding output is activated at the value set by parameter MAr*.

The message 'Man' is shown on the display when at least one output is set in manual mode.

After a time set using parameter Mt, automatic operation resumes.

 **Caution:** if Mt = 0 operation remains in manual mode until automatic operation resumes.

Test outputs via BMS serial port

On iJF models with the BMS serial option, output test mode can also be activated via the BMS serial port. To activate test mode, a certain value needs to be sent within 60 s from controller power on, using the Modbus address assigned for enabling the test function (see the table). The value to be sent is 0x00A5, alternating with 0x005A every 30 s. When the iJF controller receives the value 0x00A5 alternating with 0x005A, the inputs are read and control is active as normal, however the outputs are overridden manually with the values set using parameters RelayActTestMode [1] to AoutActTestMode [2].

In test mode via BMS serial port, the display shows the message tSt. Test mode ends when the value 0x00A5/0x005A is no longer updated within 30 s (in this case, the controller needs to be restarted) or when one of the following values is written:

- 0x0039: test mode ends and the controller is restarted.
- 0x0089: test mode ends without the controller restarting.

Par.	Description	Modbus								Access (**)
		Def.	Min	Max	UOM	Type (*)	Register (dec.)	Register (hex.)	Address (hex.)	
RelayActTestMode[1]	Test via BMS serial port activate relay 1	0	0	1	-	CS	5	0x0005	0x0004	R/W
RelayActTestMode[2]	Test via BMS serial port activate relay 2	0	0	1	-	CS	6	0x0006	0x0005 R	/W
RelayActTestMode[3]	Test via BMS serial port activate relay 3	0	0	1	-	CS	7	0x0007	0x0006	R/W
RelayActTestMode[4]	Test via BMS serial port activate relay 4	0	0	1	-	CS	8	0x0008	0x0007	R/W
RelayActTestMode[5]	Test via BMS serial port activate relay 5	0	0	1	-	CS	9	0x0009	0x0008	R/W
RelayActTestMode[6]	Test via BMS serial port activate relay 6	0	0	1	-	CS	10	0x000A	0x0009	R/W
CompFreqActTestMode	Test via BMS serial port VCC compressor frequency	0	0	255	hz	HR	49	0x0031	0x0030	R/W
AoutActTestMode[1]	Test via BMS serial port value of analogue output Y1:	0	0	1000	% x 10	HR	83	0x0053	0x0052	R/W
AoutActTestMode[2]	Test via BMS serial port value of analogue output Y2:	0	0	1000	% x 10	HR	84	0x0054	0x0053	R/W
TestMode	Enable test via BMS serial port	0	0	255	-	HR	60	0x003C	0x003B	R/W

Tab. 6.h

(*) CS= Coil Status; HR = Holding Register - (**) R = read; W = write

6.6 Control

Various modes are available for controlling the air temperature for the preservation of foodstuffs, depending on which probes are installed and their position. The following figure shows the position of the intake probe (air on) Sr and the outlet probe (air off) Sm . The virtual probe Sv is a weighted average of these two probes, based on parameter /4, according to the following formula:

$$Sv = \frac{Sm \cdot (100 - /4) + Sr \cdot (/4)}{100}$$

Par.	Description	Def	Min	Max	UOM	User	User terminal
/4	Virtual probe composition: 0 = Outlet probe Sm ; 100 = Intake probe Sr	0	0	100	%	S	NO

For example, if /4=50, $Sv=(Sm+Sr)/2$ represents an estimated value of the air temperature around the refrigerated food.

➔ **Notice:** HACCP: parameter /4 can be set to change the temperature used for control and for display. This operation may be prohibited by HACCP procedures or require record keeping and authorisation.

Example: vertical showcase

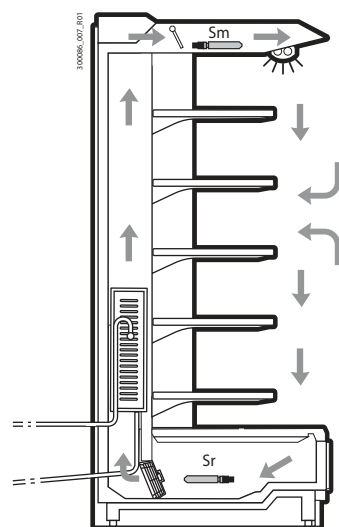


Fig. 6.b

Ref.	Description
Sm	Outlet probe
Sr	Intake probe
Sv	Virtual probe

During the day, most of the load in a refrigerated showcase is due to warm air that enters from the outside and mixes with the cold air inside. Control based on the intake probe, due to high temperature outside the showcase and the mixing of the air, may not manage to reach the set point. Displaying the intake temperature would show a temperature that is too high. Setting a set point that is too low for the intake probe Sr may cause the food to freeze. On the other hand, displaying the outlet temperature would show a temperature that is too low. This allows the possibility to define the display by setting parameter /t1.

ON/OFF control on the outlet probe is defined by:

- set point;
- differential

These values determine the control request and consequently, allowing for the protection times, disabling functions or activation/deactivation delays, the activation/deactivation of the compressor.

Par.	Description	Def	Min	Max	UOM	User	User terminal
St	Temperature control set point	50/122	r1	r2	°C/°F	U	YES
rd	Temperature control differential	2/3.6	0.1/0.2	99.9/179.2	Δ °C/°F	S	YES

➔ **Notice HACCP:** the set point and differential are critical parameters for food storage.

Modifications to these settings may be prohibited by HACCP procedures or require record keeping and authorisation. The minimum and maximum value of the set point can be set by parameter.

Par.	Description	Def	Min	Max	UOM	User	User terminal
r1	Minimum set point	-50/-58	-99/-146.2	r2	°C/°F	S	NO
r2	Maximum set point	50/122	r1	200/392	°C/°F	S	NO

Control offset with probe error

Par.	Description	Def	Min	Max	UOM	User	User terminal
ro	Control offset with probe error	0	0	20/36	Δ °C/°F	M	NO

The iJF controller in standard mode uses the virtual probe Sv for control, that is, the weighted average of the outlet and intake probe (see parameter /4). If one of the two probes making up the virtual probe is broken or has an error, parameter ro is used to continue normal control in controlled conditions, without the need for immediate intervention by maintenance personnel. The recommended value of ro is the temperature difference between the outlet probe and intake probe reading in steady operating conditions of the refrigeration unit:

$$ro = Sr - Sm$$

The following cases may occur:

- outlet probe Sm error: control starts based on the intake probe Sr alone, considering a new set point (St*) determined by the formula:

$$St^* = St + ro \cdot \frac{(100 - '/4')}{100}$$

- intake probe Sr error: based starts on the outlet probe Sm alone, considering a new set point (St*) determined by the formula:

$$St^* = St - ro \cdot \frac{'/4'}{100}$$



Notice:

- if ro = 0 the function is not active;
- for night-time operation the new set point is added to the value defined by r4 (= automatic night-time set point variation);
- in the event of errors on both probes, the controller switches to duty setting operation.

Example

Sm fault in daytime operation, with /4=50, St=-4, Sr=0, Sm=-8, ro (recommended) = 0-(-8) = 8.

Then the new control probe will be Sr with:

$$St^* = St + ro \cdot \frac{(100 - '/4')}{100}$$

$$St^* = -4 + 8 \cdot (100 - 50) / 100 = 0.$$

If the fault is on Sr, the new control probe will be Sm with:

$$St^* = St - ro \cdot \frac{'/4'}{100}$$

$$St^* = -4 - 8 \cdot 50 / 100 = -8.$$

Duty setting operation

Duty setting is a special function used to maintain control in emergency situations with errors in the temperature control probes, until a service intervention.

In the event of a temperature probe error, the controller uses the other probe available and adjusts the set point according to the setting of parameter ro. In the event of errors on both probes, the controller switches to a special mode called "duty setting". Control is activated at regular intervals, operating for a time equal to the value set for the duty setting parameter c4, and off for a fixed time of 15 minutes.

Par.	Description	Def	Min	Max	UOM	User	User terminal
c4	ON time for duty setting operation (Toff = 15 minutes, fixed value): 0 = compressor/valve always OFF; 100 = compressor/valve always ON.	0	0	100	min	M	NO

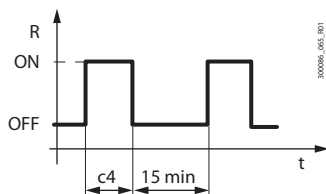


Fig. 6.c

Ref.	Description
R	Control
c4	ON time
t	Time

With duty setting active, during the ON time the solenoid/compressor icon remains on, while it flashes during the OFF time. The table below describes the possible fault situations relating to the control probes and the function that is activated.

Type of system	Control probe fault		Control	Parameter
	Sm	Sr		
1 probe	●		Duty setting	c4
		●	Duty setting	c4
2 probes	●		control on Sr	ro(*)
		●	control on Sm	ro(*)
	●	●	Duty setting	c4

Tab. 6.i

* Only when ro>0.

6.7 Control modes

Three control modes are available, based on the setting of parameter r30:

- r30 = 0, direct with defrost control (default);
- r30 = 1 direct;
- r30 = 2 reverse; operation suitable for hot food showcases;

Par.	Description	Def	Min	Max	UOM	User	User terminal
r30	Control mode: 0 = direct with defrost; 1 = direct; 2 = reverse	0	0	2	-	M	NO

The figure shows the behaviour of direct and reverse mode. The difference between direct control and direct control with defrost control is that in the former case defrosting is disabled, while in the latter case it is enabled; defrosting is enabled by default.

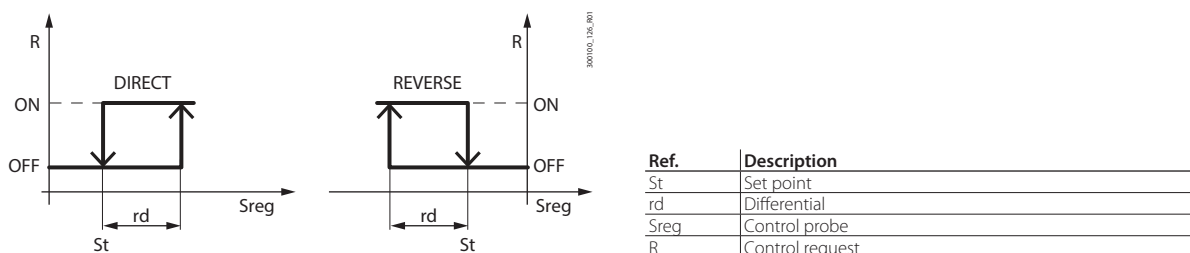


Fig. 6.d

ON/OFF control depends on the capacity of the produce to absorb and release heat, as well as on the evaporator cooling time. The temperature therefore fluctuates above and below the set point, and this may cause a decline in the quality of food preservation. Decreasing the differential to make control more precise increases the frequency of compressor on/off cycles. Precision of the measurement is in any case limited by the tolerance of both the controller and the probe.

6.7.1 Control with auxiliary compressor

In addition to the main compressor, the iJF controller can manage a second compressor output that either acts as a second control step, with or without rotation, or in parallel with the main compressor:

- auxiliary compressor without rotation (parameter DOK)
- auxiliary compressor with rotation (parameter DOy)
- parallel compressor without rotation (parameter DOW)

Stepped control

Control with the auxiliary compressor enabled is illustrated in the figure. If the auxiliary compressor is configured without rotation (par. DOK), the main compressor is always activated first, while if the auxiliary compressor is configured with rotation (par. DOy), on each activation request the compressor that starts first is alternated, with FIFO rotation, so as to balance the operating hours of the two compressors.

The auxiliary compressor is activated with a delay that can be set using parameter c11, to avoid simultaneous starts.

Par.	Descrizione	Def	Min	Max	U.M.	Utente	Terminale utente
c11	Second compressor start delay	4	0	250	s	M	NO
DOA	Assign solenoid/compressor digital output 0 = not configured 1 = digital output 1 (NO1) 2 = digital output 2 (NO2) 3 = digital output 3 (NO3) 4 = digital output 4 (NO4) 5 = digital output 5 (NO5) 6 = digital output 6 (NO6)	1 (small) 5 (large/XL)	0	6	-	U	NO
DOK	Assign auxiliary compressor without rotation digital output - see DOA	0	0	6	-	U	NO
DOy	Assign auxiliary compressor with rotation digital output - see DOA	0	0	6	-	U	NO


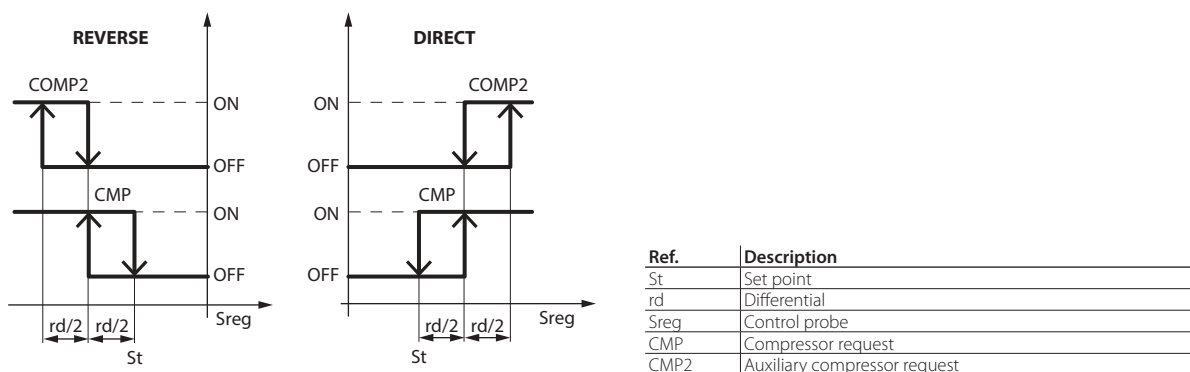


Fig. 6.e

Parallel control

If the second compressor is configured as an auxiliary parallel compressor, control behaviour and activation of the two outputs are shown in the figure. The delay set by parameter c11 is always observed.

Par.	Description	Def	Min	Max	UOM	User	User terminal
c11	Second compressor start delay	4	0	250	s	M	NO
DOw	Assign auxiliary parallel compressor digital output - see DOA	0	0	6	-	U	NO

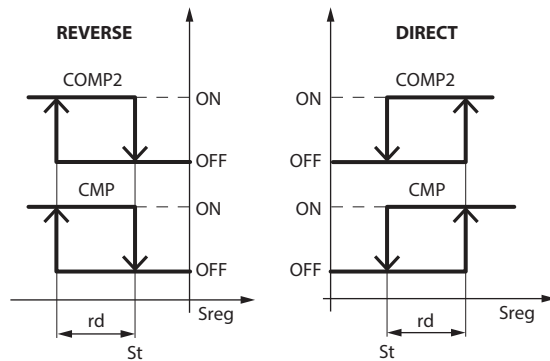

Ref.	Description
St	Set point
rd	Differential
Sreg	Control probe
CMP	Compressor request
CMP2	Auxiliary parallel compressor request

Fig. 6.f


6.7.2 Dead band control

If a digital output has been configured for reverse control in the dead band (par. DOv), control takes into account a dead band around the set point, with an amplitude that can be set using parameter rn. The reverse output is activated with a differential set using parameter rr. Control with dead band varies according to the control mode selected using parameter r30 and whether or not the second auxiliary or parallel compressor is available. The figures show the different behaviour with or without an auxiliary compressor; the behaviour with parallel compressor is similar to when the main compressor only is used.

For the auxiliary compressor, the delay set by parameter c11 is always observed.

Par.	Description	Def	Min	Max	UOM	User	User terminal
r30	Control mode: 0 = direct with defrost; 1 = direct; 2 = reverse	0	0	2	-	M	NO
rn	Dead band	4.0/7.2	0.0	60.0 /108	°C/°F	S	NO
rr	Reverse output differential	2.0/3.6	0.0	20.0 /36	°C/°F	S	NO
DOv	Assign reverse digital output with dead band - see DOA	0	0	6	-	U	NO

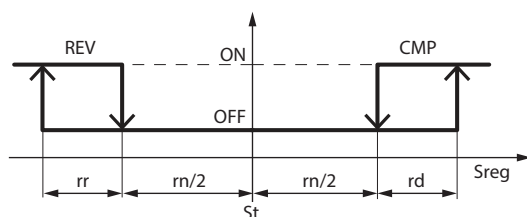
Direct control in dead band without auxiliary compressor



Ref.	Description
St	Set point
rd	Differential
rn	Dead band
rr	Reverse output differential
Sreg	Control probe
CMP	Compressor request
REV	Reverse output request in dead band

Fig. 6.g

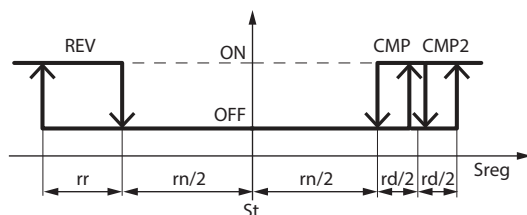Direct control in dead band with auxiliary compressor



Ref.	Description
St	Set point
rd	Differential
rn	Dead band
rr	Reverse output differential
Sreg	Control probe
CMP	Compressor request
REV	Reverse output request in dead band
CMP2	Auxiliary compressor request (par. DOk or par. DOy)

Fig. 6.h

Reverse control in dead band without auxiliary compressor

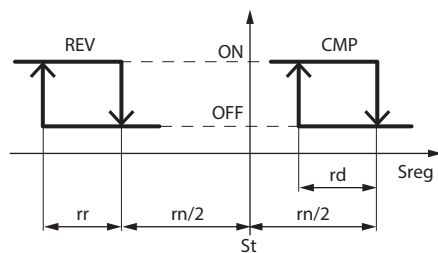


Fig. 6.i

Ref.	Description
St	Set point
rd	Differential
rn	Dead band
rr	Reverse output differential
Sreg	Control probe
CMP	Compressor request
REV	Reverse output request in dead band

Reverse control in dead band with auxiliary compressor

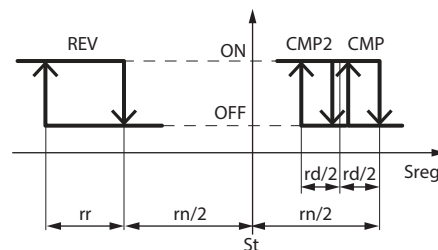


Fig. 6.j

Ref.	Description
St	Set point
rd	Differential
rn	Dead band
rr	Reverse output differential
Sreg	Control probe
CMP	Compressor request
REV	Reverse output request in dead band
COMP2	Auxiliary compressor request (par. DOk or par. DOy)

6.8 Night-time operation

During night-time operation there may be a decrease in thermal load. To avoid excessively low temperatures and high energy consumption, the set point needs to be increased at night by setting parameter r4. Parameter r6a can then be used to select the virtual probe Sv or intake probe Sr as the control probe.

	Daytime operation	Night-time operation	
		r6a = 0	r6a = 1
Control probe	Sv	Sv	Sr
Set point	St	St + r4	St + r4

Tab. 6.j


Night-time operation can be activated by a digital input configured as a curtain switch, on the user interface, from the supervisor or time bands, with different priorities. If the digital input has been selected, this has the highest priority and the other actions are ignored, while if the digital input has not been selected, the other actions have the same priority and the last one controls the action.

To set the time bands, see "Setting the date/time and time bands".


Par.	Description	Def	Min	Max	UOM	User	User terminal
DIG	Assign curtain switch digital input - see DIA	0	0	4	-	U	NO
H8	Output switched with time bands 0 = Light; 1 = AUX.	0	0	1	-	M	NO
r4	Automatic night set point variation	0	-50/-90	50/90	°C/°F	S	NO
r6a	Control probe for night-time operation: 0 = virtual probe Sv; 1 = intake temperature probe Sr	0	0	1	-	S	NO
tS1..8-d	Start time band 1 to 8 day: day - see (td1..8-d)	0	0	11	d	U	NO
tS1..8-hh	Start time band 1 to 8 day: hours	0	0	23	h	U	NO
tS1..8-mm	Start time band 1 to 8 day: minutes	0	0	59	min.	U	NO
td1..8-time	Start time band 1 to 8: type of time data for Applica	00:00:00	00:00:00	23:59:59	-	U	NO
tE1..8-d	End time band 1 to 8 day: day - see (td1..8-d)	0	0	11	d	U	NO
tE1..8-hh	End time band 1 to 8 day: hours	0	0	23	h	U	NO
tE1..8-mm	End time band 1 to 8 day: minutes	0	0	59	min.	U	NO



Notice HACCP: verify that modification of the night-time set point (parameter r4) is permitted by site HACCP procedures. If required, obtain the required authorisation and record the changes.

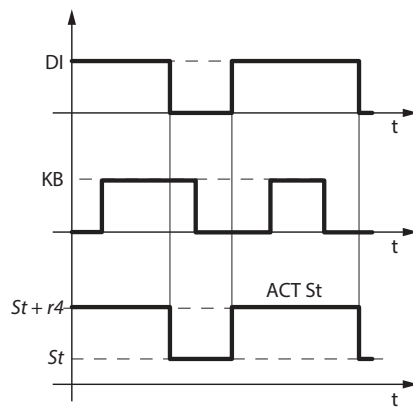
Fig. 6.k

Ref.	Description
St	Set point
r4	Night set point variation
DI	Control from digital input
ACT St	Effective set point
t	time

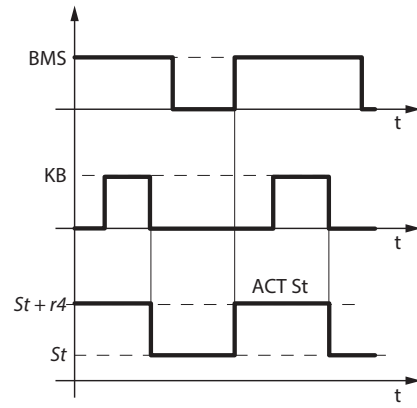
Fig. 6.l

Ref.	Description
St	Set point
r4	Night set point variation
BMS	Control from supervisor
KB	Control from keypad
t	time

By setting the time bands and setting the light as the switched output ($H8 = 0$), the set point follows the day/night settings of the time bands:


Fig. 6.m

During day status:

- Set point = St
- control probe Sv
- light or AUX output on, depending on parameter $H8$

During night status:

- Set point = $St + r4$
- Control probe Sv or Sr , depending on the value of $r6a$
- light or AUX output off, depending on parameter $H8$


6.9 ECO operation

During ECO operation, the iJF uses the same control set point $St + r4$, but with a different differential. This reduces the number of compressor starts/stops and reduces energy consumption. ECO operation can be activated on the user interface or from the supervisor, with the same priority.



Note: the time bands for ECO operation and night operation are the same; the effect depends on the setting of parameters $r4$ and $r4d$.

Par.	Description	Def	Min	Max	UOM	User	User terminal
rd	Temperature control differential	2/3.6	0.1/0.2	99.9/ 179.2	Δ °C/°F	S	YES
r4d	Temperature control differential in ECO mode	4/7.2	0.1/0.2	99.9/ 179.2	Δ °C/°F	S	NO

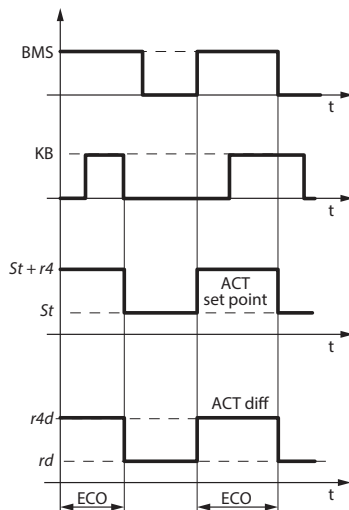
Fig. 6.n

Ref.	Description
r4d	Differential in ECO operation
r4	Night set point variation
KB	Control from keypad
BMS	Control from supervisor
ACT Diff	Effective differential
ECO	ECO operation
night	Night-time operation
t	Time



Notice: if the door switch digital input is configured, opening the door causes the changeover from ECO operation to normal operation. In the event of a blackout, the controller returns to operation corresponding to the set time band.

6.10 Continuous cycle

Continuous cycle is a function used to keep the refrigeration cycle active continuously for a settable duration (parameter cc), irrespective of the temperature inside the unit. This may be useful when requiring a rapid decrease in the temperature, even below the set point. Continuous cycle ends when the time set for cc is reached or when the temperature falls below the set point by the value set for parameter ccE.



Caution: the unit of measure of parameter cc is hours.

Par.	Description	Def	Min	Max	UOM	User	User terminal
c7	Defrost priority over continuous cycle: 0 = same priority; 1 = defrost has priority.	0	0	1	-	M	NO
cc	Continuous cycle running time, 0 = disabled	0	0	15	h	M	NO
ccE	Set point delta to end continuous cycle	1.5 / 2.7	0.0	9.9 / 17.8	Δ °C/°F	M	NO

Continuous cycle can be activated by digital input, from the supervisor, on reaching the high temperature threshold AH/AHA or from the user interface. When the continuous cycle is running:

- the icon  comes on (see "User interface" for details)
- the solenoid valve/compressor output (with icon) is activated.



Notice:

The continuous cycle cannot be activated if:

- the duration of the continuous cycle is set to 0 (cc = 0);
- the temperature is below the control set point
- the device is OFF.

The continuous cycle remains in standby if:

- the compressor is waiting for the times to elapse (c1, c3);
- the immediate or delayed alarm from external digital input is active;
- defrost, dripping, post-dripping are running;
- the door is open. When the door is opened, the continuous cycle is interrupted. It restarts for the remaining time when the door is closed.

The continuous cycle ends:

- on deactivation by digital input, from the supervisor or user interface;
- on reaching the time cc;
- on reaching the threshold St-ccE;
- when there is a defrost request (if c7 = 1);
- when the iJF controller is placed in OFF status.

Defrost priority over continuous cycle

Par.	Description	Def	Min	Max	UOM	User	User terminal
c7	Defrost priority over continuous cycle: 0 = same priority; 1 = defrost has priority.	0	0	1	-	M	NO

If c7 = 0, the continuous cycle has priority over defrosting: any defrost requests remain on hold while the continuous cycle is running. If c7 = 1, defrost requests that are activated when the continuous cycle is running terminate the latter and the defrost starts.

6.11 Custom set points

On the iJF controller the temperature and humidity set points can be selected from sets of preset values. This is done using the Applica app or the commissioning tools, by setting parameter St_idx. Furthermore, on some iJF models the set points can be changed directly by pressing a button or activating a direct function on the display. The preset set point values can be changed by setting parameters Sc1, Sc2, Sc3, Sh1, Sh2, Sh3 in the Applica app or commissioning tools.

Par.	Description	Def	Min	Max	UOM	User	User terminal
Sc1	Custom temperature set point 1	0	r1	r2	°C/°F	M	NO
Sc2	Custom temperature set point 2	0	r1	r2	°C/°F	M	NO
Sc3	Custom temperature set point 3	0	r1	r2	°C/°F	M	NO
St_idx	Custom set point index	0	0	3	-	M	NO
Sh1	Custom humidity set point 1	0	0	100	%RH	M	NO
Sh2	Custom humidity set point 2	0	0	100	%RH	M	NO
Sh3	Custom humidity set point 3	0	0	100	%RH	M	NO

6.12 Compressor


The iJF controller can manage both On/Off and modulating compressors (VCC - Variable Capacity Compressors, with serial command in the models with VCC option, or directly via the analogue output, appropriately configured). The control request is sent to the main compressor and the auxiliary compressor, as described in "Control".

6.13 Compressor protection times

The controller features the following compressor protection parameters.

Par.	Description	Def	Min	Max	UOM	User	User terminal
c0	Delay to enable solenoid/compressor and evaporator fans at power on	0	0	240	min	M	NO
c1	Min time between consecutive compressor starts	0	0	15	min	M	NO
c2	Min compressor OFF time	3	0	15	min	M	NO
c3	Min compressor ON time	0	0	15	min	M	NO
d9	Defrost priority over compressor protection times: 0 = compressor (the protection times are observed); 1 = defrost (the protection times are ignored, therefore defrosting has higher priority and overrides the compressor times).	0	0	1	-	M	NO

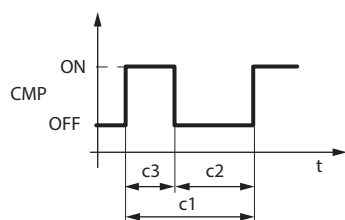- c0 is used to delay the start of control when the device is powered on. This function is useful for protecting the compressor and the driving relay from repeated on cycles in the event of frequent voltage drops.
- c1 sets the minimum time between two successive starts of the compressor, irrespective of the request. This parameter can be used to limit the maximum number of starts per hour;
- c2 sets the minimum compressor off time. The compressor will not be started again until the minimum time set has elapsed;
- c3 sets the minimum compressor running time. The compressor will not be switched off until the minimum time set has elapsed;
- d9 disables the compressor protection times when defrosting:
 - d9 = 0: the compressor protection times are observed;
 - d9 = 1: the compressor protection times are ignored, therefore defrosting has higher priority over the compressor protection times.



Ref.	Description
CMP	Compressor
t	time

Fig. 6.o



Notice:

- set the protection parameters as declared by the compressor manufacturer, improper use of these parameters may affect the compressor's working life;
- in the event of duty setting operation (see the corresponding paragraph), if the on time c4 is less than c3, the compressor remains on for the time c3.

6.14 Variable capacity compressor (VCC)

The iJF controller calculates the optimum compressor speed based on the value read by the control probe, and sends this data to the VCC inverter, which then drives the compressor, based on the model, in one of two modes: frequency or serial protocol.

6.14.1 VCC with frequency control

For frequency-controlled inverters, some iJF models are equipped with a dedicated analogue output. The output signal is a digital square wave, with a voltage amplitude from 0 to +10 Vdc and a range defined as described below. The duty cycle is 50%.

Par.	Description	Def	Min	Max	UOM	User	User terminal
/AG	Assign analogue output for modulating compressor - see /AA	0	0	2	-	M	NO
/P5	Configuration of analogue output Y1: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
/P6	Configuration of analogue output Y2: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO

The analogue output to be used, Y1 or Y2, is selected by parameter /AG, with the corresponding parameter /P5 or /P6 then set as a PWM output.

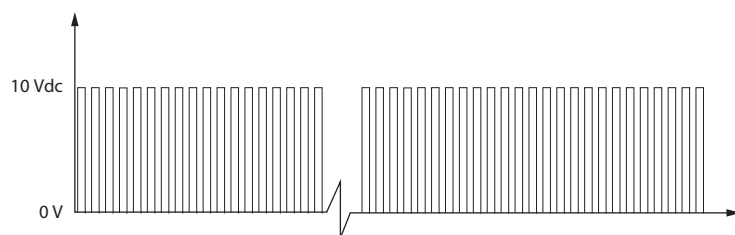


Fig. 6.p

The compressor speed follows the input frequency signal, with a relationship such as the one shown in the figure.

Notice: the reference frequencies and speeds vary according to the type of compressor and the parameter settings (see below).

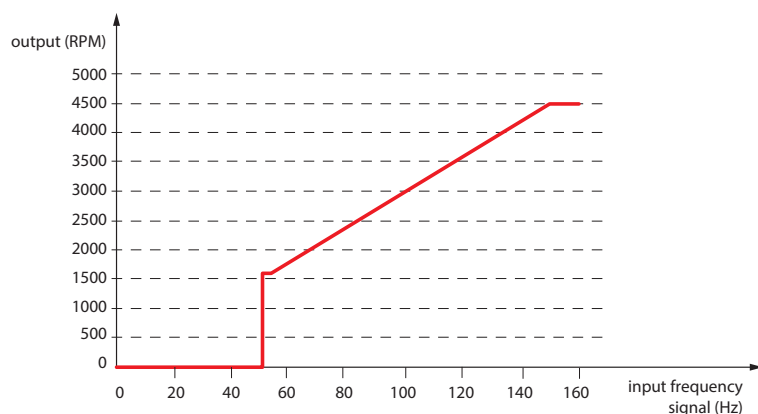


Fig. 6.q

The following diagrams show two examples of connection to the Embraco and Secop inverters. It is recommended to refer to the inverter manufacturer's user manual for more detailed instructions and installation instructions.

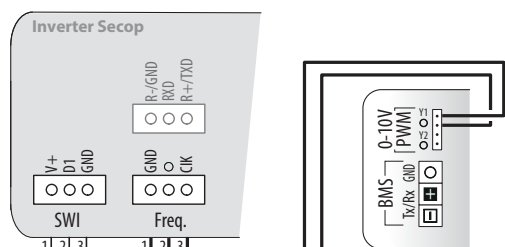


Fig. 6.r

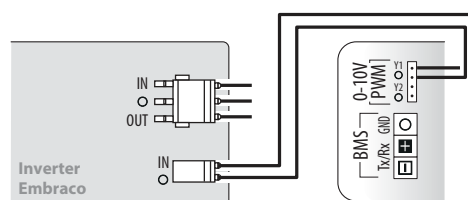


Fig. 6.s

6.14.2 VCC with serial control

For inverters with serial control, some iJF models feature a dedicated serial port. The inverter is connected directly, as shown in the following table. The following diagrams show two examples of connection to the Embraco and Secop inverters. It is recommended to refer to the inverter manufacturer's user manual for more detailed instructions and installation instructions.

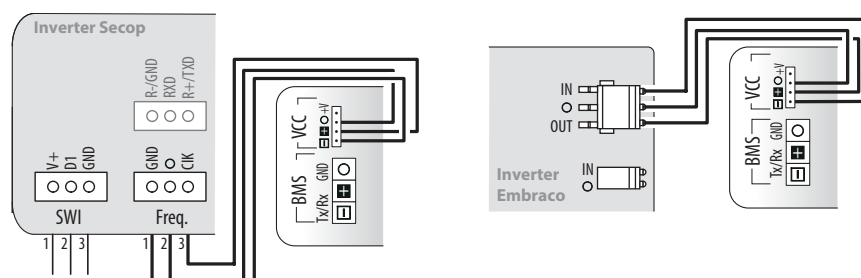


Fig. 6.t

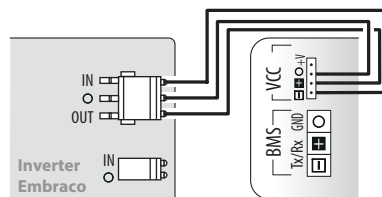


Fig. 6.u

Correspondence of terminals for serial connection

iJF VCC	Secop	Embraco
+V	Not used	Not used
GND	GND	O
-	O	IN
+	CLK	OUT

Tab. 6.k

The serial communication protocol complies with the following technical specifications:

Asynchronous communication (start-stop)

Baud rate	600 baud
Start bits	1
Data bits	8
Stop bits	1
Parity	None
Flow control	None
Unit size 5 bytes 5	bytes

Tab. 6.l

The compressor speed is sent to the inverter via a specific serial protocol command. The compressor speed follows the sent value, with a relationship such as the one shown in the figure:

Notice: the reference frequencies and speeds vary according to the type of compressor and the parameter settings (see below).

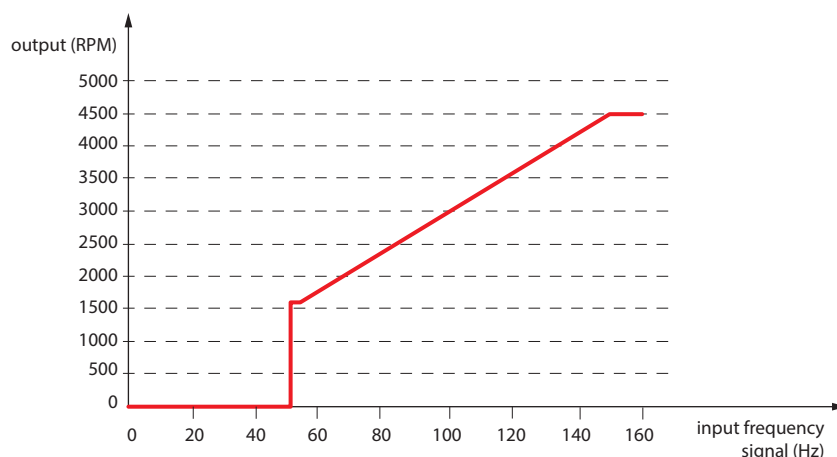


Fig. 6.v

6.14.3 VCC compressor configuration

All of the VCC configuration parameters are expressed in units of frequency (Hz). The corresponding compressor rotation speed (rpm) depends on the relationship:

$$\text{Compressor speed (rpm)} = \text{Frequency (Hz)} * \text{cuF}$$

where cuF is the conversion factor between frequency and compressor speed.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
cdf	VCC compressor frequency for hot gas defrost	140	0	255	hz	M	NO
cMA	Maximum VCC compressor rotation frequency	150	0	250	hz	M	NO
cMf	Maximum VCC compressor control frequency	100	0	255	hz	M	NO
cMi	VCC compressor switch-off frequency	30	0	250	hz	M	NO
cnf	Minimum VCC compressor control frequency	52	0	255	hz	M	NO
cuF	Conversion factor from frequency (Hz) to compressor speed (rpm)	30	0	999	-	M	NO
cSc	Soft start frequency	53	0	255	hz	M	NO
cSt	Soft start time	5	0	999	s	M	NO

Each VCC model works between two operating limit frequencies, the switch-off frequency and the maximum rotation frequency. The iJF controller uses the following preset values:

- cMi = switch-off frequency = 30 Hz (thermostat present signal, but VCC is off, 0 rpm)
- cMA = maximum rotation frequency = 150 Hz (4500 rpm)

To adapt the cooling capacity of the VCC to the actual needs of the application, set the following parameters:

- cnf = minimum control frequency; preset value = 52 Hz (1560 rpm);
- cMf = maximum control frequency; preset value = 100 Hz (3000 rpm).

During normal control, when the conditions require the VCC to restart, the compressor runs at the soft-start frequency for the soft-start time (a few seconds). To adapt this frequency to the VCC oil recovery specifications, set the following parameters:

- cSc = soft-start frequency; preset value = 53 Hz (1590 rpm);
- cSt = soft-start time; preset value = 5 s.

When defrosting, if set in hot gas mode, the compressor runs at a fixed frequency, defined by the following parameter:

- cdf = hot gas defrost frequency; preset value = 140 Hz (4200 rpm).

6.14.4 VCC compressor control

The VCC compressor speed is controlled using a PID algorithm. The compressor remains off until the control temperature exceeds the value $St + rd$, at which point the compressor starts at the soft-start frequency cSc. After the soft-start time cSt, the PID algorithm manages the compressor speed within the operating range defined by cnf and cMf.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
cct	VCC compressor off time	1	0	250	min	M	NO
cdt	PID control derivative term	1	0	255	s	M	NO
cPr	PID control proportional term	2	0	800	-	M	NO
ctl	PID control integral term	120	0	999	s	M	NO

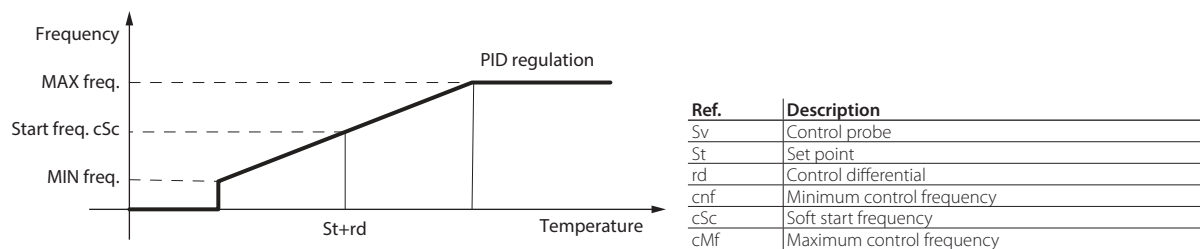


Fig. 6.w

The PID control algorithm can be adapted to the needs of the application by setting the following parameters:

- cPr = PID control proportional term;
- cti = PID control integral term;
- cdt = PID control derivative term.

The preset values are suitable and safe for starting any application the first time. When making adaptations, it is recommended to modify one parameter at a time and check the behaviour of the application in a controlled environment.

If the compressor is on, the controller switches it off when the temperature read by the control probe Sv reaches the low temperature alarm threshold or the set point St for a time equal to cct:

- if cct is set to 0, the compressor stops immediately when $Sv = St$.
- if cct is set to 255, the compressor never stops.

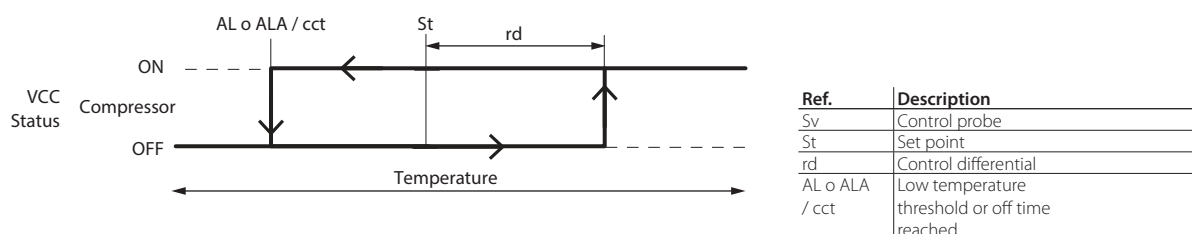


Fig. 6.x

To protect the refrigerated products, management of the two alarm thresholds overlaps normal control:

- AL/ALA = low temperature alarm threshold; when the temperature read by the control probe Sv is lower than the threshold AL/ALA, the controller immediately stops the compressor.
- AH/AHA = high temperature alarm threshold; when the temperature read by the control probe Sv is higher than the threshold AH/AHA, the controller activates the continuous cycle for the compressor (if $cc > 0$). See "Continuous cycle".

Par.	Description	Def.	Min	Max	UOM	User	User terminal
AH	High temperature alarm threshold	0	0	555/999	Δ °C/°F	U	YES
AHA	Absolute high temperature alarm threshold	537/999	-100 /-148	537/999	°C/°F	U	YES
AL	Low temperature alarm threshold	0	0	200/360	Δ °C/°F	U	YES
ALA	Absolute low temperature alarm threshold	-100/-148	-100 /-148	537/999	°C/°F	U	YES

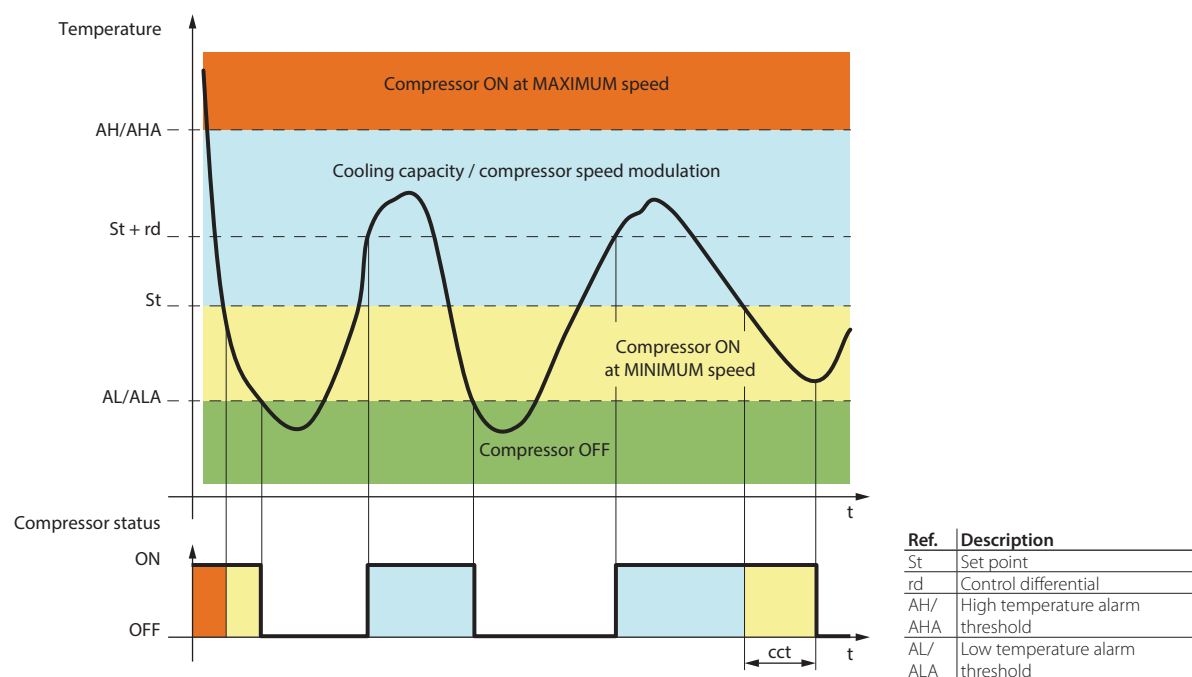


Fig. 6.y

6.14.5 Hot gas defrost with VCC compressor

During hot gas defrosts, the VCC compressor varies its speed based on the defrost phase: waiting, defrosting, end defrost, dripping, post-dripping. Furthermore, the behaviour of the compressor also depends on whether the condensate drain heater is present (parameter DOP). The following diagrams show operation in both cases.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
cdf	VCC compressor frequency for hot gas defrost	140	0	255	hz	M	NO
cMA	Maximum VCC compressor rotation frequency	150	0	250	hz	M	NO
cMf	Maximum VCC compressor control frequency	100	0	255	hz	M	NO
cMi	VCC compressor switch-off frequency	30	0	250	hz	M	NO
cnf	Minimum VCC compressor control frequency	52	0	255	hz	M	NO
dd	Dripping time after defrosting (0 = no dripping)	2	0	15	min	M	NO
ddf	VCC compressor frequency for dripping	140	cMi	255	hz	M	NO
dHG	Waiting time for compressor start to switch hot gas valve	0	0	300	s	M	NO
dHA	Condensate drain heater activation time before defrosting	3	1	120	min	M	NO
dHE	Condensate drain heater activation time after defrosting	2	1	dd	min	M	NO
DOP	Assign drain heater digital output - see DOA	0	0	6	-	U	NO
F3	Evaporator fans during defrosts: 0 = on; 1 = off.	1	0	1	-	S	NO
Fd	Post-dripping time after defrost (fans off with control active)	2	0	15	min	M	NO

(**) Parameter only available via the configuration tool.

Con resistenza di scarico condensa (par. DOP)

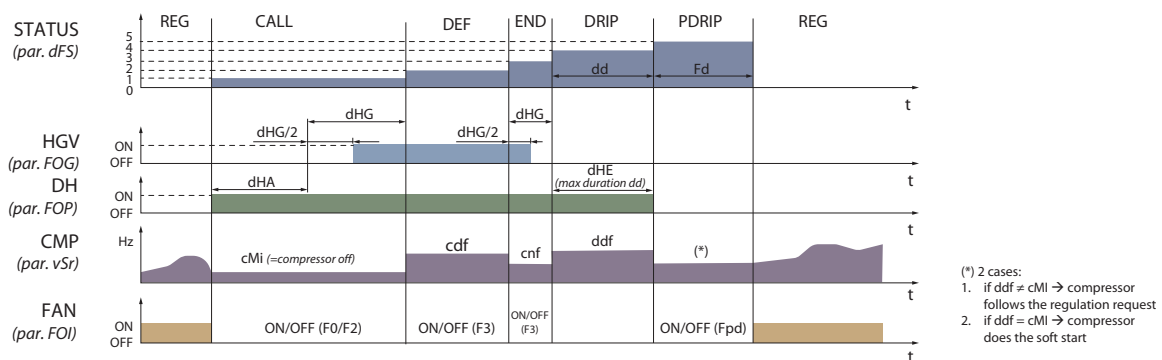


Fig. 6.z

Senza resistenza di scarico condensa (par. DOP)

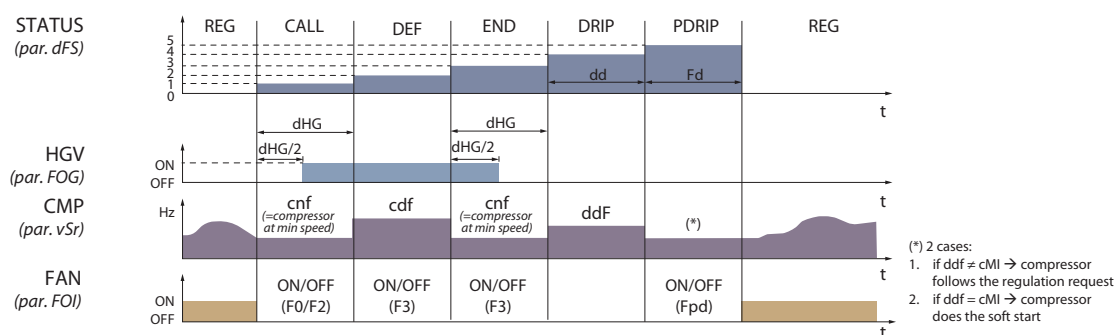


Fig. 6.aa

Ref.	Description	Ref.	Description
STATUS	Defrost stages	PDRIP	Post-dripping
DEF	Defrost	dHA	Condensation drain activation time before defrosting
HGV	Hot gas valve	dHE	Condensation drain activation time after defrosting
DH	Condensate drain heater	dHG	Waiting time to switch hot gas valve
CMP	Compressor	dd	Dripping time
FAN	Evaporator fan	Fd	Post dripping time
t	time	cnf	Minimum VCC control freq.
REG	Control	cdf	Freq. VCC for hot gas defrost
CALL	Awaiting defrost	ddf	Freq. VCC for dripping
END	End of active defrost stage	cMf	Maximum VCC control freq.
DRIP	Dripping	CMi	VCC switch-off freq.

Tab. 6.m

If the heater is present, when defrosting is requested, the iJF controller brings the compressor to the switch-off cMi and waits for the time dHA to elapse before activating the hot gas valve, also respecting the time set for dHG. Throughout the actual defrosting stage, the compressor speed is equal to the value set using parameter cdf. Once the defrost has ended, the hot gas valve switches back again to resume normal operation. The duration of this stage is equal to the time set for dHG, and the compressor remains at the minimum control frequency cnf. This is followed by a possible dripping stage, in which the compressor frequency can be set using parameter ddf. The condensate drain heater activation time after defrosting (par. dHE) can extend to span the entire duration of the dripping stage (par. dd).

The dripping stage lasts for the time F_d , and involves restarting the the compressor:

1. based on the control request if $ddf \neq cMi$
2. at the soft start frequency cSc , if $ddf = cMi$

If no heater is not present, the times set for dHA and dHE are ignored, and the frequency during valve activation and deactivation (parameter dHG) is equal to the minimum control frequency cnf .

During the defrosting and post-dripping stages, the evaporator fans follow the settings of parameters Fe and Fpd respectively.

Notice: if at the end of the defrost (post-dripping) the temperature is higher than the alarm threshold AH or AHA , and parameter $cc > 0$, the compressor is activated at the maximum frequency cMA to bring the temperature down in the shortest possible time.

6.14.6 Continuous cycle with VCC compressor

When the continuous cycle is activated, the compressor is switched on (if off, otherwise it stays on). The compressor runs at the speed set by parameter cMA until the end of the continuous cycle.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
cMA	Maximum VCC compressor rotation frequency	150	0	250	hz	M	NO


6.14.7 Dead band and VCC compressor

If the reverse output is set for dead band control, the VCC compressor starts when $St + rn/2 + rd$, as described in "Dead band control". To activate the reverse output, the compressor must be off.

6.14.8 On/Off compressor and VCC compressor

If the auxiliary compressor without rotation is configured, the first compressor to be activated is the VCC, as described in "VCC compressor control". The On/Off compressor will be activated second.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
$c1$	Min time between consecutive compressor starts	0	0	15	min	M	NO
$c2$	Min compressor OFF time	0	0	15	min	M	NO
$c3$	Min compressor ON time	0	0	15	min	M	NO

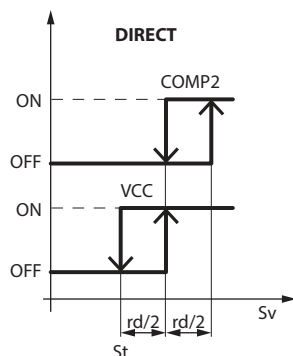

Ref.	Description
Sv	Control probe
St	Set point
rd	Control differential
VCC	VCC compressor request
COMP2	Auxiliary compressor request

Fig. 6.ab

The time set by parameter $c11$ is always observed between activation of the VCC compressor and activation of the On/Off compressor.

If the auxiliary compressor is configured as a parallel compressor, the auxiliary compressor is activated together with the VCC compressor, after the delay time $c11$.

6.15 Pump down

When the compressor stops, the pump down procedure can be performed to empty the evaporator. The pump down procedure can end by pressure or by time, as set by parameter c10.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
cPt	Maximum pump down time (0 = pump down disabled)	s	0	900	0	M	NO
c8	Compressor start delay after opening the pump down valve	s	0	60	5	M	NO
c9	Restart during pump down: 0 = disabled; 1 = enabled.	-	0	1	1	M	NO
c10	Pump down by pressure or time: 0 = pressure; 1 = time.	0	1	1	-	M	NO
Dlt	Assign low pressure switch digital input: 0 = disabled; 1 = ID1; 2 = ID2; 3 = D1H; 4 = D2H	-	0	4	0	U	NO
DOn	Assign liquid valve digital output: 0 = disabled; 1 = NO1; 2 = NO2; 3 = NO3; 4 = NO4; 5 = NO5; 6 = NO6	-	0	6	0	U	NO

The pump down procedure can be activated if the liquid valve digital output is configured and parameter cPt > 0. When there is a request to stop the compressor, the liquid valve is closed until the low pressure switch is activated or the time cPt elapses, based on the setting of parameter c10.

If pump down is set to end by pressure and the pressure switch is not activated before the time cPt, the procedure is terminated when the time expires, and the Pump down ended after maximum time alarm Pd is generated.

Notice: for VCC compressors, during pump down the compressor is operated at the minimum frequency cnf.

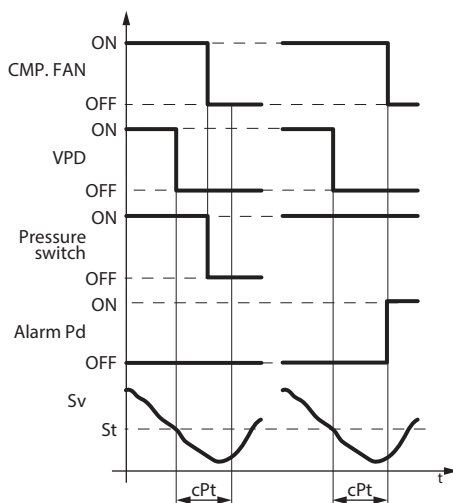


Fig. 6.ac

Ref.	Description
St	Set point
rd	Control differential
Sv	Control threshold
PRESSURE SWITCH	Low pressure switch
CMP, FAN	Compressor request
VPD	Liquid valve output
ALARM Pd	Pump down ended after maximum time alarm
cPt	Pump down time

Notice: for VCC compressors, take care when setting parameter cct for stopping the compressor. To perform the pump down procedure, set cct = 0.

If during pump down the status of the low pressure switch changes again and restart during pump down is enabled by setting parameter c9 = 1, the procedure ends, the compressor restarts and a Restart in pump down alarm Ats is generated. Alarm Ats is reset when a pump down procedure is completed correctly.

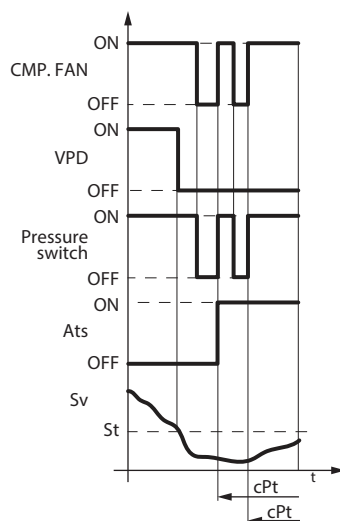


Fig. 6.ad

Ref.	Description
St	Set point
rd	Control differential
Sv	Control threshold
PRESSURE SWITCH	Low pressure switch
CMP, FAN	Compressor request
VPD	Liquid valve output
Ats	Restart in pump down alarm
cPt	Pump down time

When the compressor starts, the liquid valve is opened for the time set by parameter c8, to allow the pressure to equalise. If c8 = 0 pump down at power on is disabled.

6.16 Defrost

Introduction

The iJF controller can manage different types of defrosts, based on the setting of parameter d0.

The defrost can end by temperature, in which case the defrost probe Sd must be installed, or by time. At the end of the defrost the dripping phase may begin (if dd>0), during which the compressor and the fans are off, followed by the post-dripping phase (if Fd>0), during which control resumes and the fans work based on the setting of parameter Fpd. The type of display on user terminal during the defrost can be selected by setting parameter d6.

Code	Description	Def	Min	Max	UOM	User	User terminal
Dlc	Assign enable defrost digital input - see DIA	0	0	4	-	U	NO
Dld	Assign start defrost digital input - see DIA	0	0	4	-	U	NO
/d1	Assign end defrost probe:	2	1	16	-	M	YES
	1 outlet temperature (Sm)	9					ambient temperature
	2 defrost temperature (Sd)	10					not used
	3 intake temperature (Sr)	11					glass temperature
	4 not used	12					not used
	5 not used	13					condensing temperature
	6 auxiliary evaporator	14					humidity
	defrost temperature (Sd2)	15					frost protection temperature
	7 auxiliary probe 1	16					product temperature
	8 auxiliary probe 2						
/d2	Assign auxiliary evaporator end defrost probe - see /d1	6	1	16	-	M	YES
d0	Type of defrost	0	0	4	-	M	NO
	0 heater by temperature	3					hot gas by time
	1 hot gas by temperature	4					heater by time
	2 heater by time						with temperature control
dt1	End defrost temperature (read by Sd)	4/ 39.2	-50/ -58	50/122	°C/°F	S	YES
dt2	Auxiliary evaporator end defrost temperature (read by Sd2)	4/ 39.2	-50/ -58	50/122	°C/°F	S	YES
dP1	Maximum defrost duration	45	1	240	min	S	YES
dP2	Max auxiliary evaporator defrost duration	45	1	240	min	S	YES
d6	Display on terminals during defrosts: 0 = temperature alternating with 'dEF'; 1 = freeze display; 2 = 'dEF'.	1	0	2	-	S	YES
dd	Dripping time after defrost (fans off) 0 = no dripping	2	0	15	min	M	NO
d7	Skip defrost: 0 = Disabled - 1 = Enabled	0	0	1	-	M	NO
d8	Bypass high temperature alarm time after defrost	1	0	240	h	S	SI
d10	Compressor on time for defrost running time mode 0 = function disabled	0	0	240	min	M	NO
d11	Defrost temperature threshold in running time mode	-50 / -58	-50 / -58	50 / 122	°C/°F	M	NO
d15	Start defrost delay	0	0	240	min	M	NO
dn	Nominal defrost duration for skip defrost	75	0	100	%	M	NO
dnM	Maximum defrost duration for skip defrost	45	0	240	min	M	NO
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off	1	0	1	-	M	YES
F3	Evaporator fans during defrosts: 0 = on - 1 = off	1	0	1	-	M	NO
Fd	Post-dripping time after defrost (fans off with control active)	2	0	15	min	M	NO
Fpd	Evaporator fans during post-dripping 0/1 = On/Off	1	0	1	-	M	NO
Fsh	Modulating evaporator fan speed in dehumidification	40	0	100	%	S	NO
A3	Defrost terminated after maximum time signal: 0 = Disabled 1 = Enabled	0	1	0	-	S	YES

Below is the trend of the defrost output based on the setting of parameter d0.

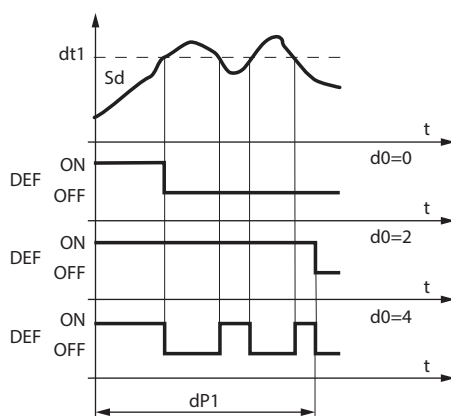


Fig. 6.ae

Ref.	Description
t	time
dt1	End defrost temperature
dP1	Maximum defrost duration
Sd	Defrost probe
DEF	Defrost
d0	Type of defrost

The heater defrost by time with temperature control (d0=4) activates the defrost output only if the evaporator temperature (Sd) is less than the value of parameter dt1, and ends after the time defined by dP1. This function is useful for energy saving and to prevent excessive temperatures on the evaporator.

Parameters td1 to td8 can be used to set up to 8 defrost events based on the controller's clock (RTC), on models where featured.

To set parameters td1 to td8, use the supervisor, the configuration tool or the Applica app.

Code	Description	Def.	Min	Max	UOM	User	User terminal
td1..8-d	Defrost 1 to 8 - day	0	0	11	-	U	NO
	0 event disabled						
	1 to 7 Monday to Sunday	9					
	8 Monday to Friday	10					
td1..8-hh	Defrost 1 to 8 - hours	0	0	23	hours	U	NO
td1..8-mm	Defrost 1 to 8 - minutes	0	0	59	min	U	NO
td1..8-time	Defrost 1 to 8 - data type for Applica	00:00:00	00:00:00	23:59:59	-	U	NO

Input and output settings

Code	Description	Def.	Min	Max	UOM	User	User terminal
/Fb	Assign defrost temperature probe (Sd) - see /FA	0	0	7	-	U	NO
/cb	Defrost temperature probe (Sd) calibration	0	-20/-36	20/36	Δ °C/°F	S	NO
/FF	Assign auxiliary evaporator defrost temperature probe (Sd2) - see /FA	0	0	7	-	U	NO
/cF	Auxiliary evaporator defrost temperature probe (Sd2) calibration	0	-20/-36	20/36	Δ °C/°F	S	NO
DOG	Assign defrost digital output - see DOA	0 (small) 6 (large) 1 (XL)	0	6	-	U	NO
rOG	Defrost digital output logic - see rOA	0	0	1	-	S	NO
DOH	Assign auxiliary evaporator defrost digital output - see DOA	0	0	6	-	U	NO
ROH	Auxiliary evaporator defrost digital output logic - see rOA	0	0	1	-	S	NO

Start defrost

The events that activate a defrost are shown in the table.

Event	Defrosting
Interval between defrosts expired	Dependent on enabling (dl > 0)
Time band	Dependent on enabling (time bands set) and presence of the RTC
Compressor running time	Dependent on enabling (d10>0 and Sd<d11)
Start-up	Dependent on enabling (d4=1)
At each compressor start	Dependent on enabling (Sd < d11)
Digital input	Dependent on enabling (Dld > 0)
Supervision	Always
Keypad/Direct function	Dependent on the presence of the button/enabling of the direct function
App/Commissioning tool	Always
Opening the door	Dependent on enabling (dCL > 0)

Tab. 6.n

Start defrost

The iJF controller can manage the following types of defrosts, based on the setting of parameter d0:

1. heater (placed near the evaporator) by temperature;
2. hot gas by temperature;
3. heater by time;
4. hot gas by time;
5. heater by time with temperature control.

The details of each type of defrost are illustrated in the following paragraphs.

If defrost by temperature is selected, it is performed only if the value read by the evaporation temperature probe Sd is lower than the defrost end value (dt1 and dt2) or has an error. This also applies when there are two evaporators.

For heater defrosts:

- waiting time equal to d15 (if configured);
- the compressor stops (performing pump down, if enabled);
- the main and secondary evaporator defrost relays are activated to switch on the heaters.

During hot gas defrost:

- waiting time equal to d15 (if configured);
- then the compressor stops;
- the time dHG/2 elapses;
- the main and secondary evaporator defrost relays are activated to activate the hot gas valve.
- the time dHG/2 elapses;
- the compressor starts;



Notice: if the control temperature is lower than the low temperature alarm threshold (parameter AL or ALA), the compressor cannot start and therefore the hot gas defrost will not be performed. If the temperature falls below the alarm threshold during defrosting, the compressor will stop immediately.

End defrost

The defrost ends by temperature when the values set by parameters dt1 and dt2 are reached, or by time, when the values dP1 and dP2 are reached, based on the setting of parameter d0. If defrost by temperature is selected, the defrost probe Sd needs to be installed; the defrost ends when the probe Sd measures a value greater than the setting of dt1 or by timeout after the maximum time dP1 has elapsed; in this case, based on the setting of parameter A3, Ed1 is displayed.

If set to end by time, the defrost ends after the time dP1.

The heater defrost by time with temperature control (d0=4) activates the defrost output only if the evaporator temperature Sd is less than the value of parameter dt1, and ends after the time defined by dP1. This function is useful for energy saving and to avoid excessively heating the evaporator.

For units with two evaporators, the defrost ends when both evaporators have reached the end defrost condition. If one evaporator ends defrosting (by time or by temperature) before the other, the corresponding defrost relay is de-energised, while the compressor remains in the status required by the defrost.

For hot gas defrost, when the defrost ends:

- the compressor stops;
- the time dHG/2 elapses;
- the main and secondary evaporator defrost relays are deactivated to deactivate the hot gas valve.
- the time dHG/2 elapses;
- the compressor starts;

At the end of the defrost, the controller can activate the dripping phase (if dd>0), during which the compressor and the fans are off, followed by the post-dripping phase (if Fd>0), during which control resumes with the fans off. If the defrost ends prematurely (e.g. interrupted by keypad/BMS), the dripping and post-dripping phases are skipped.

The type of display on the user terminal during defrosting can be selected by setting parameter d6.



Notice: high temperature alarms can be disabled after defrosting by setting par. d8.

6.16.1 Heater defrost (d0 = 0, 2, 4)

The operating stages of heater defrosts with ON/OFF compressor, pump down enabled and condensate drain heater configured are illustrated below.

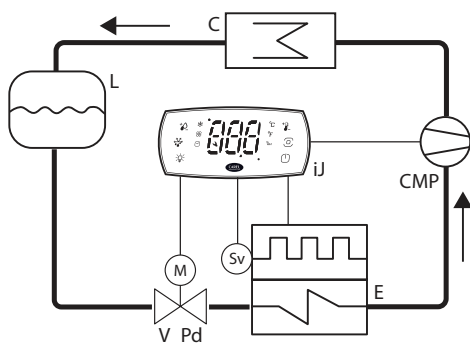


Fig. 6.af

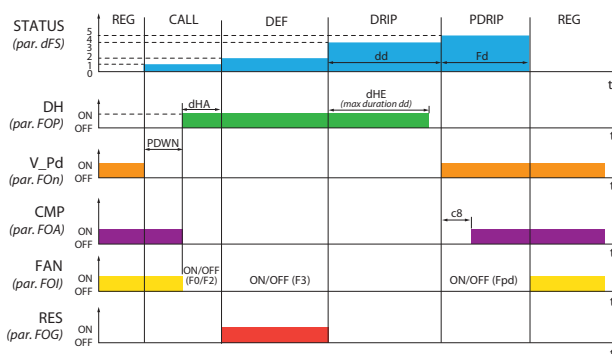


Fig. 6.ag

Ref.	Description
t	Time
FAN	Evaporator fan
DEF	Defrost
DRIP	Dripping
CMP	Compressor

Ref.	Description
PDRIP	Post-dripping
REF	Control
DH	Condensate drain heater
RES	Defrost heater
V_Pd	Pump down valve

Ref.	Description
C	Condenser
E	Evaporator
L	Liquid receiver
PDWN	Pump down
STATUS	Defrost stages

6.16.2 Hot gas defrost (d0 = 1, 3)

The operating stages of hot gas defrosts with ON/OFF compressor, pump down enabled and condensate drain heater configured are shown below. For details on the operation of hot gas defrosts with VCC compressor, see the corresponding paragraph ("Hot gas defrosts with VCC compressor").

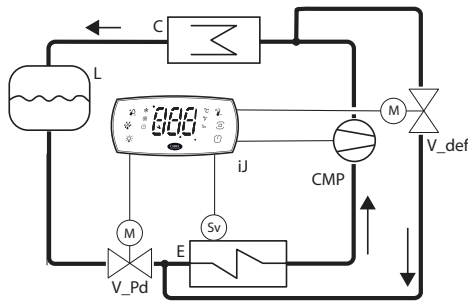


Fig. 6.ah

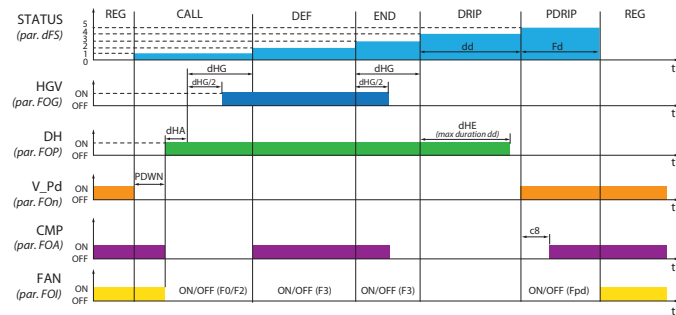


Fig. 6.ai

Ref.	Description	Ref.	Description	Ref.	Description
t	Time	PDWN	Pump down	E	Evaporator
FAN	Evaporator fan	CALL	Awaiting defrost	L	Liquid receiver
DEF	Defrost	REG	Control	DH	Condensate drain pan heater
DRIP	Dripping	HGV	Hot gas valve	STATUS	Defrost stages
CMP	Compressor	V_Pd	Pump down valve		
PDRIP	Post-dripping	C	Condenser		

Notice: the defrost output (par. DOG) is used to control of the hot gas valve (HGV).

Pump down is the period in which the evaporator is emptied of liquid refrigerant, and can be disabled by setting cPt=0 (see "Pump down"). Operation of the fan during the pump down phase depends on parameters F2 and F3. During the dripping phase the fan is always off, while during the post-dripping phase operation depends on the setting of parameter Fpd.

Code	Description	Def	Min	Max	UOM	User	User terminal
dd	Dripping time after defrost (fans off) : 0 = no dripping	2	0	15	min	M	NO
cPt	Pump down phase duration 0 = pump down disabled	0	0	900	s	M	NO
F0	Evaporator fan management: 0 = always on; 1 = activation based on Sd - Sv; 2 = activation based on Sd; 3 = activation based on Sv.	0	0	3	-	S	NO
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off	1	0	1	-	M	NO
F3	Evaporator fans during defrosts: 0 = on - 1 = off	1	0	1	-	M	NO
Fd	Post-dripping time after defrosting (fans off with control active)	2	0	15	min	M	NO

6.16.3 Advanced defrosting features

Maximum interval between consecutive defrosts (par. dl)

Code	Description	Def	Min	Max	UOM	User	User terminal
dl	Maximum interval between consecutive defrosts	8	0	240	h	M	YES

Parameter dl is a safety parameter used to perform cyclical defrosts every "dl" hours, event without the real time clock (RTC). At the start of each defrost, irrespective of the duration, an interval starts being counted. If this interval exceeds dl without a defrost being performed, one is started automatically. The count is always active even if the controller is OFF.

Example.

If the defrost programmed by time td3 is not carried out due to a fault in the RTC, a new defrost starts after the safety time dl.

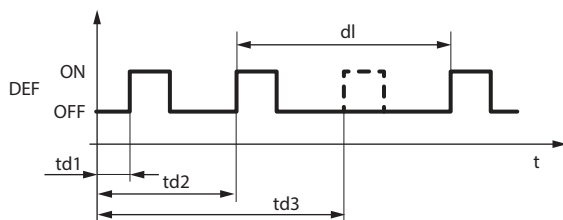


Fig. 6.aj

Ref.	Description
dl	Maximum interval between consecutive defrosts
td1...td3	Scheduled defrosts
t	time
DEF	Defrost

Notice:

- if the interval dl expires when the controller is OFF, a defrost will be performed when it is switched ON;
- to ensure correct defrosting, the interval between defrosts must be greater than the maximum defrost duration, increased by the dripping and post-dripping times.



Notice: to avoid unwanted defrosts controlled by the timer, set parameter dl=0 (defrosts from keypad, RTC, compressor running time or digital input only).

Running time defrost (par. d10, d11)

Running time is a special function that determines when the refrigeration unit needs defrosting. In particular, it is assumed that if the compressor is on for a certain time (d10) and the evaporator temperature measured by probe Sd remains continuously below a certain set threshold (d11), the evaporator may be frozen and a defrost is activated. The time is reset if the temperature returns above the threshold.

Code	Description	Def	Min	Max	UOM	User	User terminal
dt1	End defrost temperature (read by Sd)	4/ 39.2	-50 /-58	50/122	°C/°F	S	YES
dt2	Auxiliary evaporator end defrost temperature (read by Sd2)	4/ 39.2	-50 /-58	50/122	°C/°F	S	YES
d10	Compressor on time for defrost running time mode 0 = function disabled	0	0	240	min	M	NO
d11	Defrost temperature threshold in running time mode	-50 /-58	-50 /-58	50/122	°C/°F	M	NO

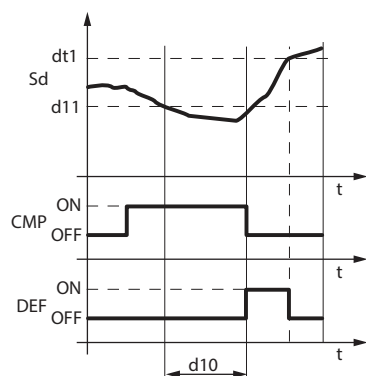


Fig. 6.ak

Ref.	Description
Sd	Defrost probe
t	time
DEF	Defrost
CMP	Compressor

Defrost at each compressor start

With defrosts controlled by temperature, if the evaporator temperature is lower than d11 when there is a cooling request, preventive defrosting is required before starting the compressor. This avoids starting the compressor and then stopping immediately afterwards, thus reducing the number of compressor starts.



Notice: this condition is not verified the first time the compressor is started after switching the unit on.

Defrost after opening the door

Opening the door allows humid air into the showcase, which can condense and freeze on the evaporator. Consequently, the controller records the number of door openings that occur when the evaporation temperature is below zero. When the door is opened a number of times equal to the setting of dCL, a defrost is activated. The controller checks the defrost duration and adjusts the number of door openings that must be reached before the next defrost.

Par.	Description	Def	Min	Max	UOM	User	User terminal
dCH	Defrost after opening the door: maximum number of openings	50	dcL	99	-	M	NO
dcL	Defrost after opening the door: minimum number of openings	0	0	dCH	-	M	NO
dPH	Defrost after opening the door: maximum defrost duration	15	dPL	dP1	min	M	NO
dPL	Defrost after opening the door: minimum defrost duration	5	0	dPH	min	M	NO

If the defrost duration:

- is less than dPL, the number of door openings required to activate the next defrost is increased by 10;
- is more than dPH, the number of door openings required to activate the next defrost is reduced by 5;
- is between dPL and dPH, the number of door openings required to activate the next defrost remains unchanged.

In any case, the number of door openings always remains between the minimum and maximum limits dcL and dCH.



Notice: the door opening counter is reset every time a defrost is performed.

Skip defrost (par. d7, dn)

If defrosts ending by temperature are set, the skip defrost function evaluates whether the defrost duration is less than a certain threshold dn1 (dn2) and based on this establishes whether or not the following defrosts can be skipped.

Code	Description	Def	Min	Max	UOM	User	User terminal
dP1	Maximum defrost duration	45	1	240	min	S	YES
dP2	Max auxiliary evaporator defrost duration	45	1	240	min	S	YES
d7	Skip defrost: 0 = Disabled - 1 = Enabled	0	0	1	-	M	NO
dn	Nominal defrost duration for skip defrost	75	0	100	%	M	NO

Thresholds dn1 (evaporator 1) and dn2 (evaporator 2) are calculated based on the parameter settings:

$$dn1 = \frac{dn}{100} \cdot dP1 \quad dn2 = \frac{dn}{100} \cdot dP2$$

The algorithm keeps a counter of the defrosts to be skipped:

- when switching the controller on, the defrost is performed 7 times without increasing the counter, from the eighth on the counter is updated;
- if the defrost ends in a time less than dn1 (dn2), the counter of the defrosts to be skipped is increased by 1;
- when the counter reaches 1, the next defrost is skipped; if the next defrost ends in a time less than dn1 (dn2), the counter is increased to 2 and 2 defrosts are skipped; if also the next defrost ends in a time less than dn1 (dn2), the counter is increased to 3 and 3 defrosts are skipped, the counter is reset and the algorithm restarts (see table).

Defrost sequence	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
"short defrost"?	-	-	-	-	-	-	-	Y	-	Y	-	-	Y	-	-	-	Y	-	Y	-	-	Y
Counted	-	-	-	-	-	-	-	1	-	2	-	-	3	-	-	-	1	-	2	-	-	3
Defrost Skipped	N	N	N	N	N	N	N	N	Y	N	Y	Y	N	Y	Y	Y	N	Y	N	Y	Y	N

Algorithm restart



Notice: whenever a defrost ends after dn1 (dn2), the next defrost is performed and the counter is reset.



Notice: the algorithm is applied only in case of defrosts programmed by scheduler or cyclic defrosts (par. dl), manual defrosts or defrosts started from the supervisory system are always performed and don't have effects on the counter.

Auxiliary evaporator defrost

Up to two defrost probes and up to two defrost outputs can be configured, activating a heater on the main evaporator and another on the auxiliary evaporator. The controller recognises the basic configuration shown in the following table.

Defrost outputs	Evaporator probes	Start defrost
1	1	Normal
2	1	Defrosting managed on two outputs with reference to the same defrost probe
1	2	Defrosting managed on the same output with reference to the minimum temperature read by the two defrost probes
2	2	Defrosting managed independently on the two evaporator circuits

Tab. 6.o

6.16.4 Other defrost parameters

End defrost signal by timeout (par. A3)

Code	Description	Def	Min	Max	UOM	User	User terminal
A3	End defrost signal by timeout 0 = disabled; 1 = enabled	0	0	1	-	M	NO

Defrost at power on (par. d4)

Code	Description	Def	Min	Max	UOM	User	User terminal
d4	Enable defrost at power on: 0 = Disabled 1 = Enabled	0	0	1	-	M	NO

The defrost request at power on has priority over the control request and activation of the continuous cycle.

Defrost delay at power on (parameter d5)

Code	Description	Def	Min	Max	UOM	User	User terminal
d5	Defrost delay at power on or after command from digital input	0	0	240	min	M	NO

Also active when d4=0. If the digital input is set to enable or start a defrost from an external contact, parameter d5 represents the delay between when the defrost is enabled or requested, and when it effectively starts.

Dripping time after defrost (par. dd)

Code	Description	Def	Min	Max	UOM	User	User terminal
dd	Dripping time after defrost (0 = no dripping)	2	0	15	min	M	NO

This parameter is used to stop the compressor and the evaporator fans following a defrost so as to allow the evaporator to drip. The value of the parameter indicates the off time in minutes. If dd=0 no dripping time is enabled, and at the end of the defrost control resumes immediately, without stopping the compressor and the fan, if active.

Defrost priority over compressor protection (par. d9)

Code	Description	Def	Min	Max	UOM	User	User terminal
d9	Defrost priority over compressor protection times: 0 = the compressor protection times are observed; d9 = 1: the compressor protection times are ignored, therefore defrosting starts without waiting for the compressor protection times to elapse	0	0	1	-	M	NO

Parameter d9 can be used to set the defrost priority with respect to compressor protections c1, c2, c3.

Defrost priority over continuous cycle (par. c7)

Code	Description	Def	Min	Max	UOM	User	User terminal
c7	Defrost priority over continuous cycle: 0 = continuous cycle has priority; 1 = defrost has priority.	0	0	1	-	M	NO

Parameter c7 is used to set the priority of defrosting over the continuous cycle:

- if c7 = 0, the continuous cycle has priority over the defrost requests;
- if c7 = 1, if the continuous cycle is in progress and there is a defrost request, the continuous cycle ends and the defrost starts.

Defrost interval unit of measure (par. dC)

Code	Description	Def	Min	Max	UOM	User	User terminal
dC	Time base for defrosts 0: dI in hours, dP1 and dP2 in minutes 1: dI in minutes, dP1 and dP2 in seconds	0	0	1	-	S	NO

Parameter dC is used to change the unit of measure (hours/minutes or minutes/seconds) used to count the times for parameters dI (defrost interval, hours or minutes), dP1 and dP2 (defrost duration). This feature is particularly useful when configuring the defrosts.

6.17 Evaporator fans

The evaporator fans can be fixed speed (On/Off) or variable speed (modulating 0-10 V).

 **Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To assign the On/Off or modulating output, use the parameters shown in the table.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOI	Assign evaporator fan digital output - see DOA	3 (small) 4 (large) 2 (XL)	0	6	-	U	NO
rOI	Evaporator fan digital output logic - see rOA	0	0	1	-	S	NO
/AA	Assign analogue output for modulating evaporator fan 0 = not configured; 1 = analogue output 1 (Y1) 2 = analogue output 2 (Y2)	0	0	2	-	M	NO
/P5	Configuration of analogue output Y1: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
/P6	Configuration of analogue output Y2: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO

 **Notice:** if an analogue output is assigned to the variable-speed evaporator fan function and the evaporator fan is also assigned to a relay output, both outputs will be active at the same time; if the speed is greater than 0, the relay will remain active (closed):

- if speed (Y1) > 0 → "FAN" relay ON (NO* closed)
- if speed (Y1) = 0 → "FAN" relay OFF (NO* open)

6.17.1 Fixed-speed evaporator fans

To activate the algorithm, simply assign a relay output to the evaporator fan function (on some models this is already assigned by default, see the product label). In addition, the defrost probe needs to be configured if this is required for control. See "Inputs and outputs". The parameters used to manage fixed-speed fans are shown below (see the connection diagram).

Par.	Description	Def	Min	Max	UOM	User	User terminal
F0	Evaporator fan management: 0 = always on; 1 = activation based on Sd - Sv; 2 = activation based on Sd; 3 = activation based on Sv.	0	0	3	-	S	NO
F1	Evaporator fan activation threshold (only if F0 = 1, 2, 3)	5/ 41	-50/-58	50/122	°C/°F	S	NO
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off with compressor off; 2 = on for anti-stratification; 3 = on for humidity control.	1	0	3	-	S	NO
Frd	Fan activation differential (including variable speed)	2/ 3.6	0.1/0.2	20/ 36	°C/°F	S	YES

iJF controller manages the evaporator fans as follows:

- F0 = 0 always on;
- F0 = 1 on/off based on difference between probes Sd and Sv;
- F0 = 2 on/off based on defrost probe Sd;
- F0 = 3 on/off based control probe Sv.

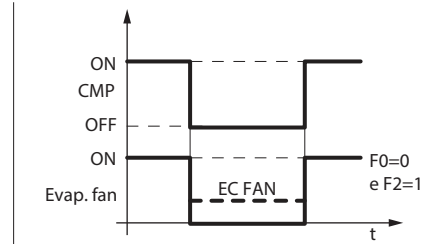


Fig. 6.al

If parameter F0=1 or 2, the evaporator fans are on/off based on the difference between the defrost and control probe temperatures, or based on the defrost probe reading. The fans switch on when the control variable falls below the threshold F1 value minus the control differential Frd, and switch off when the control variable rises above the threshold F1.

If parameter F0=3, the evaporator fans are on/off based on the control probe reading. The fans switch on when the control variable rises above the threshold St plus the control differential rd, and switch off when the control variable falls below the threshold St.

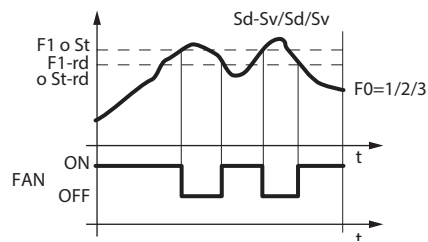


Fig. 6.am

Ref.	Description
Sd	Defrost probe
Sv	Control probe
F1	Fan activation threshold (St if F0=3)
Frd	Differential (rd if F0=3)
t	time
FAN	Evaporator fans

The fans can be switched off in the following situations:

- when the compressor is off (parameter F2);
- during defrosts (parameter F3).

The evaporator fans can be forced on during control (parameter F2) and during defrosts (parameter F3).

Evaporator fans during defrosts

When defrosting (parameter F3), the fans can be forced off. During the dripping time (parameter dd > 0) the fans are always off, while during the post-dripping time (parameter Fd > 0), the status of the fans can be defined by setting parameter Fpd. This is useful to allow the evaporator to return to temperature after defrosting, thus avoiding blowing warm hot and moist air into the refrigerated environment.

Par.	Description	Def	Min	Max	UOM	User	User terminal
dd	Dripping time after defrost (0 = no dripping)	2	0	15	min	M	NO
F3	Evaporator fans during defrosts: 0 = on; 1 = off.	1	0	1	-	S	NO
Fd	Post-dripping time after defrosting (fans off with control active)	2	0	15	min	M	NO
Fpd	Evaporator fans during post-dripping: 0 = on; 1 = off.	1	0	1	-	M	NO

Anti-stratification

Set parameter F2 = 2 to prevent stratification of the air inside the showcase when the compressor is off. The fan performs a series of ON and OFF cycles with settable times that differ depending on the time (day or night). When the compressor is switched off, the fan remains ON.

Par.	Description	Def	Min	Max	UOM	User	User terminal
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off with compressor off; 2 = on for anti-stratification; 3 = on for humidity control.	1	0	3	-	S	NO
Fd0	Evaporator fan ON time for anti-stratification during the day	5	1	100	min	M	NO
FdF	Evaporator fan OFF time for anti-stratification during the day (0 = always ON during the day)	10	0	100	min	M	NO
Fn0	Evaporator fan ON time for anti-stratification at night	5	1	100	min	M	NO
FnF	Evaporator fan OFF time for anti-stratification at night (0 = always ON at night)	20	0	100	min	M	NO

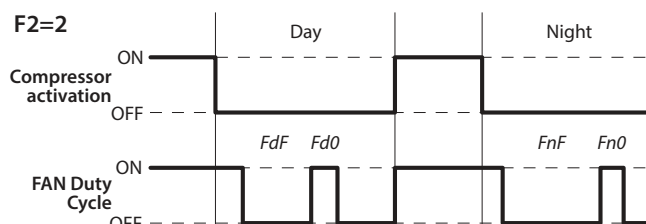



Fig. 6.an

Humidity management with evaporator fan cycles

If F2 = 3, when the compressor is off, the fan is controlled based on the humidity level set by parameter HU, selected between three humidity levels: low, medium and high, which correspond to three different sets of fan on/off times and three different control temperature differentials for compressor activation.

Par.	Description	Def	Min	Max	UOM	User	User terminal
HU	Humidity level: 0: low; 1: medium; 2: high.	1	0	2	-	U	NO
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off with compressor off; 2 = on for anti-stratification; 3 = on for humidity control.	1	0	3	-	S	NO
F11	Fan ON time with low humidity level	60	0	600	s	M	NO
F12	Fan OFF time with low humidity level	120	0	600	s	M	NO
F13	Fan ON time with medium humidity level	120	0	600	s	M	NO
F14	Fan OFF time with medium humidity level	120	0	600	s	M	NO
F15	Fan ON time with high humidity level	180	0	600	s	M	NO
F16	Fan OFF time with high humidity level	120	0	600	s	M	NO
F17	Temperature control differential for compressor activation with low humidity level	2.0/ 3.6	0.1/0.2	20/36	°C/°F	M	NO
F18	Temperature control differential for compressor activation with medium humidity level	2.0/ 3.6	0.1/0.2	20/36	°C/°F	M	NO
F19	Temperature control differential for compressor activation with high humidity level	2.0/ 3.6	0.1/0.2	20/36	°C/°F	M	NO

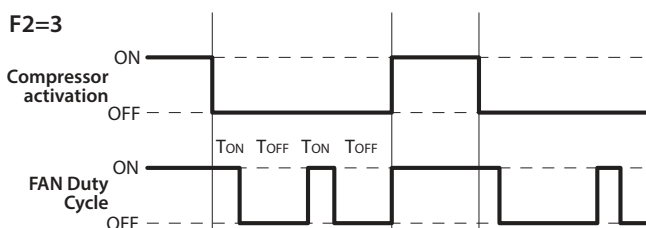F2=3



Ref.	Description
TON	F11/F13/F15
TOFF	F12/F14/F16

Fig. 6.a0

6.17.2 Variable-speed evaporator fans (EC fans)

Variable-speed fans may be useful for optimising energy consumption. In this case, the fans are powered by the mains, while the control signal may come via output Y1 or Y2 on the iJF controller, set as 0-10 Vdc.




Notice: variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To activate the algorithm, simply assign an analogue output to the variable-speed evaporator fan function by setting the type of output accordingly. In addition, the evaporation temperature probe needs to be configured if this is required for control. See "Inputs and outputs". The maximum and minimum fan speed can be set using parameters F6 and F7 (as a percentage of the range 0-10 V). The fan speed varies proportionally across the range of modulation.

For example, considering the default values of the parameters, if F0 = 2 and $S_d = F1 - F_{rd}/2 = 6^\circ\text{C} \rightarrow$ output Y1 corresponds to the percentage $(F6 + F7)/2 = 50\%$. When the fan speed controller is used, F5 represents the temperature threshold below which the fans are activated, with a fixed 1°C hysteresis for switch-off.

Par.	Description	Def	Min	Max	UOM	User	User terminal
F0	Evaporator fan management: 0 = always on; 1 = activation based on $S_d - S_v$; 2 = activation based on S_d ; 3 = activation based on S_v .	0	0	3	-	S	NO
F1	Evaporator fan activation threshold (only if F0=1 or 2)	5/ 41	-50/-58	50/122	°C/°F	S	NO
F5	Evaporator fan cut-off temperature (hyst. 1°C)	5	F1	50	°C/°F	M	NO
F6	Maximum evaporator fan speed	100	F7	100	%	M	NO
F7	Minimum evaporator fan speed	0	0	F6	%	M	NO
F8	Evaporator fan start-up time (0 = function disabled)	0	0	240	s	M	NO
F10	Evaporator fan forcing time at maximum speed (0 = function disabled)	0	0	240	min	M	NO
Frd	Evaporator fan activation differential (including variable speed)	2/ 3.6	0.1/0.2	20/36	°C/°F	S	NO

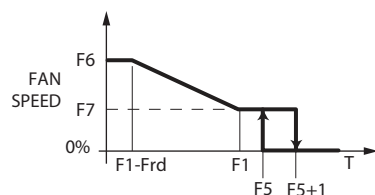

Ref.	Description
T	temperature
F1	Fan activation threshold
Frd	Differential
F5	Fan cut-off temperature
F6	Maximum speed
F7	Minimum speed

Fig. 6.ap

If parameter F0=0, the evaporator fans are on when the compressor is on (based on the setting of parameter F2), regardless of the defrost or control temperature.

If parameter F0 = 1, the evaporator fan speed is modulated based on the evaporator temperature and the control temperature, with the speed increasing the further the temperature is below $S_v - F1$.

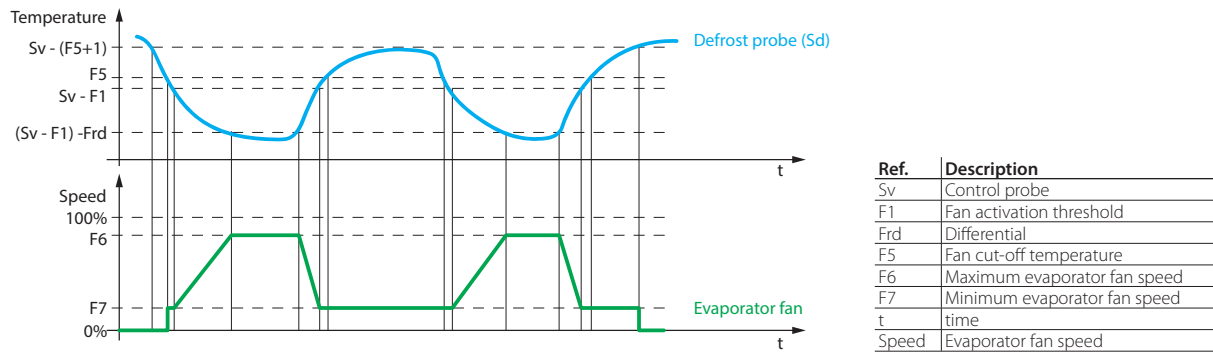


Fig. 6.aq

If parameter F0=2, the evaporator fan speed is modulated based on the evaporator temperature alone, with the speed increasing the further it falls below F1.

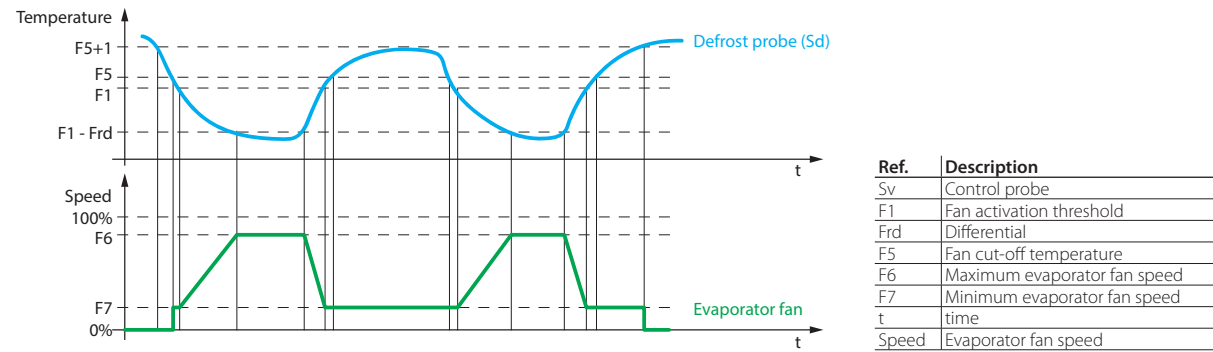


Fig. 6.ar

If parameter F0=3, the evaporator fan speed is modulated based on the control temperature alone, with the speed increasing the further it rises above the set point.

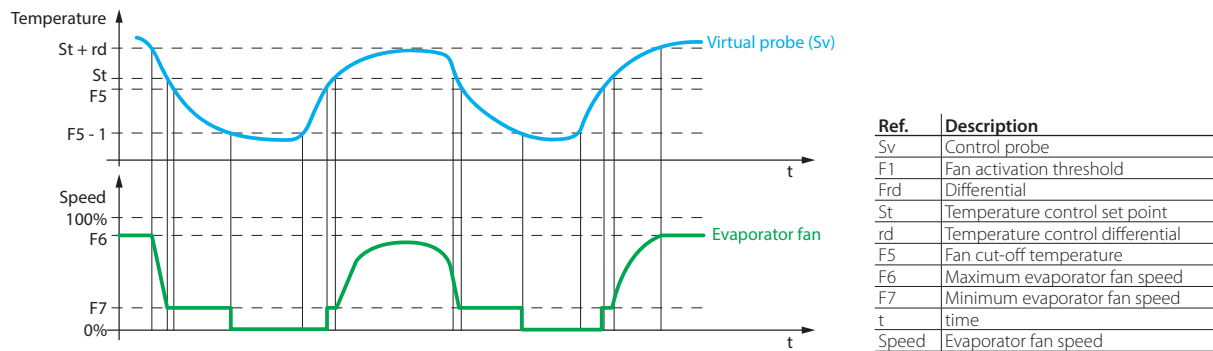


Fig. 6.as

Notice: The behaviour of the variable speed fans can be influenced not only by the "cooling" request and by the temperature, but also by other control functions (dehumidification, humidification and heating), if available.

Notice: if two defrost probes are configured (Sd1 and Sd2), the fan speed is calculated in relation to the probe that measures the higher temperature (to limit the influx of warm air):

- if $Sd > Sd2 \rightarrow$ control on Sd;
- if $Sd < Sd2 \rightarrow$ control on Sd2.

Advanced evaporator fan parameters

Due to the mechanical inertia of the motor, some EC fans cannot start at the minimum speed set by parameter F7. To solve this problem, the fans can start at the maximum speed set by parameter F6 for a "start-up time", defined by parameter F8, regardless of the defrost temperature Sd. Vice-versa, if the fan operates too long at low speed, ice may form on the blades; to avoid this, at intervals of every F10 minutes, the fan is switched on at maximum speed for the time set for parameter F8.

Code	Description	Def	Min	Max	UOM	User	User terminal
F6	Maximum evaporator fan speed	100	F7	100	%	M	NO
F7	Minimum evaporator fan speed	0	0	F6	%	M	NO
F8	Evaporator fan start-up time 0 = Function disabled	0	0	240	s	M	NO
F10	Evaporator fan forcing time at maximum speed 0 = Function disabled	0	0	240	min	M	NO

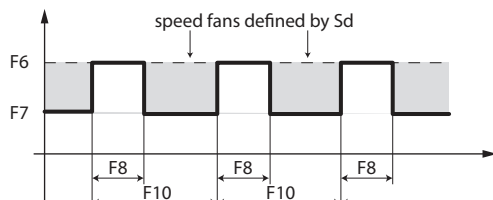


Fig. 6.at

Variable-speed evaporator fans with humidity control

When the humidity control function is active, the fans will operate at maximum between the fixed speed set by parameter F7h and the speed calculated by the controller, for the entire duration of the process.

Par.	Description	Def	Min	Max	UOM	User	User terminal
F7h	Minimum evaporator fan speed during humidification	10	0	100	%	M	NO

If F2 = 3, when the compressor is off, the fan is controlled based on the humidity level set by parameter HU, selected between three humidity levels: low, medium and high, which correspond to three different fan speeds.

Par.	Description	Def	Min	Max	UOM	User	User terminal
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off with compressor off; 2 = on for anti-stratification; 3 = on for humidity control.	1	0	3	-	S	NO
F20	Modulating evaporator fan speed with low humidity level	10	0	100	%	M	NO
F21	Modulating evaporator fan speed with medium humidity level	10	0	100	%	M	NO
F22	Modulating evaporator fan speed with high humidity level	10	0	100	%	M	NO
HU	Humidity level: 0 = low; 1 = medium; 2 = high	1	0	2	-	U	NO

During the dehumidification phase, when the compressor is off, the fan operates at the speed set for FSh.

Par.	Description	Def	Min	Max	UOM	User	User terminal
FSh	Modulating evaporator fan speed in dehumidification	40	0	100	%	M	NO

6.18 Condenser fans

The condenser fans can be fixed speed (On/Off) or variable speed (modulating 0-10 V).

 **Notice:** variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To assign the On/Off or modulating output, use the parameters shown in the table.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOt	Assign condenser fan digital output - see DOA	0	0	6	-	U	NO
rOt	Condenser fan digital output logic - see rOA	0	0	1	-	M	NO
/AE	Assign analogue output for modulating condenser fan - see /AA	0	0	2	-	M	NO
/P5	Configuration of analogue output Y1: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	M	NO
/P6	Configuration of analogue output Y2: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	M	NO

 **Notice:** if an analogue output is assigned to the variable-speed condenser fan function and the condenser fan is also assigned to a relay output, both outputs will be active at the same time; if the speed is greater than 0, the relay will remain active (closed):

- if speed (Y2) > 0 → "FAN" relay ON (NO* closed)
- if speed (Y2) = 0 → "FAN" relay OFF (NO* open)

6.18.1 Fixed-speed condenser fans

To activate the algorithm, simply assign a relay output to the condenser fan function. The condensing temperature probe also needs to be configured if required for control. See "Inputs and outputs".

The parameters used to manage fixed-speed fans are shown below (see the connection diagram).

Par.	Description	Def	Min	Max	UOM	User	User terminal
F00	Condenser fan management: 0 = always on with compressor on 1 = activation based on Sc, off with compressor off 2 = activation based on Sc	0	0	3	-	S	NO
F4	Condenser fan deactivation temperature	40/104	-50/-58	200/392	°C/°F	S	NO
F5d	Condenser fan activation differential	5/9	0.1/0.2	60/108	°C/°F	S	NO

iJF manages the condenser fans as follows:

- F00 = 0 on when the compressor is on;
- F00 = 1 on/off based on the condensing temperature probe Sc; off with the compressor off;
- F00 = 2 on/off based on the condensing temperature probe Sc (independent of compressor status).

If parameter F00 = 0, the condenser fans are on when the compressor is on, regardless of the condensing temperature.

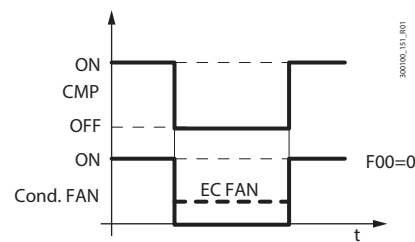


Fig. 6.au

If parameter F00 = 1, the condenser fans are on/off based on the condensing temperature. When the compressor is first started, the condenser fan will start at $F4 + 0.2^{\circ}\text{C}$ (3.6°F) degrees to compensate for rapid increases in temperature that the probe reading cannot react to. Subsequently, the fan switches on and off at $F4 + F5d$ and $F4$.

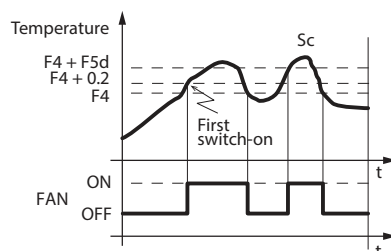


Fig. 6.av

Ref.	Description
Sc	Condensing temperature probe
F4	Fan deactivation threshold
F5d	Differential
t	time
FAN	Condenser fans

The fan control mode when F00=2 is exactly the same as in the previous case (F00=1). The only difference is that fans are switched off not based on the compressor status, but exclusively on the condensing temperature probe reading.

6.18.2 Variable-speed condenser fans (EC fans)

Variable-speed fans may be useful for optimising energy consumption. In this case, the fans are powered by the mains, while the control signal may come via output Y1 or Y2 on the iJF controller, set as 0-10 Vdc.


Notice: variable speed fans are only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

To activate the algorithm, simply assign an analogue output to the variable-speed condenser fan function by setting the type of output accordingly. The condensing temperature probe also needs to be configured. See "Inputs and outputs".

The maximum and minimum fan speed can be set using parameters FCH and FCL (as a percentage of the range 0-10 V). The fan speed varies proportionally across the range of modulation. For example, if $Sc = F4 - F5d/2 \rightarrow$ output Y2 corresponds to the percentage $(FCH + FCL)/2$.

If using the fan speed controller, F4 represents the temperature below which the fans are deactivated, with a deactivation hysteresis equal to FCC.

Par.	Description	Def	Min	Max	UOM	User	User terminal
FCC	Modulating condenser fan cut-off temperature	2/3.6	0	50/90	°C/°F	M	NO
FCL	Minimum modulating condenser fan speed	0	0	100	%	M	NO
FCH	Maximum modulating condenser fan speed	100	0	100	%	M	NO

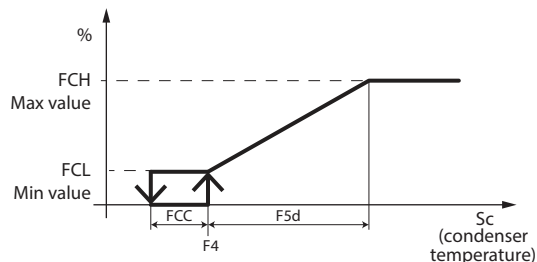

Ref.	Description
Sc	Condenser probe
F4	Fan deactivation threshold
F5d	Differential
FCC	Fan cut-off temperature
FCH	Maximum speed
FCL	Minimum speed

Fig. 6.aw

6.18.3 Dual-speed condenser fans

Dual-speed condenser fans may be useful to more precisely control the condensing temperature and thus optimise energy consumption. To activate the algorithm, simply assign a relay output to the condenser fan high speed DOah and condenser fan low speed DOad functions; the function is set by parameter F23, as follows:

- F23 = 0 Function disabled,
- F23 = 1 Control based on the operating frequency of the compressor Vs_r,
If Vs_r > F24 FOah = 1, FOad = 0
If Vs_r ≤ F24 FOah = 0, FOad = 1
- F23 = 2 Control based on the condensing temperature Sc,
If Sc > F25 FOah = 1, FOad = 0
If Sc ≤ F25 FOah = 0, FOad = 1
- F23 = 3 Control according to Eco mode status dAS,
If dAS = 1 (Eco mode not active) FOah = 1, FOad = 0
If dAS = 0 (Eco mode active) FOah = 0, FOad = 1

Par.	Description	Def	Min	Max	UOM	User	User terminal
F23	Dual-speed condenser fan function 0 = Function disabled 1 = based on compressor frequency Vs _r 2 = based on the condensing temperature Sc 3 = based on Eco mode status dAS	0	0	3	-	S	NO
F24	Frequency threshold for dual-speed condenser fans	0	cnf	cMf	Hz	M	NO
F25	Temperature threshold for dual-speed condenser fans	0	-50/-58	50/ 122	°C/°F	M	NO
DOah	Assign condenser fan high speed digital output - see DOA	0	0	6	-	U	NO
DOad	Assign condenser fan low speed digital output - see DOA	0	0	6	-	U	NO
FOah	Condenser fan high speed digital output status	0	0	1	-	U	NO
FOad	Condenser fan low speed digital output status	0	0	1	-	U	NO
rOah	Condenser fan high speed digital output logic	0	0	1	-	S	NO
rOad	Condenser fan low speed digital output logic	0	0	1	-	S	NO
dAS	Controller mode: 0 = Eco, 1 = Day	1	0	1	-	U	NO

6.19 Humidity management

iJF can manage humidity with or without a humidity probe.

If a probe is available, iJF can interact with external systems by managing the humidity level in combination with cooling control.

iJF is compatible with the CAREL humiSonic, MC Multizone and humiDisk humidification systems.

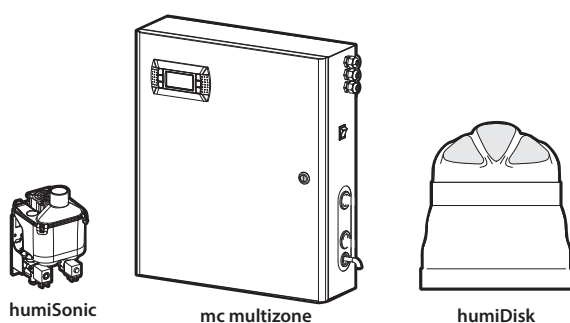


Fig. 6.ax

6.19.1 Humidity control without probe

If no humidity probe is available, humidity control can be performed in three levels, through evaporator fan duty cycles and changing the control temperature differential. See "Humidity management with evaporator fan cycles".

6.19.2 Humidity control with probe

Notice: the humidity probe is only available on models with an option that includes the 0-5 V analogue input, see "Introduction".

Par.	Description	Def	Min	Max	UOM	User	User terminal
/FP	Assign humidity probe (fixed on S5)	0	5	5	-	U	NO
/cP	Humidity probe calibration	0	-20	20	% rH	M	NO

The probe reading can be shown on the display by setting parameter /t1 or can be read under item SHu in the direct functions menu. Furthermore, parameter /ta can be used to alternate the display of the temperature/humidity values.

6.19.3 Humidification output settings

To activate the humidifier, a relay needs to be assigned to the "humidifier" function.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOu	Assign humidification digital output - see DOA	0	0	6	-	U	NO
rOu	Humidification digital output logic - see rOA	0	0	1	-	M	NO

6.19.4 Dehumidification output settings

To activate an external dehumidifier, a relay needs to be assigned to the "external dehumidifier" function, and in this case its logic will be completely uncoupled from the compressor logic.

Par.	Descrizione	Def	Min	Max	U.M.	Utente	Terminale utente
DOz	Assign external dehumidifier digital output - see DOA	0	0	6	-	U	NO
rOz	External dehumidifier digital output logic - see rOA	0	0	1	-	M	NO

As well as by an external dehumidifier, dehumidification can also be controlled through simultaneous action of the compressor and a heater; in this case, a relay needs to be assigned to the "dehumidification heater" function. To activate dehumidification, simultaneous cooling (compressor) and heating (heater) are required. The effect of cooling is to lower the air relative humidity, while the heater then offsets the excessive cooling, so as to maintain a virtually constant temperature during the process. The dehumidification heater is activated with a fixed differential of 1°C below the temperature control set point, as shown in the figure.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOj	Assign dehumidification heater digital output - see DOA	0	0	6	-	U	NO
rOj	Dehumidification digital output logic - see rOA	0	0	1	-	M	NO

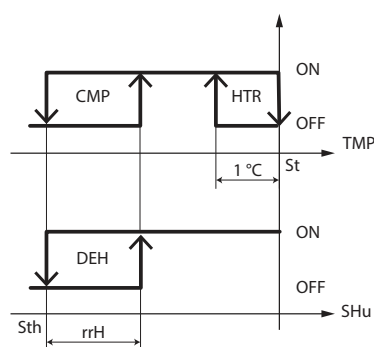


Fig. 6.ay

Ref.	Description
CMP	Compressor
HTR	Dehumidification heater
DEH	External dehumidifier
TMP	Temperature
SHu	Humidity
St	Temperature control set point
Sth	Humidity control set point
rrH	Dehumidification differential

6.19.5 Humidity control

Humidification

The control logic for humidity control with probe is shown in the figure. When the humidity falls below the humidity set point S_{th} plus the humidity differential rdh , the humidification output is activated.

Par.	Description	Def	Min	Max	UOM	User	User terminal
S_{th}	Humidity control set point	90	0.0	100.0	% rH	U	YES
rdh	Humidity control differential	5	0.1	99.9	% rH	S	YES
$F4r$	Humidification output during defrosts: 0 = active based on humidity control; 1 = deactivated during defrosts	0	0	1	-	M	YES

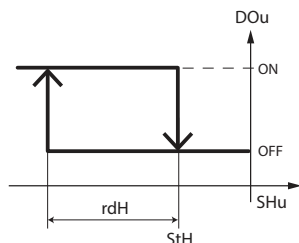


Fig. 6.az

Ref.	Description
SHu	Humidity control probe
S_{th}	Humidity control set point
rdh	Humidity control differential
DOu	Humidification outlet



Notice: parameter $F4r$ is used to decide whether or not to disable the humidification output during defrosts:

- $F4r=0$ -> humidification output active based on humidity control;
- $F4r=1$ -> humidification output disabled during defrosts, regardless of the request.



Notice: the humidification output is always deactivated in the event of an alarm that stops the compressor immediately.

Examples:

- Alarm CHt;
- Alarm IA (when $A6 = 0$).

Dehumidification

For humidity control with probe, the dehumidification function can also be managed. The control logic is shown in the figure. When the humidity rises above the humidity set point S_{th} plus the humidity differential rrh , the dehumidification output is activated.

Par.	Description	Def	Min	Max	UOM	User	User terminal
S_{th}	Humidity control set point	90	0.0	100.0	% rH	U	YES
rrh	Dehumidification differential	5	0	50.0	Δ % rH	S	NO

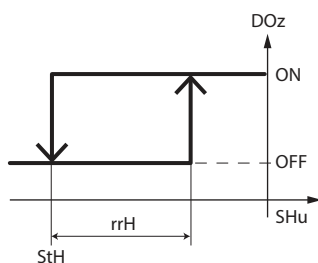


Fig. 6.ba

Ref.	Description
SHu	Humidity control probe
S_{th}	Humidity control set point
rrh	Dehumidification differential
DOz	Dehumidification output

Dead band

Humidity control in the dead band can be enabled by setting both the humidifier and dehumidifier outputs.

Par.	Description	Def	Min	Max	UOM	User	User terminal
S_{th}	Humidity control set point	90	0.0	100.0	% rH	U	YES
rdh	Humidity control differential	5	0.1	99.9	% rH	S	YES
rrh	Dehumidification differential	5	0	50.0	Δ % rH	S	NO
rnH	Dead band for humidity control	5	0	50.0	Δ % rH	S	NO

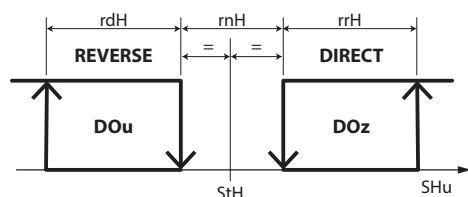


Fig. 6.bb

Ref.	Description
SHu	Humidity control probe
S_{th}	Humidity control set point
rdh	Humidity control differential
rrh	Dehumidification differential
rnH	Humidity dead band
DOu	Humidification outlet
DOz	Dehumidification output



Notice: parameter $F4r$ is used to decide whether or not to disable the humidification output during defrosts:

- $F4r=0$ -> humidification output active based on humidity control;
- $F4r=1$ -> humidification output disabled during defrosts, regardless of the request.

6.19.6 Simultaneous humidity and temperature control

With simultaneous humidity and temperature control, humidity control is generally independent of temperature control. Humidity control can be restricted to within a well-defined temperature range (parameters TLL and THL and the corresponding differential TdL), so as not to risk excessive temperature drift during humidity control.

Par.	Description	Def	Min	Max	UOM	User	User terminal
TLL	Minimum temperature to enable humidity control	0	-60/-76	60/140	°C/°F	S	NO
THL	Maximum temperature to enable humidity control	0	-60/-76	60/140	°C/°F	M	NO
TdL	Differential to enable humidity control	0	0	20/36	°C/°F	U	NO

 **Notice:** if parameters TLL and/or THL are set to 0, they are ignored for control purposes

Case 1: Humidity control independent of temperature (default)

The temperature is only controlled after the humidity reaches the set point. This is the default setting, with TLL and THL = 0

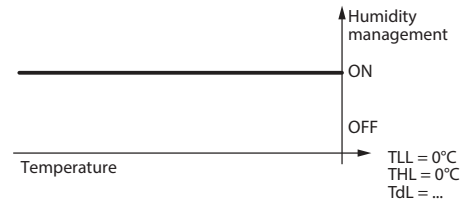


Fig. 6.bc

Case 2: Humidity control within a set range

Priority is given to temperature control: humidity is controlled in a series of cycles, while always keeping the temperature in the range TLL-THL.

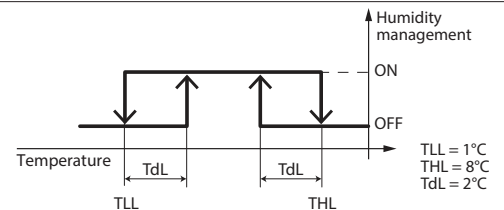


Fig. 6.bd

Case 3: Humidity control with high temperature limit

This configuration prevents the temperature from exceeding the limit (THL) during dehumidification, for example if the heater is oversized.

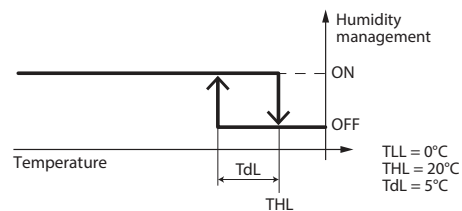


Fig. 6.be

Case 4: Humidity control with low temperature limit

This configuration allows humidification to be stopped below the threshold TLL threshold to avoid excessive cooling and lowering the temperature, for example if the heater is undersized.

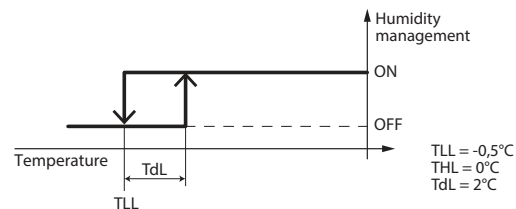


Fig. 6.bf

6.19.7 Humidity probe error

In the event of a humidity probe error, humidification and dehumidification are managed in duty cycles. This is only possible for humidification alone and dehumidification alone; with dead band control, both outputs remain off.

Par.	Description	Def	Min	Max	UOM	User	User terminal
uof	OFF time for humidity duty setting operation	60	c2	120	min	M	NO
uon	ON time for humidity duty setting operation	10	c3	120	min	M	NO

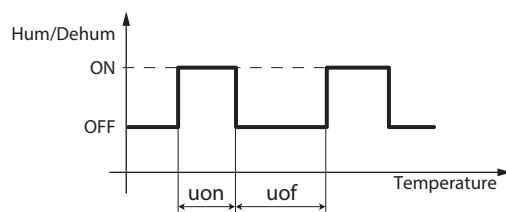


Fig. 6.bg

Ref	Description
Hum	Humidification outlet
Dehum	Dehumidification output

6.20 Light management

The light can be controlled by several sources: button, supervisor, door switch, curtain switch and time band.
The light is switched on or off based on an event:

Light	Action
Button	Pressing the button
Supervisor	Variation of the value from the supervisor (parameter Lht)
Door switch	Contact transition (opening/closing)
Curtain switch	Contact transition (opening/closing)
Time band	based on the on/off day, hours, minutes

Tab. 6.p

When the digital inputs are stable (door switch or curtain switch), the light can be switched on and off from the keypad or supervisor.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOE	Assign light digital output - see DOA	4 (small) 3 (large/XL)	0	6	-	U	NO
rOE	Light digital output logic - see rOA	0	0	1	-	S	NO
/AF	Assign analogue output for modulating lights - see /AA	0	0	2	-	M	NO
HL	Modulating light output activation percentage: 0 = 0%; 1 = 25%; 2 = 50%; 3 = 75%; 4 = 100%	2	0	4	-	U	NO

By setting the analogue output as a light (on part numbers where available), the output can be modulated with four intensity levels, using parameter HL (0, 25, 50, 75 and 100%).

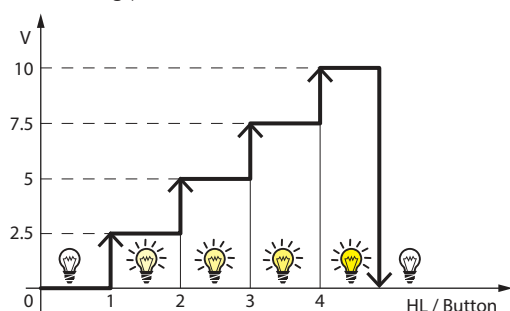


Fig. 6.bh

6.21 Door management

iJF can manage the opening of the door with or without stopping temperature control, based on the setting of the door switch.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DIE	Assign door switch with compressor OFF digital input - see DIA	0	0	4	-	U	NO
DIP	Assign door switch without compressor OFF digital input - see DIA	0	0	4	-	U	NO
rIE	Door switch with compressor OFF digital input logic - see rIA	0	0	1	-	S	NO
rIP	Door switch without compressor OFF digital input logic - see rIA	0	0	1	-	S	NO

If the digital input is configured as a door switch with compressor off (parameter DIE), when the door is opened both the compressor and the evaporator fans are stopped; on the other hand, if configured as a door switch without compressor off (parameter DIP), when the door is opened only the evaporator fans are stopped.

Par.	Description	Def	Min	Max	UOM	User	User terminal
H14	Time light stays on after closing the door	0	0	240	min	U	NO
Ad	Delay time for high and low temp. alarms (AH, AL)	120	0	240	min	U	YES
Add	Open door alarm delay and high temperature alarm bypass time for open door	5	0	240	min	U	YES

When the door is open, the high temperature alarm is ignored for the time set using parameter Add, to avoid false alarms, and the service icon flashes to signal a warning condition. When time Add has elapsed, the following occur:

- the open door alarm (dor) is signalled;
- compressor and evaporator fan control resumes;
- the light stays on;
- after the delay time set by parameter Ad, the high temperature alarm is activated.

When closing the door:

- control resumes, restarting the compressor and evaporator fans if required;
- the light switches off after the time set by parameter H14 and the high temperature alarm is activated after the delay Ad.

When control resumes, the compressor safety times c1 and c2 are observed.

6.22 Door - light interactions

In the absence of time bands, opening the door always activates normal operating mode, which lasts until a different mode is selected via keypad or BMS. The light switches on when the door is opened and switches off when it closes, with a delay equal to H14, if set.

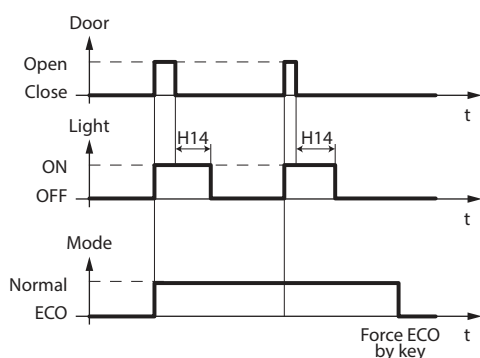


Fig. 6.bi

If time bands are set to define eco/normal mode, the light will follow these rules by switching on in normal mode and off in eco mode. Opening the door will switch back to normal mode and switch on the light.

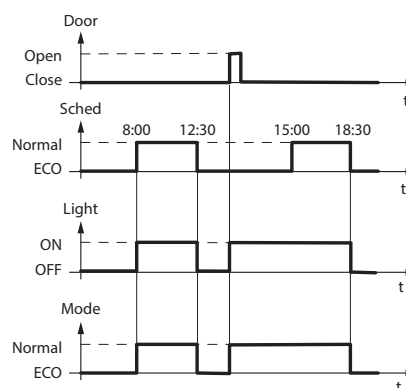


Fig. 6.bj

Par.	Description	Def	Min	Max	UOM	User	User terminal
H8	Output switched with time bands: 0 = Light; 1 = AUX	0	0	1	-	S	NO

The time bands can be associated with the AUX output rather than the light, by setting parameter H8. In this case, the light will reflect the position of the door, switching on and off respectively when the door is opened and closed.

It is possible to unlink door-light interaction via parameter dLo.

Par.	Description	Def	Min	Max	UOM	User	User term.
dLo	Unlink interaction between light and door 0 = light is switched by door, scheduler and HMI; 1 = light is switched by door and HMI; 2 = light is switched by HMI	0	0	2	-	U	NO

6.23 Curtain management

Par.	Description	Def	Min	Max	UOM	User	User terminal
DiG	Assign curtain switch digital input - see DiA	0	0	4	-	U	NO
rIG	Curtain switch digital input logic - see rIA	0	0	1	-	S	NO

If the digital input is associated with the curtain switch, when the curtain is closed the controller activates ECO mode and the set point is modified by adding the value of parameter "r4". When the curtain is open, the light is always switched on.



Notice: in eco mode, the value $St+r4$ is used for all of the functions that involve the set point (e.g. relative high and low temperature alarms, control with dead band, two-stage compressor control, etc.).

6.24 Generic functions

iJF can exploit unused inputs and outputs to configure a "generic function". Each generic function can be enabled/disabled in the Applica app or Spark program.



Caution: the generic functions available vary according to the model of controller.

The following can be activated (maximum configuration):

- 1 generic function with On/Off output;
- 1 generic function with modulating output (only for models where this is available);
- 1 generic alarm function (signal only).

The generic function can be controlled based on one of the following:

- 1 specific probe;
- difference between 2 suitably configured probes.



Caution: the controller cannot verify the consistency of the settings, if two analogue functions are mistakenly assigned to the same analogue inputs or the same digital output.

6.24.1 Enabling

The generic function can be enabled always, or when the unit is in a certain status.

Par.	Description	Def	Min	Max	UOM	User	User terminal
GFA_E	Generic alarm function: enable	0	0	10	-	M	NO
0	Always	6	Duty setting				
1	Unit ON	7	Standby				
2	Unit OFF	8	Compressor or reverse output active				
3	Defrost	9	Door open				
4	Not used	10	Alarm active				
5	Continuous cycle						
GFM_E	Generic modulating function: enable - see GFA_E	0	0	10	-	M	NO
GFS_E	Generic On/Off function: enable - see GFA_E	0	0	10	-	M	NO

Assign control probe

Select the control probes for the generic function.

Par.	Description	Def	Min	Max	UOM	User	User term.
GFA_1	Generic alarm function: control probe 1	0	0	20	-	M	NO
0	Not configured	11	Glass temperature				
1	Outlet temperature (Sm)	12	Not used				
2	Defrost temperature (Sd)	13	Condensing temperature				
3	Intake temperature (Sr)	14	Humidity				
4	Not used	15	Frost protection temperature				
5	Not used	16	Product temperature				
6	Auxiliary evaporator defrost temperature (Sd2)	17	Not used				
7	Auxiliary probe 1	18	Power present				
8	Auxiliary probe 2	19	Evaporator fan request				
9	Ambient temperature	20	Control probe				
10	Not used						
GFA_2	Generic alarm function: control probe 2 - see GFA_1	0	0	20	-	M	NO
GFM_1	Generic modulating function: control probe 1 - see GFA_1	0	0	20	-	M	NO
GFM_2	Generic modulating function: control probe 2 - see GFA_1	0	0	20	-	M	NO
GFS_1	Generic On/Off function: control probe 1 - see GFA_1	0	0	20	-	M	NO
GFS_2	Generic On/Off function: control probe 2 - see GFA_1	0	0	20	-	M	NO

6.24.2 On/Off output

Assign the digital output for the generic function, the type (direct/reverse) and the activation logic (see parameter rOA).

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOS	Assign generic On/Off function digital output - see DOA	0	0	6	-	U	NO
rOS	Generic On/Off function digital output logic - see rOA	0	0	1	-	S	NO
GFS_D	Generic On/Off function: differential	0	0	99.9	-	S	NO
GFS_S	Generic On/Off function: set point	0	-99	999	-	M	NO
GFS_T	Generic On/Off function: type 0= Direct; 1= Reverse	0	0	1	-	M	NO

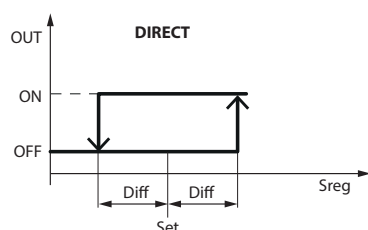


Fig. 6.bk

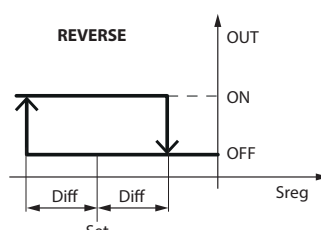


Fig. 6.bl

Ref.	Description
Set	Set point (GFS_S)
Diff	Differential (GFS_D)
Sreg	Control probe 1 or Control probe 1 - Control probe 2
OUT	Digital output

6.24.3 Modulating output



Notice: the generic function with modulating output is only available on models with analogue outputs Y1 and Y2, PWM or 0-10 V, see "Introduction".

Assign the modulating output for the generic function and the type (direct/reverse). It is possible to use proportional control only or PID, as well as a cut-off differential with hysteresis.

Par.	Description	Def	Min	Max	UOM	User	User terminal
/Ad	Assign analogue output for generic modulating function - see /AA	0	0	2	-	M	NO
/P5	Configuration of analogue output Y1: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
/P6	Configuration of analogue output Y2: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
GFM_CD	Generic modulating function: cut-off differential	0	0	20	-	S	NO
GFM_D	Generic modulating function: differential	0	0	99.9	-	S	NO
GFM_H	Generic modulating function: hysteresis	0.1	0.1	20	-	M	NO
GFM_Kp	Generic modulating function: proportional gain	0	0	100	-	M	NO
GFM_Max	Generic modulating function: max output value	0	0	100	%	M	NO
GFM_Min	Generic modulating function: min output value	0	0	100	%	M	NO
GFM_S	Generic modulating function: set point	0	-99	999	-	S	NO
GFM_T	Generic modulating function: type 0=direct; 1=reverse	0	0	1	-	M	NO
GFM_Td	Generic modulating function: derivative time	0	0	100	s	S	NO
GFM_Ti	Generic modulating function: integral time	0	0	900	s	S	NO

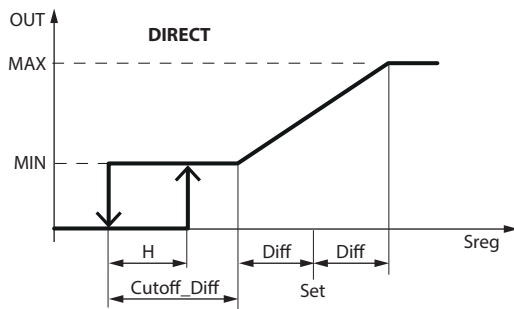


Fig. 6.bm

Ref.	Description
Set	Set point (GFM_S)
Diff	Differential (GFM_D)
H	Hysteresis (GFM_H)
Sreg	Control probe 1 or Control probe1 - Control probe 2
OUT	Digital output
CutOff_Diff	Cut-off differential (GFM_CD)

6.24.4 Alarm signal

The alarm can be signalled for two reasons:

1. switching of the digital input, assigned by parameter DIS: the display shows "GHI"
2. if the difference between the values of the control probes exceeds the high or low threshold for a time longer than GFA_De: the display shows GHI or GLO respectively.



Notice: check that the alarm is generated by only one of the two causes.



Notice: the generic alarm can be configured as a warning or a serious alarm by setting parameter GFA_AIType.

The generic alarm function reset can be configured as: automatic (default), semi-automatic or manual.

For semi-automatic reset, the number of alarm occurrences and relative time interval

before requiring manual reset directly from the display (rsa), supervisor or APPLICA can be defined.

Par.	Description	Def	Min	Max	UOM	User	User terminal
GFA_D	Generic alarm function: differential	0	0	99.9	-	S	NO
GFA_De	General alarm function: delay	0	0	30000	s	S	NO
GFA_Hth	Generic alarm function: high temperature threshold	0	GFA_Lth	999	-	S	NO
GFA_Lth	General alarm function: low temperature threshold	0	-99	GFA_Hth	-	S	NO
GFA_AIType	Generic alarm function: type 0 = signal, 1 = serious	0	0	1	-	S	NO
GFA_r	Generic alarm function: reset type 0 = automatic; 1 = semi-automatic; 2 = manual.	0	0	2	-	S	NO
GFA_n	Generic alarm function: number of occurrences for semi-automatic alarm reset	0	0	99	-	S	NO
GFA_P	Generic alarm function: time period to monitor semi-automatic alarm reset	0	0	999	min	S	NO

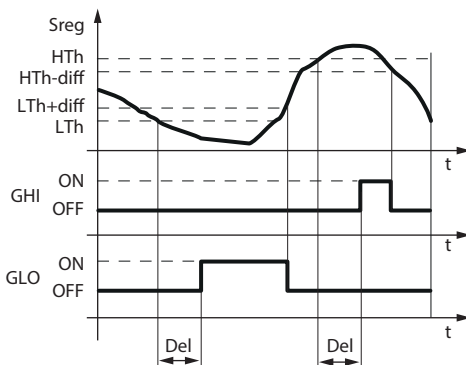



Fig. 6.bn

Ref.	Description
Lth	Low temperature threshold (GFA_Lth)
HTh	High temperature threshold (GFA_Hth)
diff	Differential (GFA_D)
Del	Delay (GFA_De)
Sreg	Control probe 1 or Control probe1 - Control probe 2
t	Time
GHI	High temperature alarm message
GLO	Low temperature alarm message

6.25 Anti-sweat heater or fan

The anti-sweat function in iJF has fixed activation (not based on a glass temperature probe reading) and can control a heater or fan, with the purpose of demisting the showcase glass using the activation and deactivation times set for parameters rHU and rHt.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOQ	Assign anti-sweat heater digital output - see DOA	0	0	6	-	U	NO
rOq	Anti-sweat heater digital output logic - see rOA	0	0	1	-	S	NO
/Ac	Assign analogue output for modulating anti-sweat heaters - see /AA	0	0	2	-	M	NO
rHt	Manual anti-sweat heater activation period (0 = function disabled)	5	0	180	min	M	NO
rHU	Percentage of manual anti-sweat heater activation in period rHt (0 = function disabled)	70	0	100	%	M	NO

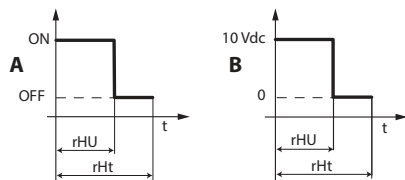

Ref.	Description
A	Relay output
B	Modulating output (0-10V)
rHU	Anti-sweat heater/fan activation percentage
rHt	Anti-sweat heater/fan activation time
t	time

Fig. 6.bo

If either or both of the parameters rHu or rHt is set to zero, the function is disabled.

6.26 Gasket heater

The function activates gasket heating cycles to make it easier to open the door when the control temperature is very low.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOx	Assign gasket heater digital output - see DOA	0	0	6	-	U	NO
rOx	Gasket heater digital output logic - see rOA	0	0	1	-	S	NO
OfT	Gasket heater OFF time	3	0	250	min	M	NO
OnT	Gasket heater ON time	5	0	250	min	M	NO
Rdrh	Gasket heater control differential	2 / 3.6	0.1 / 0.2	20 / 36	Δ °C / °F	M	NO
Strh	Gasket heater control set point	-18 / -0.4	-50 / -58	200 / 392	°C / °F	S	NO

When the control temperature reaches the set point Strh, the output is enabled and will start being activated cyclically based on the times set for parameters OnT and OfT.

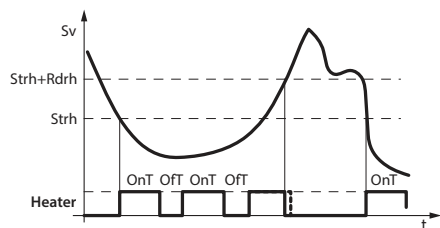


Fig. 6.bp

The output is deactivated when the temperature rises above Strh+Rdrh.

6.27 Condensate drain pan heater

This function heats the condensate drained during defrosting to prevent the drain line from freezing.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOP	Assign drain heater digital output - see DOA	0	0	6	-	U	NO
rOP	Drain heater digital output logic - see rOA	0	0	1	-	S	NO
dHA	Condensate drain heater activation time before defrosting	3	0	120	min	M	NO
dHE	Condensate drain heater activation time after defrost	2	1	dd	min	M	NO

If condensate drain heating is configured, the output is activated for the time set by parameter dHA before defrosting, and remains active for a time set by parameter dHE after defrosting.

6.27.1 Anti-heating

This function keeps the light and AUX outputs deactivated until the control temperature falls below $St + Hd_h$ when the following conditions occur:


- controller powered on;
- switching from Off to On;
- after resetting alarms HI, IA, dA, CHt, rE.

Par.	Description	Def	Min	Max	UOM	User	User terminal
Hdh	Delta for anti-heating function	0	0	200/360	Δ °C/°F	M	NO
St	Temperature control set point	50/122	r1	r2	°C/°F	U	YES

6.28 Temperature monitoring

The iJF controller can record the minimum value rL and maximum value rH read by one of the probes, selected by setting parameter rSc , across a time interval rt spanning from the last reset by parameter rtL to the present. The monitoring session can be reset at any time, after which the new maximum and minimum values are logged. Monitoring is active when parameter rM is set to 1.

Par.	Description	Def	Min	Max	UOM	User	User terminal
rM	Enable temperature monitoring: 0 = disabled; 1 = enabled	0	0	1	-	U	NO
rSc	Select probe to monitor 0 not configured 1 outlet temperature (Sm) 2 defrost temperature (Sd) 3 intake temperature (Sr) 4 not used 5 not used 6 auxiliary evaporator defrost temperature (Sd2) 7 auxiliary probe 1 8 auxiliary probe 2 9 ambient temperature 10 not used 11 glass temperature 12 not used 13 condensing temperature 14 humidity 15 frost protection temperature 16 product temperature	3	0	16	-	M	NO
rtL	Reset monitoring period	0	0	1	-	U	NO

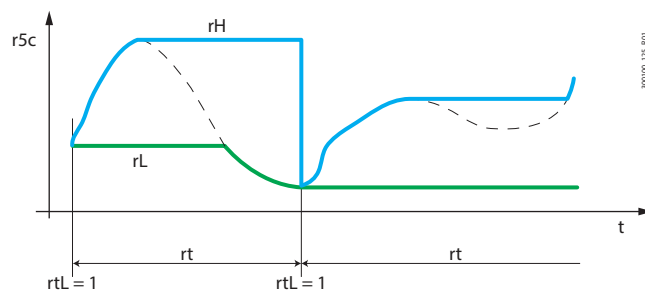

Ref.	Description
rtL	reset, restart monitoring
rL	minimum temperature value in the monitored period
rH	maximum temperature value in the monitored period
rt	Monitoring period
rSc	Variable monitored
t	time

Fig. 6.bq

Notice: temperature monitoring can only be activated on models fitted with RTC and with the clock set correctly.

Caution: the values of parameters rL and rH are stored every 10 minutes in the controller's internal memory. If the controller is not connected to a UPS, a momentary power failure can mean the values of rL and rH measured in the last 10 minutes will be lost. When power returns, the controller will automatically restart monitoring based on the previously stored values.

6.29 High and low voltage protection (HLVP)

⚠ Caution: the high and low voltage protection (HLVP) function is disabled by default. It is recommended to carefully read the following instructions for correct setup.

Some iJF models feature protection against high and low power supply voltages, allowing the compressor to operate only at voltages within the operating limits. This function stops the compressor if the mains voltage is outside of a range specified by parameters uHo and uLo. The compressor is switched off after a delay that can be set by parameter ucd. The compressor starts again when the voltage returns within the limits set by parameters uHI and uLI.

Par.	Description	Def	Min	Max	UOM	User	User terminal
c1	Min time between consecutive compressor starts	0	0	15	min	M	NO
c2	Min compressor OFF time	0	0	15	min	M	NO
c3	Min compressor ON time	0	0	15	min	M	NO
ucd	Compressor stop delay after HLVP protection activated	5	0	60	s	M	NO
udE	Enable display of HLVP protection alarms (EHI and ELO, see alarm table)	0	0	1	-	M	NO
uHI	High voltage protection start threshold	245	0	350	V	M	NO
uHo	High voltage protection end threshold	255	0	350	V	M	NO
uEn	Enable HLVP protection: 0 = disabled; 1 = enabled	0	0	1	-	M	NO
uLI	Low voltage protection start threshold	205	0	350	V	M	NO
uLo	Low voltage protection end threshold	195	0	350	V	M	NO

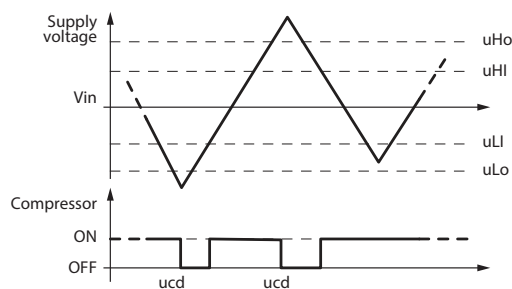


Fig. 6.br

📌 Notice: the compressor protection times c1 and c3 are ignored when the high or low voltage conditions occur, while c2 is always observed.

⚠ Caution:

- this function cannot be considered a compressor safety function;
- operation of the controller outside of the rated operating voltage range described in the technical specifications is the customer's responsibility.

6.30 Zero crossing

⚠ Caution: the zero crossing function is disabled by default. It is recommended to carefully read the following instructions for correct setup.

The iJF controller allows the relay to switch at the zero crossing voltage. This feature can be activated on each relay. The feature can be activated on each single relay by setting the value of the corresponding parameter DOT1-6 to 3. In the event of incorrect configuration (selecting a reserved value or setting zero crossing on HW that does not support it), the warning message "IOC" will be shown.

This notification will disappear only after having replaced the incorrect configuration with a correct one.

Par.	Description	Def	Min	Max	UOM	User	User terminal
DOT1	Enable zero crossing on digital output 1 (NO1). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO
DOT2	Enable zero crossing on digital output 2 (NO2). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO
DOT3	Enable zero crossing on digital output 3 (NO3). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO
DOT4	Enable zero crossing on digital output 4 (NO4). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO
DOT5	Enable zero crossing on digital output 5 (NO5). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO
DOT6	Enable zero crossing on digital output 6 (NO6). 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved.	0	0	3	-	M	NO

⚠ Caution: the load must be directly connected to the relay; before enabling zero crossing, check that there is no external relay; The load must be powered by the same phase as the controller.

7. PARAMETER TABLE

Below is the table of the parameters that can be displayed on the terminal or can be modified using the configuration software or Applica app. The Applica app and configuration tools have three predefined parameter access levels: User (U), Service (S) and Manufacturer (M). The default passwords to access the Service and Manufacturer parameters from the Applica app are 22 and 44 respectively. The Manufacturer level password also allows access to the Service parameters, and the level S password also allows access to the User parameters.

Par.	Description	Def	Min	Max	UOM	User	User terminal
PDM	Manufacturer password (OEM)	44	0	999	-	M	NO
PDS	Service password	22	0	999	-	S	NO
PDU	User password	0	0	999	-	U	NO

⚠ Caution: to avoid any fraudulent activities, the default password values should be changed at the end of the commissioning procedure. For example, with the Applica app, parameters PDM, PDS and PDU can be used to set new passwords, with a maximum length of 3 numbers.

📌 Notice:

- the read-only parameters are not visible from the Applica app using NFC, as NFC memory cannot be overwritten frequently;

⚠ Caution: the operation to reset the default values is not reversible, unless a user recipe has been previously saved for loading using the configuration tool/Applica app, see the paragraph on the configurations.

To recover a forgotten password, proceed as follows:

- Service password:** contact the manufacturer directly;
- User password:** contact service.

7.1 Parameter table

Code	Description	Def.	Min	Max	U.M	User	User term.
/2	Analogue probe measurement stability: 0 = probe reading not delayed; ... 15 = maximum probe reading delay.	5	0	9	-	M	NO
/3	Display probe value: 0 = disabled; 1 = fast update; ... 15 = slow update.	0	0	15	-	M	NO
/4	Virtual probe composition: 0 = Air off probe (Sm) 100 = Air on probe (Sr)	0	0	100	%	S	NO
/5	Unit of measure: 0=°C; 1=°F	0	0	1	-	U	NO
/6	Display decimal point: 0=Yes; 1=No	0	0	1	-	S	YES
/7	Assign secondary control probe - see /d1	1	1	16	-	S	NO
/AA	Assign analogue output for modulating evaporator fan: 0=not configured; 1=analogue output 1 (Y1); 2=analogue output 2 (Y2).	0	0	2	-	M	NO
/Ac	Assign analogue output for modulating anti-sweat heaters - see /AA	0	0	2	-	M	NO
/Ad	Assign analogue output for generic modulating function - see /AA	0	0	2	-	M	NO
/AE	Assign analogue output for modulating condenser fan - see /AA	0	0	2	-	M	NO
/AF	Assign analogue output for modulating lights - see /AA	0	0	2	-	M	NO
/AG	Assign analogue output for modulating compressor - see /AA	0	0	2	-	M	NO
/cA	Air off temperature probe (Sm) calibration	0	-20/-36	20	°C/°F	S	NO
/cb	Defrost temperature probe (Sd) calibration	0	-20/-36	20	°C/°F	S	NO
/cc	Air on temperature probe (Sr) calibration	0	-20/-36	20	°C/°F	S	NO
/cF	Auxiliary evaporator defrost temperature probe (Sd2) calibration	0	-20/-36	20/36	°C/°F	S	NO
/cq	Auxiliary temperature probe 1 calibration	0	-20/-36	20/36	°C/°F	S	NO
/cH	Auxiliary temperature probe 2 calibration	0	-20/-36	20/36	°C/°F	S	NO
/cl	Room temperature probe calibration	0	-20/-36	20/36	°C/°F	S	NO
/cM	Glass temperature probe calibration	0	-20/-36	20/36	°C/°F	S	NO
/co	Condensing temperature probe calibration	0	-20/-36	20/36	°C/°F	S	NO
/cp	Humidity probe calibration	0	-20	20	%rH	S	NO
/cq	Frost protection temperature probe calibration	0	-20/-36	20/36	°C/°F	S	NO
/cr	Product temperature probe calibration	0	-20/-36	20/36	°C/°F	S	NO
/d1	Assign end defrost probe: 1 = outlet temperature (Sm); 2 = defrost temperature (Sd); 3 = intake temperature (Sr); 4 = not used; 5 = not used; 6 = auxiliary evaporator defrost temperature (Sd2); 7 = auxiliary probe 1; 8 = auxiliary probe 2; 9 = ambient temperature; 10 = not used; 11 = glass temperature; 12 = not used; 13 = condensing temperature; 14 = humidity; 15 = frost protection temperature; 16 = product temperature	2	1	16	-	M	NO
/d2	Assign auxiliary evaporator end defrost probe - see /d1	6	1	16	-	M	NO
/FA	Assign air off temperature probe (Sm): 0 = Function disabled 2 = Probe S2; 4 = Probe S4; 6 = Probe S1H; 1 = Probe S1; 3 = Probe S3; 5 = Reserved; 7 = Probe S2H;	1	0	7	-	U	NO
/Fb	Assign defrost temperature probe Sd - see /FA	0	0	7	-	U	NO
/Fc	Assign air on temperature probe Sr - see /FA	0	0	7	-	U	NO
/FF	Assign auxiliary evaporator defrost temperature probe Sd2 - see /FA	0	0	7	-	U	NO
/FG	Assign auxiliary temperature probe 1 - see /FA	0	0	7	-	U	NO
/FH	Assign auxiliary temperature probe 2 - see /FA	0	0	7	-	U	NO
/FI	Assign room temperature probe - see /FA	0	0	7	-	U	NO
/FM	Assign glass temperature probe - see /FA	0	0	7	-	U	NO
/Fo	Assign condensing temperature probe - see /FA	0	0	7	-	U	NO
/FP	Assign humidity probe (fixed on S5)	0	5	5	-	U	NO
/Fq	Assign frost protection temperature probe - see /FA	0	0	7	-	U	NO
/FR	Assign product temperature probe - see /FA	0	0	7	-	U	NO
/Lb	Status LED ON in standby: 0 = off; 1 = on.	0	0	1	-	M	NO
/nE	Lock HMI navigation: 0 = disabled, 1 = enabled	0	0	1	-	M	NO

Code	Description	Def.	Min	Max	U.M	User	User term.
/P1	Probe configuration: S1, S2, S3, S4: 0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT	2	0	4	-	S	NO
/P2	Configuration of input S3/DI1: 0, 1, 2, 3, 4 = S3; 5 = DI1.	5	0	5	-	S	NO
/P5	Configuration of analogue output Y1: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
/P6	Configuration of analogue output Y2: 7 = 0-10 V; 8 = VCC frequency (PWM)	8	7	8	-	S	NO
/P7	Configuration of multifunction input S1H/D1H: 2=S1H 5=D1H	2	2	5	-	S	NO
/Sb	PRG button always ON in standby: 0 = off; 1 = on.	1	0	1	-	M	NO
/t1	Display on user terminal: 0 = Not configured; 1 = value of S1; 2 = value of S2; 3 = value of S3; 4 = value of S4; 5 = value of S5; 6 = value of S1H; 7 = value of S2H; 8 = not available; 9 = virtual probe mitigated based on /3; 10 = virtual probe; 11 to 14 = not available; 15 = actual control set point;	9	0	15	-	S	YES
/t2	Display on remote display	10	0	16	-	S	NO
/ta	Temperature/humidity display alternating on HMI: 0=disabled 1=enabled	0	0	1	-	S	NO
A0	High and low temperature alarm reset differential	2/ 3.6	0.1/0.2	20/ 36	Δ °C/°F	M	NO
A1	Alarm thresholds (AL, AH) relative to the set point St or absolute: 0 = relative; 1 = absolute.	0	0	1	-	S	NO
A3	Defrost terminated after maximum time signal: 0 = disabled; 1 = enabled.	0	0	1	-	S	NO
A6	Stop compressor with external alarm (Toff = 15 minutes, fixed): 0 = compressor always OFF; 100 = compressor always ON.	0	0	100	min	M	NO
A7	Delay time for delayed external alarm (0 = signal-only alarm)	0	0	240	min	M	NO
Ac	Dirty condenser alarm threshold	70/158	0/ 32	250/482	°C/°F	M	NO
Acd	Dirty condenser alarm delay time	0	0	240	min	M	NO
Ad	Delay time for high and low temperature alarms (AH, AL)	120	0	240	min	U	YES
Add	Open door alarm delay and high temperature alarm bypass time for open door	5	0	240	min	U	YES
AE	Dirty condenser alarm reset differential	5	0.1/0.2	0.1/0.2	Δ °C/°F	M	NO
AF	Frost protection alarm threshold	-5/-9	-50/-58	200/392	°C/°F	S	NO
Afd	Frost protection alarm delay time	1	0	15	min	S	NO
AH	Relative high temperature alarm threshold	0	0	555/999	Δ °C/°F	U	YES
AHA	Absolute high temperature alarm threshold	537/999	-100/-148	537/999	°C/°F	U	YES
AL	Relative low temperature alarm threshold	0	0	200/360	Δ °C/°F	U	YES
ALA	Absolute low temperature alarm threshold	-100/-148	-100/-148	537/999	°C/°F	U	YES
AoutActTestMode[1]	Test via BMS serial port, analogue output Y1 value	0	0	1000	% x 10	(*)	NO
AoutActTestMode[2]	Test via BMS serial port, analogue output Y2 value	0	0	1000	% x 10	(*)	NO
AuC	Activate auxiliary output	0	0	1	-	U	NO
BtE	Enable Bluetooth connection: 0 = disabled; 1 = enabled.	1	0	1	-	M	NO
c0	Delay to enable compressor and evaporator fan at power on	0	0	15	min	M	NO
c1	Min time between consecutive compressor starts	0	0	15	min	M	NO
c10	End pump down: 0 = time; 1 = pressure.	0	0	1	-	M	NO
c11	Second compressor start delay	4	0	250	s	M	NO
c2	Minimum compressor OFF time	3	0	15	min	M	NO
c3	Minimum compressor ON time	0	0	15	min	M	NO
c4	ON time for duty setting operation (Toff = 15 minutes, fixed value): 0 = compressor always OFF; 100 = compressor always ON.	0	0	100	min	M	NO
c7	Defrost priority over continuous cycle: 0 = continuous cycle has priority; 1 = defrost has priority.	0	0	1	-	M	NO
c8	Compressor start delay after opening the pump down valve	5	0	60	s	M	NO
c9	Restart during pump down: 0 = disabled; 1 = enabled	0	0	1	-	M	NO
cc	Continuous cycle running time (0 = disabled)	0	0	72	h	M	NO
ccE	Set point delta to end continuous cycle	1.5/ 2.7	0	9.9/ 17.8	Δ °C/°F	M	NO
cct	VCC compressor off time	1	0	255	min	M	NO
cdf	VCC compressor frequency for hot gas defrost	140	0	255	Hz	M	NO
cdt	VCC compressor PID control derivative term	1	0	255	s	M	NO
cMA	Maximum VCC compressor rotation frequency	150	0	250	Hz	M	NO
cMf	Maximum VCC compressor control frequency	100	0	255	Hz	M	NO
cMi	VCC compressor switch-off frequency	30	0	250	Hz	M	NO
CnC	Start continuous cycle	0	0	1	-	M	NO
cnf	Minimum VCC compressor control frequency	52	0	255	Hz	M	NO
CoA	Display alarms detected by the inverter: 0 = display disabled; 1 = display enabled.	1	0	1	-	M	NO
CompFreqActTestMode	Test via BMS serial port, VCC compressor frequency	0	0	255	Hz	(*)	NO
cPr	VCC compressor PID control proportional term	2	0	800	-	M	NO
cPt	Maximum pump down time (0 = pump down disabled)	0	0	900	s	M	NO
cSc	Soft start frequency	53	0	255	Hz	M	NO
cSt	Soft start time	5	0	240	s	M	NO
Ctd	Maximum VCC inverter communication failure time before alarm is shown on the display (0 = display disabled)	15	0	60	s	M	NO
ctl	VCC compressor PID control integral term	120	0	999	s	M	NO
cuF	Conversion factor from frequency (Hz) to compressor speed (rpm)	30	0	999	-	M	NO
d0	Type of defrost: 0 = heater by temperature; 1 = hot gas by temperature; 2 = heater by time; 3 = hot gas by time; 4 = heater by time with temperature control	0	0	4	-	M	NO
d10	Running time defrost time (0 = function disabled)	0	0	240	min	M	NO
d11	Defrost temperature threshold in running time mode	-50/-58	-50/-58	50/122	°C/°F	M	NO
d15	Start defrost threshold	0	0	240	min	M	NO
d16	Time with no temperature decrease before starting defrost	30	Add	240	min	M	NO
d20	Sampling time for alarm rSF	0	0	240	min	M	NO
d21	Number of defrosts allowed before signalling alarm rSF	2	1	5	-	M	NO
d22	Temperature difference to verify decrease	0.1/ 0.2	0.1/ 0.2	0.5/ 0.9	Δ °C/°F	M	NO
d4	Enable defrost at power on	0	0	1	-	M	NO
d5	Defrost delay at start-up or after command from digital input	0	0	240	min	M	NO
d6	Display on terminals during defrost: 0 = temperature alternating with dEF; 1 = freeze display; 2 = 'dEF'.	1	0	2	-	S	YES
d7	Skip defrost: 0 = disabled; 1 = enabled.	0	0	1	-	M	NO
d8	Bypass high temperature alarm time after defrost	1	0	240	h	S	YES
d9	Defrost priority over compressor protection times: 0 = the compressor protection times are observed; 1 = the compressor protection times are ignored, therefore defrosting starts without waiting for the compressor protection times to elapse	0	0	1	-	M	NO
dAS	Controller mode: 0 = Eco, 1 = Day	1	0	1	-	U	NO
dC	Time base for defrosts: 0 = dl in hours, dP1 and dP2 in minutes; 1 = dl in minutes, dP1 and dP2 in seconds	0	0	1	-	S	NO
dC1	Time base for d8: 0 = d8 in hours; 1 = d8 in minutes	0	0	1	h	S	NO
dCH	Defrost after opening the door: maximum number of openings	50	dCL	99	-	M	NO
dCL	Defrost after opening the door: minimum number of openings	0	0	dCH	-	M	NO
dd	Dripping time	2	0	15	min	M	NO
ddF	VCC compressor frequency for dripping	140	cMi	255	Hz	M	NO
dFM	Start defrost	0	0	1	-	U	NO
dHA	Condensate drain pan heater activation time before defrosting	3	1	120	min	M	NO
dHE	Condensation drain pan heater activation time after defrosting	2	1	dd	min	M	NO
dHG	Waiting time for compressor start to switch hot gas valve	0	0	300	s	M	NO
dl	Maximum interval between consecutive defrosts	8	0	240	h	S	YES

Code	Description	Def.	Min	Max	U.M	User	User term.
DIA	Assign immediate external alarm digital input: 0 = Disabled; 1 = DI1; 2 = DI2; 3 = DI1H; 4 = DI2H	0	0	4	-	U	NO
DIb	Assign delayed external alarm digital input - see DIA	0	0	4	-	U	NO
Dlc	Assign enable defrost digital input - see DIA	0	0	4	-	U	NO
Dld	Assign start defrost digital input - see DIA	0	0	4	-	U	NO
DIE	Assign door switch with compressor OFF digital input - see DIA	0	0	4	-	U	NO
DIF	Assign remote ON/OFF digital input - see DIA	0	0	4	-	U	NO
DIG	Assign curtain switch digital input - see DIA	0	0	4	-	U	NO
DIH	Assign start/stop continuous cycle digital input - see DIA	0	0	4	-	U	NO
Dlo	Assign configuration change digital input - see DIA	0	0	4	-	U	NO
DIP	Assign door switch without compressor OFF digital input - see DIA	0	0	4	-	U	NO
DIS	Assign generic function alarm digital input logic - see DIA	0	0	4	-	U	NO
Dlt	Assign low pressure switch digital input - see DIA	0	0	4	-	U	NO
DIU	Assign AUX output activation digital input - see DIA	0	0	4	-	U	NO
dLo	Unlink interaction between light and door: 0 = light is switched by door, scheduler and HMI; 1 = light is switched by door and HMI; 2 = light is switched by HMI	0	0	2	-	U	NO
dn	Nominal defrost duration for skip defrost	75	0	100	%	M	NO
DOA	Assign solenoid/compressor digital output: 0 = not configured 1 = digital output 1 (NO1) 2 = digital output 2 (NO2) 3 = digital output 3 (NO3) 4 = digital output 4 (NO4) 5 = digital output 5 (NO5) 6 = digital output 6 (NO6)	1 (small) 5 (large/XL)	0	6	-	U	NO
DOad	Assign digital output for condenser fan low speed - see DOA	0	0	6	-	U	NO
DOah	Assign digital output for condenser fan high speed - see DOA	0	0	6	-	U	NO
DOb	Assign alarm digital output - see DOA	0 (small/XL) 2 (large)	0	6	-	U	NO
DOC	Assign AUX auxiliary digital output - see DOA	0 (small) 1 (large) 4 (XL)	0	6	-	U	NO
DOE	Assign light digital output - see DOA	4 (small) 3 (large/XL)	0	6	-	U	NO
DOG	Assign auxiliary evaporator defrost digital output - see DOA	2 (small) 6 (large) 1 (XL)	0	6	-	U	NO
DOH	Assign auxiliary evaporator defrost digital output - see DOA	0	0	6	-	U	NO
DOI	Assign evaporator fan digital output - see DOA	3 (small) 4 (large) 2 (XL)	0	6	-	U	NO
DOj	Assign dehumidification digital output - see DOA	0	0	6	-	U	NO
DOk	Assign auxiliary compressor without rotation digital output - see DOA	0	0	6	-	U	NO
DOn	Assign pump down valve digital output - see DOA	0	0	6	-	U	NO
DOP	Assign drain heater digital output - see DOA	0	0	6	-	U	NO
DOQ	Assign anti-sweat heater digital output - see DOA	0	0	6	-	U	NO
DOS	Assign generic On/Off function digital output - see DOA	0	0	6	-	U	NO
Dot	Assign condenser fan digital output - see DOA	0	0	6	-	U	NO
DOT1	Type of relay 1: 0 = normal; 1,2 = reserved; 3 = zero crossing enabled; 4 = reserved	0	0	3	-	M	NO
DOT2	Type of relay 2 - see DOT1	0	0	3	-	M	NO
DOT3	Type of relay 3 - see DOT1	0	0	3	-	M	NO
DOT4	Type of relay 4 - see DOT1	0	0	3	-	M	NO
DOT5	Type of relay 5 - see DOT1	0	0	3	-	M	NO
DOT6	Type of relay 6 - see DOT1	0	0	3	-	M	NO
DOu	Assign humidification digital output - see DOA	0	0	6	-	U	NO
DOv	Assign reverse digital output with dead band control - see DOA	0	0	6	-	U	NO
DOw	Assign auxiliary parallel compressor digital output - see DOA	0	0	6	-	U	NO
DOx	Assign gasket heater digital output - see DOA	0	0	6	-	U	NO
DOy	Assign auxiliary compressor with rotation digital output - see DOA	0	0	6	-	U	NO
DOz	Assign external dehumidifier digital output - see DOA	0	0	6	-	U	NO
dP1	Maximum defrost duration	45	1	240	min	S	YES
dP2	Max auxiliary evaporator defrost duration	45	1	240	min	S	YES
dPH	Defrost after opening the door: maximum defrost duration	15	dPL	dP1	min	M	NO
dPL	Defrost after opening the door: minimum defrost duration	5	0	dPH	min	M	NO
dS1	Compressor off time in sequential stop defrost mode (0 = function disabled)	0	0	45	min	M	NO
dS2	Compressor operating time in sequential stop defrost mode	120	0	240	min	M	NO
dt1	End defrost temperature (read by Sd)	4/39.2	-50/-58	50/122	°C/°F	S	YES
dt2	Auxiliary evaporator end defrost temperature (read by Sd2)	4/39.2	-50/-58	50/122	°C/°F	S	YES
F0	Evaporator fan management: 0 = always on; 1 = activation based on Sd - Sv; 2 = activation based on Sd; 3 = activation based on Sv.	0	0	3	-	S	NO
F00	Condenser fan management: Condenser fan management: 0 = always on with compressor on; 1 = activation based on Sc, off with compressor off; 2 = activation based on Sc.	0	0	2	-	S	NO
F1	Evaporator fan activation threshold	5/41	-50/-58	200/392	°C/°F	S	NO
F10	Evaporator fan time forced at max speed (0 = function disabled)	0	0	240	min	M	NO
F11	Fan ON time with low humidity level	60	0	600	s	M	NO
F12	Fan OFF time with low humidity level	120	0	600	s	M	NO
F13	Fan ON time with medium humidity level	120	0	600	s	M	NO
F14	Fan OFF time with medium humidity level	120	0	600	s	M	NO
F15	Fan ON time with high humidity level	180	0	600	s	M	NO
F16	Fan OFF time with medium humidity level	120	0	600	s	M	NO
F17	Temperature control differential for compressor activation with low humidity level	2.0/ 3.6	0.1/ 0.2	20/ 36	Δ °C/ °F	M	NO
F18	Temperature control differential for compressor activation with medium humidity level	2.0/ 3.6	0.1/ 0.2	20/ 36	Δ °C/ °F	M	NO
F19	Temperature control differential for compressor activation with high humidity level	2.0/ 3.6	0.1/ 0.2	20/ 36	Δ °C/ °F	M	NO
F2	Evaporator fans with compressor off: 0 = see F0; 1 = always off with compressor off; 2 = on for anti-stratification; 3 = on for humidity control.	1	0	3	-	S	NO
F20	Modulating evaporator fan speed with low humidity level	10	0	100	%	M	NO
F21	Modulating evaporator fan speed with medium humidity level	20	0	100	%	M	NO
F22	Modulating evaporator fan speed with high humidity level	30	0	100	%	M	NO
F23	Dual-speed condenser fan management	0	0	3	-	S	NO
F24	Dual-speed condenser fan frequency control threshold	0	cnf	cMf	Hz	M	NO
F25	Dual-speed condenser fan temperature control threshold	0	-50/-58	50/122	°C/°F	M	NO
F3	Evaporator fans during defrosts: 0 = on; 1 = off.	1	0	1	-	S	NO
F4	Condenser fan deactivation temperature	40/ 104	-50/-58	200/392	°C/°F	S	NO
F4r	Humidification output during defrosts: 0 = active based on humidity control; 1 = deactivated during defrosts	1	0	1	-	M	NO
F5	Evaporator fan cut-off temperature	5/41	F1	200/392	°C/°F	M	NO
F5d	Condenser fan activation differential	5/9	0.1/0.2	60/108	Δ °C/ °F	S	NO
F6	Maximum evaporator fan speed	100	F7	100	%	M	NO
F7	Minimum evaporator fan speed	0	0	F6	%	M	NO
F7h	Minimum evaporator fan speed during humidification	10	0	100	%	M	NO
F8	Fan start-up time (0 = function disabled)	0	0	240	s	M	NO
FCC	Modulating condenser fan cut-off temperature	2/3.6	0	50/90	°C/°F	M	NO

Code	Description	Def.	Min	Max	U.M	User	User term.
FCH	Maximum modulating condenser fan speed	100	0	100	%	M	NO
FCL	Minimum modulating condenser fan speed	0	0	100	%	M	NO
Fct_ALr_disable	Disable "Display alarms" direct function: 0 = direct function visible (if available); 1 = direct function not visible	0	0	1	-	(*)	NO
Fct_Auc_disable	Disable "Activate auxiliary output" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_BtE_disable	Disable "Enable Bluetooth" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_CnC_disable	Disable "Activate defrost" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_dFM_disable	Disable "Activate defrost" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Don_disable	Disable DOWN button in the direct functions menu: 0 = disabled; 1 = enabled.	0	0	1	-	(*)	NO
Fct_Ec1_disable	Disable "Load embedded configuration 1" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Ec2_disable	Disable "Load embedded configuration 2" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Eco_disable	Disable "Activate ECO mode" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Ent_disable	Disable ENTER button in the direct functions menu - see Fct_Don_disable	0	0	1	-	(*)	NO
Fct_Esc_disable	Disable ESC button in the direct functions menu - see Fct_Don_disable	0	0	1	-	(*)	NO
Fct_Fr_disable	Disable "Firmware version" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_HAC_disable	Disable "HACCP menu direct access" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_HL_disable	Disable "Dim lights" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_HU_disable	Disable "Set humidity level" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Lht_disable	Disable "Switch on lights" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_nFE_disable	Disable "Enable NFC memory" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_OnF_disable	Disable "Unit On/Off" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Pd_disable	Disable "Activate continuous cycle" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Prg_disable	Disable PRG button in the direct functions menu - see Fct_Don_disable	0	0	1	-	(*)	NO
Fct_rH_disable	Disable "Maximum control probe value" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_rL_disable	Disable "Minimum control probe value" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_rTL_disable	Disable "Reset min/max control probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_SAh_disable	Disable "View alarm log" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sc_disable	Disable "Condensing probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sc1_disable	Disable "Set quick set point 1" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sc2_disable	Disable "Set quick set point 2" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sc3_disable	Disable "Set quick set point 3" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sd_disable	Disable "Defrost probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_SHu_disable	Disable "Humidity probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sm_disable	Disable "Air off probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_SPr_disable	Disable "Product probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_SrG_disable	Disable "Control probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_St_disable	Disable direct function "Set control set point" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sth_disable	Disable "Set humidity set point" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Sv_disable	Disable "Control probe" direct function - see Fct_ALr_disable	0	0	1	-	(*)	NO
Fct_Up_disable	Disable UP button in the direct functions menu - see Fct_Don_disable	0	0	1	-	(*)	NO
Fd	Post dripping time	2	0	15	min	M	NO
Fd0	Evaporator fan ON time for anti-stratification during the day	5	1	100	min	M	NO
FdF	Evaporator fan OFF time for anti-stratification during the day (0 = always On during the day)	10	0	100	min	M	NO
Fn0	Evaporator fan ON time for anti-stratification at night	5	1	100	min	M	NO
FnF	Evaporator fan OFF time for anti-stratification at night (0 = always On at night)	20	0	100	min	M	NO
Fpd	Evaporator fans during post-dripping	1	0	1	-	M	NO
Frd	Fan activation differential	2/3.6	0.1/0.2	20/36	Δ °C/°F	S	NO
FSh	Modulating evaporator fan speed in dehumidification	40	0	100	%	M	NO
GFA_1	Generic alarm function, control probe 1: 0 = not configured; 1 = air off temperature (Sm); 2 = defrost temperature (Sd); 3 = air on temperature (Sr); 4 = not used; 5 = not used; 6 = auxiliary evaporator defrost temperature (Sd2); 7 = auxiliary probe 1; 8 = auxiliary probe 2 percentage request; 9 = ambient temperature; 10 = not used; 11 = glass temperature; 12 = not used; 13 = condensing temperature; 14 = humidity; 15 = frost protection temperature; 16 = product temperature; 17 = virtual probe (Sv); 18 = power supply voltage reading; 19 = evaporator fan; 20 = reserved;	0	0	20	-	S	NO
GFA_2	Generic alarm function, control probe 2	0	0	20	-	S	NO
GFA_AlType	Generic alarm function: type - 0 = Signal, 1 = Serious	0	0	1	-	S	NO
GFA_D	Generic alarm function, differential	0.1	0.1	99.9	-	S	NO
GFA_De	Generic alarm function, delay	0	0	30000	s	S	NO
GFA_E	Generic alarm function, enable 0 = always 1 = unit ON 2 = unit OFF 3 = defrost 4 = not used 5 = continuous cycle 6 = duty setting 7 = standby 8 = compressor or reverse output active 9 = open door 10 = active alarm	0	0	10	-	S	NO
GFA_Hth	Generic alarm function, high threshold	50	GFA_Lth	999	-	S	NO
GFA_Lth	Generic alarm function, low threshold	-50	-99	GFA_Hth	-	S	NO
GFA_n	Generic alarm function number of attempts for semi-automatic alarm reset	0	0	99	-	S	NO
GFA_P	Generic alarm function: evaluation period for semi-automatic reset	0	0	999	min	S	NO
GFA_r	Generic alarm function, reset type 0 = automatic; 1 = semi-automatic; 2 = manual.	0	0	2	-	S	NO
GFM_1	Generic modulating function: control probe 1 - see GFA_1	0	0	20	-	S	NO
GFM_2	Generic modulating function: control probe 2 - see GFA_1	0	0	20	-	S	NO
GFM_CD	Generic modulating function: cut-off differential	0.1	0.1	20	-	S	NO
GFM_D	Generic modulating function, differential	0.1	0.1	99.9	-	S	NO
GFM_E	Generic modulating function, enable - see GFA_E	0	0	10	-	S	NO
GFM_H	Generic modulating function, hysteresis	0.1	0.1	20	-	S	NO
GFM_kp	Generic modulating function, proportional gain	0	0	100	-	S	NO
GFM_max	Generic modulating function, maximum output value	0	0	100	%	S	NO
GFM_min	Generic modulating function, minimum output value	0	0	100	%	S	NO
GFM_S	Generic modulating function, set point	0	-99	999	-	S	NO
GFM_T	Generic modulating function, type: 0=direct; 1=reverse	0	0	1	-	S	NO
GFM_Td	Generic modulating function, derivative time	0	0	100	s	S	NO
GFM_Ti	Generic modulating function, integral time	0	0	900	s	S	NO
GFS_1	Generic On/Off function, control probe 1 - see GFA_1	0	0	20	-	S	NO
GFS_2	Generic On/Off function, control probe 2	0	0	20	-	S	NO
GFS_D	Generic On/Off function, differential	0	0	99.9	-	S	NO
GFS_E	Generic On/Off function, enable - see GFA_E	0	0	10	-	S	NO
GFS_S	Generic On/Off function, set point	0	-99	999	-	S	NO
GFS_T	Generic On/Off function: type: 0=direct; 1=reverse	0	0	1	-	S	NO
H0	Serial address	1	1	247	-	S	YES

Code	Description	Def.	Min	Max	U.M	User	User term.
H10	BMS communication speed: 0 = 1200 2 = 4800 4 = 19200 6 = 57600 1 = 2400 3 = 9600 5 = 38400 7 = 115200	4	0	8	-	S	YES
H11	BMS serial port configuration (stop bits and parity): 0 = 1 stop bit, no parity 3 = 2 stop bit, even parity 1 = 2 stop bit, no parity 4 = 1 stop bits, odd parity 2 = 1 stop bit, even parity 5 = 2 stop bits, odd parity	1	0	5	-	S	YES
H14	Time light stays on after closing the door	0	0	240	min	U	NO
H8	Output switched with time bands: 0 = Light; 1 = AUX.	0	0	1	-	S	NO
Hb	Buzzer: 0 = disabled; 1 = enabled.	1	0	1	-	U	YES
Hdh	Delta for anti-heating function	0	0	200/360	Δ °C/°F	M	NO
HL	Modulating light output activation percentage: 0 = 0%; 1 = 25%; 2 = 50%; 3 = 75%; 4 = 100%.	2	0	4	-	U	NO
HMP	Operating hour threshold for maintenance alarm hx1000	0	0	45	-	M	NO
HMr	Reset operating hours	-	0	1	-	S	NO
Htd	HACCP alarm delay (0 = monitoring disabled)	0	0	240	min	M	NO
HU	Humidity level: 0 = low; 1 = medium; 2 = high	1	0	2	-	U	YES
IS	Working configuration	0	0	IS_max	-	U	YES
Lht	Switch on light command	0	0	1	-	U	NO
MA1	Test mode: activate analogue output 1: 0 = disabled; 1 = automatic; 2 = activated at the value of MAr1.	0	0	2	-	S	NO
MA2	Test mode: activate analogue output 2: 0 = disabled; 1 = automatic; 2 = activated at the value of MAr1.	0	0	2	-	S	NO
MAC	Test mode: activate VCC output: 0 = disabled; 1 = automatic; 2 = activated at the value of MArC.	0	0	2	-	S	NO
MAr1	Test mode: analogue output 1 request	0	0	100	%	S	NO
MAr2	Test mode: analogue output 2 request	0	0	100	%	S	NO
MArC	Test mode: VCC output request	0	0	1000	%	S	NO
Mr1	Test mode, activate relay1: 0 = disabled; 1 = automatic; 2 = activated.	0	0	2	-	S	NO
Mr2	Test mode, activate relay 2 - see Mr1	0	0	2	-	S	NO
Mr3	Test mode, activate relay 3 - see Mr1	0	0	2	-	S	NO
Mr4	Test mode, activate relay 4 - see Mr1	0	0	2	-	S	NO
Mr5	Test mode, activate relay 5 - see Mr1	0	0	2	-	S	NO
Mr6	Test mode, activate relay 6 - see Mr1	0	0	2	-	S	NO
Mt	Manual mode duration (0 = manual mode always active)	10	0	90	min	S	NO
nFE	Enable NFC memory: 0 = copy parameters disabled; 1 = copy parameters enabled.	1	0	1	-	M	NO
OfT	Gasket heater OFF time	3	0	250	min	M	NO
On	On/Off command: 0 = Off; 1 = On	1	0	1	-	U	YES
OnT	Gasket heater ON time	5	0	250	min	M	NO
PDM	Manufacturer password (OEM)	44	0	999	-	M	NO
PDS	Service password	22	0	999	-	S	NO
PDU	User password	0	0	999	-	U	NO
r1	Minimum set point	-50/-58	-99/-146.2	r2	°C/°F	M	NO
r2	Maximum set point	50/122	r1	200/392	°C/°F	M	NO
r30	Control mode: 0 = direct with defrost; 1 = direct; 2 = reverse	0	0	2	-	M	NO
r4	Automatic night set point variation	3/5.4	-50/-90	50/90	Δ °C/°F	S	NO
r4d	Temperature control differential in ECO mode	4/7.2	0.1/0.2	99.9/179.2	Δ °C/°F	S	NO
r5c	Select probe to monitor: 0 = not configured; 1 = air off temperature (Sm); 2 = defrost temperature (Sd); 3 = air on temperature (Sr); 4 = not used; 5 = not used; 6 = auxiliary evaporator defrost temperature (Sd2); 7 = auxiliary probe 1; 8 = auxiliary probe 2 percentage request; 9 = ambient temperature; 10 = not used; 11 = glass temperature; 12 = not used; 13 = condensing temperature; 14 = humidity; 15 = frost protection temperature; 16 = product temperature; 17 = virtual probe (Sv); 18 = power supply voltage reading; 19 = evaporator fan; 20 = reserved;	3	0	20	-	M	NO
r6a	Control probe for night-time operation: 0 = virtual probe Sv; 1 = intake temperature probe Sr	0	0	1	-	S	NO
rAL	Reset alarm log	0	0	1	-	S	YES
rd	Temperature control differential	2/3.6	0.1/0.2	99.9/179.2	Δ °C/°F	S	YES
rdh	Humidity control differential	5	0.1	99.9	%rH	S	NO
Rdrh	Gasket heater control differential	2/3.6	0.1/0.2	20/36	Δ °C/°F	M	NO
RelayActTestMode[1]	Test via BMS serial port, activate relay 1	0	0	1	-	(*)	NO
RelayActTestMode[2]	Test via BMS serial port, activate relay 2	0	0	1	-	(*)	NO
RelayActTestMode[3]	Test via BMS serial port, activate relay 3	0	0	1	-	(*)	NO
RelayActTestMode[4]	Test via BMS serial port, activate relay 4	0	0	1	-	(*)	NO
RelayActTestMode[5]	Test via BMS serial port, activate relay 5	0	0	1	-	(*)	NO
RelayActTestMode[6]	Test via BMS serial port, activate relay 6	0	0	1	-	(*)	NO
rHP	Reset HACCP event log and reset HA and HF alarms	0	0	1	-	U	YES
rHt	Manual anti-sweat heater activation period (0 = function disabled)	5	0	180	min	M	NO
rHU	Manual anti-sweat heater activation percentage (of period rHt) (0 = function disabled)	70	0	100	%	M	NO
rIA	Immediate external alarm digital input logic: 0 = direct logic; 1 = reverse logic.	0	0	1	-	S	NO
rIb	Delayed external alarm digital input logic - see rIA	0	0	1	-	S	NO
rIc	Enable defrost digital input logic - see rIA	0	0	1	-	S	NO
rId	Start defrost digital input logic - see rIA	0	0	1	-	S	NO
rIE	Door switch with compressor OFF digital input logic - see rIA	0	0	1	-	S	NO
rIF	Remote ON/OFF digital input logic - see rIA	0	0	1	-	S	NO
rIG	Curtain switch digital input logic - see rIA	0	0	1	-	S	NO
rIh	Start/stop continuous cycle digital input logic - see rIA	0	0	1	-	S	NO
rIo	Change configuration digital input logic - see rIA	0	0	1	-	S	NO
rIP	Door switch without compressor OFF digital input logic - see rIA	0	0	1	-	S	NO
rIS	Generic function alarm digital input logic - see rIA	0	0	1	-	S	NO
rIt	Low pressure switch digital input logic - see rIA	0	0	1	-	S	NO
rIU	AUX output activation digital input logic - see rIA	0	0	1	-	S	NO
rM	Enable temperature monitoring	0	0	1	-	U	YES
rn	Dead band	4/7.2	0	60/108	Δ °C/°F	S	NO
rnH	Dead band for humidity control	5	0	50	Δ % rH	S	NO
ro	Control offset with probe error	0	0	20/36	Δ °C/°F	M	NO
rOA	Compressor reverse digital output logic: 0=direct; 1=reverse	0	0	1	-	S	NO
rOad	Condenser fan low speed digital output logic - see rOA	0	0	1	-	S	NO
rOah	Condenser fan high speed digital output logic - see rOA	0	0	1	-	S	NO
rOb	Alarm digital output logic - see rOA	0	0	1	-	S	NO
rOc	AUX auxiliary digital output logic - see rOA	0	0	1	-	S	NO
rOE	Light digital output logic - see rOA	0	0	1	-	S	NO
rOG	Defrost digital output logic - see rOA	0	0	1	-	S	NO
rOH	Auxiliary evaporator defrost digital output logic - see rOA	0	0	1	-	S	NO
rOI	Evaporator fan digital output logic - see rOA	0	0	1	-	S	NO

Code	Description	Def.	Min	Max	U.M	User	User term.
rOj	Dehumidification digital output logic	0	0	1	-	S	NO
rOk	Auxiliary compressor without rotation digital output logic - see rOA	0	0	1	-	S	NO
rOn	Pump down valve digital output logic - see rOA	0	0	1	-	S	NO
rOP	Timed digital output logic - see rOA	0	0	1	-	S	NO
rOq	Condensate drain heater digital output logic - see rOA	0	0	1	-	S	NO
rOS	Anti-sweat heater digital output logic - see rOA	0	0	1	-	S	NO
rOt	Generic On/Off function digital output logic - see rOA	0	0	1	-	S	NO
rOu	Condenser fan digital output logic - see rOA	0	0	1	-	S	NO
rOv	Humidification digital output logic - see rOA	0	0	1	-	S	NO
rOw	Reverse digital output with dead band control logic - see rOA	0	0	1	-	S	NO
rOx	Auxiliary parallel compressor digital output logic - see rOA	0	0	1	-	S	NO
rOy	Gasket heater digital output logic - see rOA	0	0	1	-	S	NO
rOz	Auxiliary compressor with rotation digital output logic - see rOA	0	0	1	-	S	NO
rr	Reverse output differential	2/3.6	0.1/0.2	20/36	Δ °C/°F	S	NO
rrH	Dehumidification differential	5	0	50	Δ % rH	S	NO
rS1	Working parameter set associated with open digital input (see par. DIo)	1	0	IS_max	-	M	NO
rS2	Working parameter set associated with closed digital input (see par. DIo)	2	0	IS_max	-	M	NO
rSA	Reset alarms	0	0	1	-	U	YES
rSC	Restore default values	0	0	1	-	S	YES
rTL	Reset monitoring period	0	0	1	-	U	YES
Sc1	Custom temperature set point 1	0	r1	r2	°C/°F	M	NO
Sc2	Custom temperature set point 2	0	r1	r2	°C/°F	M	NO
Sc3	Custom temperature set point 3	0	r1	r2	°C/°F	M	NO
Sc4	Custom temperature set point 4	0	r1	r2	°C/°F	M	NO
Sc5	Custom temperature set point 5	0	r1	r2	°C/°F	M	NO
Sc6	Custom temperature set point 6	0	r1	r2	°C/°F	M	NO
Sh1	Custom humidity set point 1	0	0	100	%rH	M	NO
Sh2	Custom humidity set point 2	0	0	100	%rH	M	NO
Sh3	Custom humidity set point 3	0	0	100	%rH	M	NO
Sh4	Custom humidity set point 4	0	0	100	%rH	M	NO
Sh5	Custom humidity set point 5	0	0	100	%rH	M	NO
Sh6	Custom humidity set point 6	0	0	100	%rH	M	NO
St	Temperature control set point	50/ 122	r1	r2	°C/°F	U	YES
St_idx	Select custom set point	0	0	3	-	M	NO
StH	Humidity control set point	90	0	100	%rH	U	YES
Strh	Gasket heater control set point	-18/-0.4	-50/-58	200/392	°C/°F	S	NO
td1-d	Defrost 1 to 8 - day; 0 = event disabled; 1 to 7 = Monday, ..., Sunday; 8 = Monday to Friday; 9 = from Monday to Saturday; 10 = Saturday & Sunday; 11 = every day	0	0	11	-	U	NO
td1-hh	Defrost 1 - hours	0	0	23	h	U	NO
td1-mm	Defrost 1 - minutes	0	0	59	min	U	NO
td1-time	Defrost 1	00:00:00	00:00:00	23:59:59	-	U	NO
td2-d	Defrost 2 - day	0	0	11	-	U	NO
td2-hh	Defrost 2 - hours	0	0	23	h	U	NO
td2-mm	Defrost 2 - minutes	0	0	59	min	U	NO
td2-time	Defrost 2	00:00:00	00:00:00	23:59:59	-	U	NO
td3-d	Defrost 3 - day	0	0	11	-	U	NO
td3-hh	Defrost 3 - hours	0	0	23	h	U	NO
td3-mm	Defrost 3 - minutes	0	0	59	min	U	NO
td3-time	Defrost 3	00:00:00	00:00:00	23:59:59	-	U	NO
td4-d	Defrost 4 - day	0	0	11	-	U	NO
td4-hh	Defrost 4 - hours	0	0	23	h	U	NO
td4-mm	Defrost 4 - minutes	0	0	59	min	U	NO
td4-time	Defrost 4	00:00:00	00:00:00	23:59:59	-	U	NO
td5-d	Defrost 5 - day	0	0	11	-	U	NO
td5-hh	Defrost 5 - hours	0	0	23	h	U	NO
td5-mm	Defrost 5 - minutes	0	0	59	min	U	NO
td5-time	Defrost 5	00:00:00	00:00:00	23:59:59	-	U	NO
td6-d	Defrost 6 - day	0	0	11	-	U	NO
td6-hh	Defrost 6 - hours	0	0	23	h	U	NO
td6-mm	Defrost 6 - minutes	0	0	59	min	U	NO
td6-time	Defrost 6	00:00:00	00:00:00	23:59:59	-	U	NO
td7-d	Defrost 7 - day	0	0	11	-	U	NO
td7-hh	Defrost 7 - hours	0	0	23	h	U	NO
td7-mm	Defrost 7 - minutes	0	0	59	min	U	NO
td7-time	Defrost 7	00:00:00	00:00:00	23:59:59	-	U	NO
td8-d	Defrost 8 - day	0	0	11	-	U	NO
td8-hh	Defrost 8 - hours	0	0	23	h	U	NO
td8-mm	Defrost 8 - minutes	0	0	59	min	U	NO
td8-time	Defrost 8	00:00:00	00:00:00	23:59:59	-	U	NO
TdL	Differential to enable humidity control	0	0	20/36	Δ °C/°F	U	NO
te1-d	End time band 1 - day; 0 = event disabled; 1 to 7 = Monday, ..., Sunday; 8 = Monday to Friday; 9 = from Monday to Saturday; 10 = Saturday & Sunday; 11 = every day	0	0	11	-	U	NO
te1-hh	End time band 1 - hours	0	0	23	h	U	NO
te1-mm	End time band 1 - minutes	0	0	59	min	U	NO
te1-time	End time band 1	00:00:00	00:00:00	23:59:59	-	U	NO
te2-d	End time band 2 - day	0	0	11	-	U	NO
te2-hh	End time band 2 - hours	0	0	23	h	U	NO
te2-mm	End time band 2 - minutes	0	0	59	min	U	NO
te2-time	End time band 2	00:00:00	00:00:00	23:59:59	-	U	NO
te3-d	End time band 3 - day	0	0	11	-	U	NO
te3-hh	End time band 3 - hours	0	0	23	h	U	NO
te3-mm	End time band 3 - minutes	0	0	59	min	U	NO
te3-time	End time band 3	00:00:00	00:00:00	23:59:59	-	U	NO
te4-d	End time band 4 - day	0	0	11	-	U	NO
te4-hh	End time band 4 - hours	0	0	23	h	U	NO
te4-mm	End time band 4 - minutes	0	0	59	min	U	NO
te4-time	End time band 4	00:00:00	00:00:00	23:59:59	-	U	NO
te5-d	End time band 5 - day	0	0	11	-	U	NO
te5-hh	End time band 5 - hours	0	0	23	h	U	NO
te5-mm	End time band 5 - minutes	0	0	59	min	U	NO
te5-time	End time band 5	00:00:00	00:00:00	23:59:59	-	U	NO
te6-d	End time band 6 - day	0	0	11	-	U	NO
te6-hh	End time band 6 - hours	0	0	23	h	U	NO
te6-mm	End time band 6 - minutes	0	0	59	min	U	NO
te6-time	End time band 6	00:00:00	00:00:00	23:59:59	-	U	NO
te7-d	End time band 7 - day	0	0	11	-	U	NO
te7-hh	End time band 7 - hours	0	0	23	h	U	NO
te7-mm	End time band 7 - minutes	0	0	59	min	U	NO
te7-time	End time band 7	00:00:00	00:00:00	23:59:59	-	U	NO

Code	Description	Def.	Min	Max	U.M	User	User term.
tE8-d	End time band 8 - day	0	0	11	-	U	NO
tE8-hh	End time band 8 - hours	0	0	23	h	U	NO
tE8-mm	End time band 8 - minutes	0	0	59	min	U	NO
tE8-time	End time band 8	00:00:00	00:00:00	23:59:59	-	U	NO
TestMode	Register for test mode	0	0	255	-	(*)	NO
THL	Maximum temperature to enable humidity control	0	-60/-76	60/140	Δ °C/°F	M	NO
TLL	Minimum temperature to enable humidity control	0	-60/-76	60/141	Δ °C/°F	M	NO
tS1-d	End time band 1 - day: 0 = event disabled; 1 to 7 = Monday, ..., Sunday; 8 = Monday to Friday; 9 = from Monday to Saturday; 10 = Saturday & Sunday; 11 = every day	0	0	11	-	U	NO
tS1-hh	Start time band 1 - hours	0	0	23	h	U	NO
tS1-mm	Start time band 1 - minutes	0	0	59	min	U	NO
tS1-time	Start time band 1	00:00:00	00:00:00	23:59:59	-	U	NO
tS2-d	Start time band 2 - day	0	0	11	-	U	NO
tS2-hh	Start time band 2 - hours	0	0	23	h	U	NO
tS2-mm	Start time band 2 - minutes	0	0	59	min	U	NO
tS2-time	Start time band 2	00:00:00	00:00:00	23:59:59	-	U	NO
tS3-d	Start time band 3 - day	0	0	11	-	U	NO
tS3-hh	Start time band 3 - hours	0	0	23	h	U	NO
tS3-mm	Start time band 3 - minutes	0	0	59	min	U	NO
tS3-time	Start time band 3	00:00:00	00:00:00	23:59:59	-	U	NO
tS4-d	Start time band 4 - day	0	0	11	-	U	NO
tS4-hh	Start time band 4 - hours	0	0	23	h	U	NO
tS4-mm	Start time band 4 - minutes	0	0	59	min	U	NO
tS4-time	Start time band 4	00:00:00	00:00:00	23:59:59	-	U	NO
tS5-d	Start time band 5 - day	0	0	11	-	U	NO
tS5-hh	Start time band 5 - hours	0	0	23	h	U	NO
tS5-mm	Start time band 5 - minutes	0	0	59	min	U	NO
tS5-time	Start time band 5	00:00:00	00:00:00	23:59:59	-	U	NO
tS6-d	Start time band 6 - day	0	0	11	-	U	NO
tS6-hh	Start time band 6 - hours	0	0	23	h	U	NO
tS6-mm	Start time band 6 - minutes	0	0	59	min	U	NO
tS6-time	Start time band 6	00:00:00	00:00:00	23:59:59	-	U	NO
tS7-d	Start time band 7 - day	0	0	11	-	U	NO
tS7-hh	Start time band 7 - hours	0	0	23	h	U	NO
tS7-mm	Start time band 7 - minutes	0	0	59	min	U	NO
tS7-time	Start time band 7	00:00:00	00:00:00	23:59:59	-	U	NO
tS8-d	Start time band 8 - day	0	0	11	-	U	NO
tS8-hh	Start time band 8 - hours	0	0	23	h	U	NO
tS8-mm	Start time band 8 - minutes	0	0	59	min	U	NO
tS8-time	Start time band 8	00:00:00	00:00:00	23:59:59	-	U	NO
ucd	Compressor stop delay after HLPV protection activated	5	0	60	s	M	NO
udE	Enable display of HLPV protection alarms (EHI and ELO, see alarm table)	0	0	1	-	M	NO
uEn	Enable HLPV protection: 0 = disabled; 1 = enabled.	0	0	1	-	M	NO
uHi	High voltage protection start threshold	245	90	265	V	M	NO
uHo	High voltage protection end threshold	255	90	265	V	M	NO
uLi	Low voltage protection start threshold	205	90	265	V	M	NO
uLo	Low voltage protection end threshold	195	90	265	V	M	NO
uof	OFF time for humidity duty setting operation	60	c2	120	min	M	NO
uon	ON time for humidity duty setting operation	10	c3	120	min	M	NO

Tab. 7.a

(*) Parameter only available via BMS serial.

(**) Parameter only available via the configuration tool.

7.2 Variable list (read-only)

Code	Description	Def.	Min	Max	UOM	User	User terminal
ALr	Active alarm category (Bit 0 = Warning; Bit 1 = reserved; Bit 2 = Normal alarms; Bit 3=Serious alarms; Bit 4=reserved)	0	0	1	-	M	NO
ASt	Effective control set point	-	-	-	°C/°F	M	NO
Aux	Auxiliary temperature probe reading	-	-	-	°C/°F	U	NO
Aux2	Auxiliary temperature probe 2 reading	-	-	-	°C/°F	U	NO
dFr	Defrost status: 0=not active 1=active	0	0	1	-	U	NO
dFS	Defrost status: 0=not active 2=defrost active 4=dripping 1=call 3=check end 5=post-dripping	-	0	5	-	U	NO
FAA	Evaporator fan	-	0	100	-	U	NO
FAC	Anti-sweat heaters	-	0	100	-	U	NO
FAd	Generic modulating function 1	-	0	100	-	U	NO
FAE	Condenser fan	-	0	100	-	U	NO
FAF	Light	-	0	100	-	U	NO
FAG	Compressor	-	0	100	-	U	NO
fCA	Variable-speed compressor speed reading	-	-	-	rpm	M	NO
FIA	Immediate external alarm function status	-	0	1	-	U	NO
Fib	Delayed external alarm function status	-	0	1	-	U	NO
Fic	Enable defrost function status	-	0	1	-	U	NO
Fid	Start defrost function status	-	0	1	-	U	NO
FIE	Door status with compressor and fan off	-	0	1	-	U	NO
FIF	Remote On/Off function status	-	0	1	-	U	NO
FIG	Curtain switch function status	-	0	1	-	U	NO
FIH	Start/stop continuous cycle function status	-	0	1	-	U	NO
Flo	Change configuration function status	-	0	1	-	U	NO
FIP	Door status without compressor and fan off	-	0	1	-	U	NO
FIS	Digital input status for generic alarm function	-	0	1	-	U	NO
Fit	Low pressure switch input function status	-	0	1	-	U	NO
FIU	Auxiliary input function status	-	0	1	-	U	NO
FOA	Compressor digital output function status	-	0	1	-	U	NO
FOad	Condenser fan low speed status	-	0	1	-	U	NO
FOah	Condenser fan high speed status	-	0	1	-	U	NO
FOb	Alarm digital output function status	-	0	1	-	U	NO
FOc	Auxiliary digital output function status	-	0	1	-	U	NO
FOE	Light digital output function status	-	0	1	-	U	NO
FOG	Defrost digital output function status	-	0	1	-	U	NO
FOH	Auxiliary evaporator defrost digital output function status	-	0	1	-	U	NO
FOI	Evaporator fan digital output function status	-	0	1	-	U	NO
FOj	Dehumidification heater output function status	-	0	1	-	U	NO
FOk	Compressor output without rotation function status	-	0	1	-	U	NO

Code	Description	Def.	Min	Max	UOM	User	User terminal	
FOh	Liquid valve output function status	-	0	1	-	U	NO	
FOP	Condensate drain output function status	-	0	1	-	U	NO	
FOq	Anti-sweat heater output function status	-	0	1	-	U	NO	
FOs	Generic function output 1 function status	-	0	1	-	U	NO	
FOt	Condenser fan output function status	-	0	1	-	U	NO	
FOu	Humidification output function status	-	0	1	-	U	NO	
FOv	Reverse auxiliary compressor output with dead band function status	-	0	1	-	U	NO	
FOw	Parallel compressor output function status	-	0	1	-	U	NO	
FOx	Door gasket heater output function status	-	0	1	-	U	NO	
FOy	Auxiliary compressor output with rotation function status	-	0	1	-	U	NO	
FOz	External dehumidifier output function status	-	0	1	-	U	NO	
HA1	Activation date and time of the first type HA alarm	-	-	-	-	U	NO	
HA2	Activation date and time of the second type HA alarm	-	-	-	-	U	NO	
HA3	Activation date and time of the third type HA alarm	-	-	-	-	U	NO	
HAn	Number of type HA alarms	0	0	6	-	U	YES	
HF1	Activation date and time of the first type HF alarm	-	-	-	-	U	NO	
HF2	Activation date and time of the second HF alarm	-	-	-	-	U	NO	
HF3	Activation date and time of the third type HF alarm	-	-	-	-	U	NO	
HFh	Number of type HF alarms	0	0	6	-	U	YES	
HMb	Operating hours since last maintenance (hours x 1000)	-	-	-	h*1000	S	NO	
IS_max	Number of embedded configurations	-	-	-	-	U	NO	
PAL	Active probe alarms	-	-	-	-	M	NO	
rdA	Current set point differential	-	-	-	-	M	NO	
rH	Maximum monitored probe value	-	-	-	°C/°F	U	NO	
rL	Minimum monitored probe value	-	-	-	°C/°F	U	NO	
rt	Probe monitoring session duration	-	0	999	h	M	YES	
rtA	Current date and time	-	-	-	-	U	NO	
rtm	Date/time last monitoring started	-	-	-	-	U	NO	
S_ca1	VCC - Overload protection	-	0	1	-	U	NO	
S_ca2	VCC - Speed set point out-of-specification (with compressor running)	-	0	1	-	U	NO	
S_ca4	VCC - Failed start	-	0	1	-	U	NO	
S_ca5	VCC - Overload condition	-	0	1	-	U	NO	
S_ca6	VCC - Low speed	-	0	1	-	U	NO	
S_ca7	VCC - Short circuit	-	0	1	-	U	NO	
S_ca8	VCC - Incorrect rotor position	-	0	1	-	U	NO	
S_ca9	VCC - Overtemperature	-	0	1	-	U	NO	
SA	Ambient temperature	-	-	-	°C/°F	U	NO	
Sc	Condenser temperature	-	-	-	°C/°F	U	NO	
Sd	Defrost temperature	-	-	-	°C/°F	U	YES	
Sd2	Auxiliary defrost temperature	-	-	-	°C/°F	U	NO	
SFr	Frost protection temperature	-	-	-	°C/°F	U	NO	
SHu	Humidity	-	-	-	%rH	U	YES	
Sm	Air off temperature	-	-	-	°C/°F	U	YES	
SPr	Product temperature	-	-	-	°C/°F	U	YES	
Sr	Inlet temperature	-	-	-	°C/°F	U	NO	
Sv	Virtual probe	-	-	-	°C/°F	U	YES	
Svt	Glass temperature	-	-	-	°C/°F	U	NO	
U/	Power supply voltage	-	-	-	V	S	NO	
vSr	Speed request to the variable speed compressor	-	-	-	Hz	S	NO	
W_Mode	Unit operating mode:		-	0	11	-	M	NO
	0=unit ON	3=reserved	6=standby	9=duty settings				
	1=unit OFF due to alarm	4=unit OFF from digital input	7=cleaning	10=continuous cycle				
	2=reserved	5=unit OFF from HMI	8=open door	11=defrost				

Tab. 7.b

7.3 Configuring the iJF controller via the Applica app

The "Applica" app can be used to configure the controller from a mobile device (smartphone, tablet), via NFC (Near Field Communication) or BLE (Bluetooth Low Energy). The app is used to configure the commissioning parameters and set groups of preset parameters according to specific needs (configurations).

Procedure:

- download the CAREL "Applica" app;
- (on the mobile device) start the app for commissioning the controller;
- enable NFC and/or BLE communication on the mobile device;
- If using an NFC connection: tap the NFC icon and move the device next to the controller to start reading. Both when connecting to the device and when uploading the configuration parameters, the mobile device must be less than 10 mm from the controller;
- If using a BLE connection:
 - select "the Bluetooth icon" to view the iJF controller devices available within a range of 10 m.
 - select the device to connect to

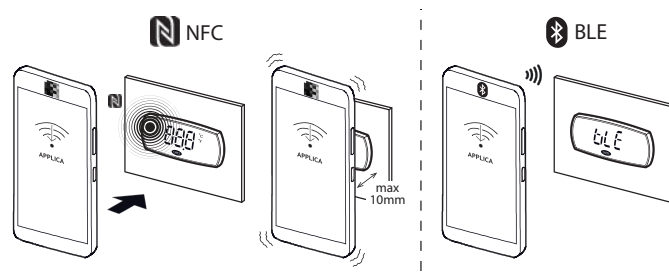


Fig. 7.a

Notice: during the first connection, the Applica app aligns itself with the software version on the iJF controller via a cloud connection; this means a mobile data connection is needed at least for this first connection. If the data connection is not available, the required packet can be retrieved from the cloud as soon as the connection is restored (access the "Packet Manager" section of Applica).

Applica makes it easy to set the parameters on the iJF controller and manage parameter configurations using the hamburger menu at the top left of the screen.

7.3.1 Configurations

Parameter configurations can be created and saved, and then uploaded to the iJF controller using the configuration software or Applica app. Configurations can be created either using the default values loaded by Carel, or starting from user-set values on the iJF controller, or alternatively only certain specific values can be modified.

To create a parameter configuration using the SPARK configuration software - released under license directly by Carel - and starting from the default values on the controller, connect the PC to the BMS connector (RS485) using converter P/N CVSTDUMOR0, as shown in the figure:

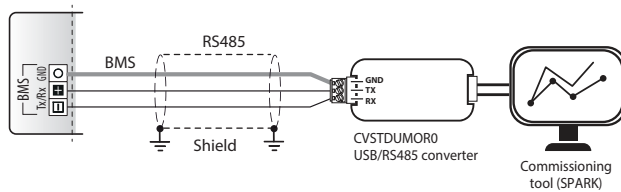


Fig. 7.b

The following procedure is used to create a configuration, starting from the actual values on the controller:

1. After starting the configuration software, from the "File" tab open the configuration file (workspace) provided by Carel;
2. In the "Target" tab add a "target", i.e. the iJF controller to communicate with.
3. Set the type of serial communication and change the connection parameters (default for the iJF baud rate 19200, parity None and 2 stop bit)
4. Select "Connect".
5. From the "Configurations" tab, select "New configuration" (e.g. 1).
6. After having created and selected the chosen configuration, select "Edit" and then "Apply real values".
7. The "Configuration value" column will now be populated with the current values on the iJF controller. The values can now be modified to create a custom configuration.
8. The configuration created as above can be immediately uploaded to the iJF controller by selecting "Applica configuration" or saved for future use by selecting "File", "Export".

Notice: to create a configuration based on the default values loaded by Carel on the iJF controller, simply follow the same procedure as described above, and in step 6 select "Apply default values" rather than "Apply real values".

7.3.2 Profiles

Different profiles can be created for displaying the parameters using the configuration software.

Proceed as follows:

1. After starting the configuration software, open the workspace provided by Carel;
2. From the "Profiles" tab select "Add profile" (MyProfile1);
3. Select "Profiling";
4. Select the variables to assign to the profile. These will only be the variables that are visible via the configuration/commissioning software and the Applica app to any M-level user who has the password for profile MyProfile1;
5. Now, selecting profile MyProfile1, the variables to assign to the profile as read-only can be selected by checking the check box in the corresponding column;
6. Select "Edit" to set the password associated with the profile;
7. The profile is now ready to be exported; select "Export profile" and upload it to the cloud service used by the Applica app.

Caution: to manage the different profiles, access to a proprietary tenant is required, so as to be able to modify the app cloud packages.

8. TECHNICAL SPECIFICATIONS

Physical specifications	Case	Polycarbonate
	Ball pressure test temperature	125 °C
	Ingress protection	IEC: - Rear: IP20, IP10 (Panel XL, HMI XL) - Front: IP65 (Panel small, Panel large with springs, Split small without HMI cable, HMI small, HMI large with springs, Panel XL, HMI XL); IP45 (Split large without HMI cable); IP43 (Panel large without springs, HMI large without springs); IP20 (Split with HMI cable) UL: - Type 1 (Panel small, Panel large from -5°C to 60°C, Split small without HMI cable, Split large, HMI small, HMI large from -5°C to 60°C, Panel XL, HMI XL) - Open type (Panel large from -20°C to 60°C, HMI large from -20°C to 60°C)
	Pulizia frontale	Utilizzare panno morbido non abrasivo, detergenti neutri o acqua
Environmental conditions	Operating temperature	-20T60 °C, <90% RH non-condensing -20T60 °C, <90% RH condensing, only for mod. BCU*****02 and BCU*****03
	Storage temperature	-40T80 °C, <90% RH non-condensing; -20T80 °C, <90% RH non condensing for models with battery
Electrical specifications	Rated power supply	100-240 Vac (Panel, Split); 12 Vdc, supplied by Carel controller SELV/Class 2 (HMI) 13-42 Vdc (HMI XL version 13-42 Vdc)
	Operating power supply voltage	90-264 Vac (Panel, Split); 12 Vdc, supplied by Carel controller SELV/Class 2 (HMI) 13-42 Vdc (HMI XL version 13-42 Vdc)
	Input frequency	50/60Hz (Panel, Split)
	Maximum current draw	100 mA rms (Panel small, Split small); 220 mA rms (Panel large, Split large); 200 mA, power supplied by Carel controller SELV/Class 2 (HMI) 60 mA, power supplied by Carel controller SELV/Class 2 (HMI)
	min/max power consumption	700 mW / 3 W (Panel small, HMI small, HMI large, Panel XL) 700 mW / 3.6 W (HMI XL) 800 mW / 8 W (Panel large)
	Clock	Precision: 20 ppm at 25°C; 100 ppm in the temperature range -20T60 °C. Date/time storage with controller off up to 2 years for models with battery (-20T60°C).
	Software class and structure	A
	Environmental pollution class	2 (Panel small, Split small, Panel large, Split large, Panel XL, HMI XL) 3 (HMI)
	Class of protection against electric shock	To be incorporated in class I or II appliances
	Type of action and disconnection	1.C
	Rated impulse voltage	100 - 240 Vac input and relay output: 2.5 kV (small/XL) 100 - 240 Vac input and relay output: 4 kV (Large) 0.5 kV (HMI)
	Surge immunity category	100 - 240 Vac input and relay outputs: II (small/XL) 100 - 240 Vac input and relay outputs: III (Large)
	Control device construction	Device to be incorporated
	Terminal block	NO1, C1, NO2, NO3, NO4, NO5, C5, C6, NC6, NO6, L, N: - Plug-in male-female 30-12 AWG/0.05-3.3 mm² - Screw terminals 30-14 AWG/0.05-2 mm² - Faston connectors S1, S2, S3, S4, DI1, DI2, S1H, S2H, D1H, D2H, GND (Small, HMI): - Plug-in male-female 30-17 AWG/0.05-1 mm² - Screw terminals 30-17 AWG/0.05-1 mm² S1, S2, S3, S4, DI1, DI2, GND (Large): - Plug-in male-female 30-12 AWG/0.05-3.3 mm² - Screw terminals 30-14 AWG/0.05-2 mm² BMS, 0-5 Vrat: - Plug-in male-female 30-17 AWG/0.05-1 mm² FieldBus, 0-10 V/PWM: - JST ZH connector 32-26 AWG/0.03-0.13 mm² Power supply and communication with Carel controller (HMI): - JST ZH connector 32-26 AWG/0.03-0.13 mm² - Plug-in male-female 30-17 AWG/0.05-1 mm² - Screw terminals 30-17 AWG/0.05-1 mm²
	Purpose of the controller	Electrical control device
User interface	Buzzer	Built-in (Panel, HMI)
	Display	3 digits, decimal point and multifunction icons (Panel, HMI); external HMI (optional, Split, barra LED (XL)
	Keypad	Max 6 buttons (Panel small, HMI small, Panel XL, HMI XL); max 8 buttons (Panel large, HMI large); external HMI (optional, Split)
	LEDs	1 red LED and 1 white LED (Split)
Connectivity	NFC	Max distance 10 mm, variable according to the mobile device used
	Bluetooth Low Energy (opt.)	Max distance 10 m, variable according to the mobile device used
	BMS serial interface (opt.)	RS485 not optically-isolated
	FieldBUS serial interface (opt.)	RS485, not opto-isolated, maximum number of devices that can be connected: 20
	HMI interface	RS485, not opto-isolated
	TTL serial interface (opt.)	Not opto-isolated, 3.3 V power supply, maximum number of devices connected: 1
Analogue inputs (Lmax=10m)	S1, S2, S3, S4: NTC / NTC-HT / NTC-LT / PT1000 / PTC	NTC: resolution 0.1 °C; 10 kΩ@25 °C; beta 3435; error: ±1 °C in the range -50T50 °C; ±3 °C in the range 50T90 °C NTC-HT: resolution 0.1 °C; 50 kΩ@25 °C; beta 3977; error: ±1,5 °C in the range -15T115°C; ±4 °C negli intervalli -30T-15 °C e 115T150 °C NTC-LT: resolution 0.1 °C; 750Ω@25 °C; beta 3969; error: ±1,5 °C in the range -20T10 °C; ±4 °C negli intervalli -80T-20 °C e 10T55 °C PT1000: resolution 0.1 °C; 1 kΩ@0 °C; error: ±1,5 °C in the range -60T120 °C PTC: resolution 0.1 °C; 985 Ω@25 °C; error: ±2 °C in the range -50T50 °C; ±4 °C in the range 50T150 °C
	S: 0...5 Vrat (opt.)	0...5 Vrat: error 2% fs, typical 1%
	S1H: D1H configurable as NTC	NTC: resolution 0.1 °C; 10 kΩ@25 °C; beta 3435; error: ±1 °C in the range -50T50 °C, ±3 °C in the range 50T90 °C
	S2H: NTC (models IJFHL*)	

Digital inputs	DI1, DI2	Voltage-free contact, not optically-isolated, typical closing current 5 mA, voltage with contact open 3,3 V, max contact resistance 50 Ω		
	D1H, D2H (HMI)	Voltage-free contact, not optically-isolated, typical closing current 5 mA, voltage with contact open 3,3 V, max contact resistance 50 Ω		
Analogue outputs	Y1, Y2, independently configurable as DC (opz.)	0...10 V: 1 kΩ, 10 mA max VCC freq.: 0-200 Hz, max amplitude 10 V, 10 mA max, duty cycle 50%		
Digital outputs (Small)	NO1, NO2, NO3, NO4 Notice: with screw or plug-in terminals, NO1: max 12 A. • NO1: max 12 A; • NO2: max 6 A; • NO2+NO3+NO4: max 12 A With spade terminals: • NO1: max 14 A; • NO2: max 6 A; • NO2+NO3+NO4: max 14 A	*2HP* Relay (NO1):	UL60730:	16A 250Vac 100k cycles 10 FLA 60 LRA 250 Vac 100k cycles 12 FLA 72 LRA 125 Vac 100k cycles Pilot duty B300 100k cycles
			IEC60730:	10(6)A 250Vac 100k cycles
		8A Relay (NO2):	UL60730:	8A 250 Vac 100k cycles 2 FLA 12 LRA 250 Vac 100k cycles Pilot duty C300 30k cycles Pilot duty C300 250 Vac 100k cycles Pilot duty D300 100k cycles
			IEC60730:	8(3)A 250 Vac 100k cycles
		5A Relay (NO3, NO4):	UL60730:	5A 250 Vac 100k cycles 1.9 FLA 11.4 LRA 250 Vac 100k cycles Pilot duty C300 30k cycles Pilot duty D300 250 Vac 100k cycles
			IEC60730:	5(1)A 250 Vac 100k cycles
Digital outputs (Large)	NO1, NO2, NO3, NO4, NO5, NO6, NC6 Notice: NO1+NO2: max 10 A; NO3+NO4: max 10 A. NO5: 30 A or 2 hp depending on the model, see label. For 30 A version, NO5: with screw or plug-in terminals, NO1: max 12 A. with spade terminals max 16 A For 2 hp version, NO5: with all terminals max 12 A.	*8A* Relay (NO1, NO2, NO3, NO4):	UL60730:	8A 250 Vac 100k cycles 2 FLA 12 LRA 250 Vac 100k cycles Pilot duty C300 30k cycles Pilot duty C300 250Vac 100k cycles Pilot duty D300 100k cycles
			IEC60730:	8(3)A 250Vac 100k cycles
		30A Relay (NO5):	UL60730:	16A 250 Vac 100k cycles 16 FLA 96 LRA 250 Vac 100k cycles 20(10)A 250 Vac 100k cycles
			IEC60730:	
		2HP Relay (NO5):	UL60730:	16A 250 Vac 100k cycles 10 FLA 60 LRA 250 Vac 100k cycles 12 FLA 72 LRA 125 Vac 100k cycles Pilot duty B300 100k cycles
			IEC60730:	10(6)A 250 Vac 100k cycles
		16A SPDT Relay (NO6, NC6):	UL60730:	10A 250 Vac NO 100k cycles 12A 250 Vac NO 75k cycles 12A 250 Vac NC 30k cycles 5 FLA 30 LRA 250 Vac NO 100k cycles Pilot duty C300 100k cycles
			IEC60730:	12(2)A 250 Vac NO 100k cycles 12(2)A 250 Vac NC 30k cycles 2(2)A 250 Vac CO 30k cycles
Digital outputs (XL)	NO1, NO2, NO3, NO4, NO5 Notice: • With screw or plug-in terminals: NO1+NO2+NO3: max 12 A; NO5: max 12 A • With Fast-on terminals: NO1+NO2+NO3: max 14 A; NO5: max 14 A.	*2hp* Relay (NO5):	UL60730	16A 250Vac 100k cycles 10 FLA 60 LRA 250 Vac 100k cycles 12 FLA 72 LRA 125 Vac 100k cycles Pilot duty B300 100k cycles
			IEC60730	10(6) 250 Vac 100k cycles
		8A Relay (NO1, NO2): (*)	UL60730	8A 250 Vac 100k cycles 2 FLA 12 LRA 250 Vac 100k cycles Pilot duty C300 30k cycles Pilot duty C300 250 Vac 100k cycles Pilot duty D300 100k cycles
			IEC60730	8(3)A 250 Vac 100k cycles
		(*) For loads with inrush current, this relay is certified TV-5@250V and, consequently, in accordance with UL60730 is rated for 5FLA - 30LRA 100,000 cycles.		
		5A Relay (NO3, NO4):	UL60730	5A 250 Vac 100 cycles 1.9 FLA 11.4 LRA 250 Vac 100k cycles Pilot duty C300 30k cycles Pilot duty D300 250 Vac 100k cycles
			IEC60730	5(1)A 250 Vac 100k cycles
Power supply / Relay outputs	• isolation from very low voltages (digital/analogue inputs, options)	reinforced/SELV		
	• isolation betw. independent relay outputs	basic (panel small, panel large), reinforced (panel XL)		
Probe power supply	5V	5 Vdc ± 2 % to power the 0 to 5 V ratiometric probes. Maximum current delivered: 10 mA		
	+V	12 Vdc ± 10% to power the repeater terminal		
Cable lengths	Analogue inputs/outputs, digital inputs/outputs, probe power	< 10 m		
	BMS serial (RS485):	< 500 m with shielded cable		
	BMS serial (TTL)	< 2 m		
	Controller-HMI	< 10 m - Nota: in domestic environments, for connections over 2 m, in applications where controller and HMI are not installed on the same chassis, shielded cable is recommended		
ConformitY	Electrical safety compliance - LVD directive and UL certification	IEC/EN/UL 60730-1, CSA E60730-1, IEC 60335-1 (sections 29 e 30)		
	Electromagnetic compatibility - EMC directive	IEC/EN 61000-6-1, IEC/EN 61000-6-2, IEC/EN 61000-6-3, IEC/EN 61000-6-4		
		For use with flammable refrigerants, the controllers described in this document have been tested and found to comply with the following requirements of the IEC 60335 series standards: • Annex CC of IEC 60335-2-24: 2010, referred to in clause 22.109, and Annex BB of IEC 60335-2-89: 2010, referred to in clause 22.108; components that produce arcs or sparks during normal operation have been tested and found to comply with the requirements of UL/IEC 60079-15; • IEC/EN/UL 60335-2-24 (clauses 22.109, 22.110) for household refrigerators and freezers; • IEC/EN/UL 60335-2-40 (clauses 22.116, 22.117) for electric heat pumps, air conditioners and dehumidifiers; • IEC/EN/UL 60335-2-89 (clauses 22.108, 22.109) for commercial refrigerating appliances. The controllers have been verified for the maximum temperatures of all components, which during the tests required by IEC 60335 cl. 11 and 19 do not exceed 268°C. The acceptability of these controllers in the final application where flammable refrigerants are used needs to be reviewed and verified depending on the final application.		
	Wireless compliance	RED directive (EN 301489-1), FCC (section 15, subsection B), IC.		
	Environmental compliance	EN 60068-2-52 sev. 3, for part numbers BCU*****03 EN 60068-2-38, for part numbers BCU*****02 & BCU*****03 (internal tests)		

Tab. 8.a

8.1 Connector/cable table

Ref.	Description	Wiring terminals	Wire cross-section (mm ²)	Lmax (m)
L, N	Controller power supply	Plug-in screw terminal, 2-pin, pitch 5.08 mm (Small without options)/5.08 mm (Small with options, Large)	0.05-3.3 (30-12 AWG)	10
		Screw terminals, 2-pin, pitch 5.08 mm (Small without options)/5.08 mm (Small with options, Large)	0.05-2 (30-14 AWG)	
		Faston connectors	-	
S1 to S3, S4 (Large)	Probes	Plug-in terminal; 5-pin, pitch 3.81 mm (Small, without options) 5-pin, pitch 3.81 mm (Large) 2x3 pins, pitch 3.5 mm (Small, with options) 4+3 pins, pitch 5.08 mm (Large)	0.05-3.3 (30-12 AWG)	10
		Screw terminals: 5-pin, pitch 3.81 mm (Small, without options) 5-pin, pitch 3.81 mm (Large) 2x3 pins, pitch 3.5 mm (Small, with options) 4+3 pins, pitch 5.08 mm (Large)	0.05-2 (30-14 AWG)	
S1H	HMI probe	Plug-in screw terminal, 2-pin, pitch 3.81 mm	0.05-1 (30-17 AWG)	10
		Screw terminal, 2-pin, pitch 3.81 mm		
SS, 5 V	Ratiometric probe power supply	Plug-in screw terminal, 2-pin, pitch 3.5 mm	0.05-1 (30-17 AWG)	10
ID1, ID2	Digital inputs	Plug-in terminal: 5-pin, pitch 3.81 mm (Small, without options) 2x3 pins, pitch 3.5 mm (Small, with options) 4+3 pins, pitch 5.08 mm (Large) 5-pin, pitch 3.81 mm (Large)	0.05-3.3 (30-12 AWG)	10
		Screw terminals: 5-pin, pitch 3.81 mm (Small, without options) 2x3 pins, pitch 3.5 mm (Small, with options) 4+3 pins, pitch 5.08 mm (Large) 5-pin, pitch 3.81 mm (Large)	0.05-2 (30-14 AWG)	
ID1H, ID2H	HMI digital inputs	Large: Plug-in screw terminal, 5-pin, pitch 3.81 mm	0.05-1 (30-17 AWG)	10
		Screw terminals, 5-pin, pitch 3.81 mm		
		Small/XL: Plug-in screw terminal, 2-pin, pitch 3.81 mm		
		Screw terminals, 2-pin, pitch 3.81 mm		
NO1 to NO6	Digital outputs	Plug-in terminal, 5-pin (Small), 4x3-pin (Large), pitch 5.08 mm	0.05-3.3 (30-12 AWG)	10
		3-pin + 2x2 pins pitch 5.08 mm		
		Screw terminal, 5-pin (Small), 4x3-pin (Large), pitch 5.08 mm	0.05-2 (30-14 AWG)	
		3-pin + 2x2 pins pitch 5.08 mm		
		Faston connectors	-	
Y1, Y2	0-10 V/PWM outputs	JST ZH connector, 4-pin, pitch 2 mm - Connection cable part number (see "Introduction").	0.03-13 (32-26 AWG)	10
BMS	BMS serial port (RS485):	Plug-in screw terminal, 3-pin, pitch 3.5 mm	0.05-1 (30-17 AWG)	500, with shielded cable, cross section at least 0.33 mm ² (22 AWG)
TTL	BMS serial (TTL)	JST ZH connector, 4-pin, pitch 2 mm - Connection cable part number (see "Introduction").	0.03-13 (32-26 AWG)	2
VCC	Vcc frequency (PWM) serial output	JST ZH connector, 4-pin, pitch 2 mm - Connection cable part number (see "Introduction").	0.03-13 (32-26 AWG)	500, 6 with shielded cable
HMI	HMI remote terminal	JST ZH connector, 4-pin, pitch 2 mm - Connection cable part number (see "Introduction").	0.03-13 (32-26 AWG)	10
		Plug-in screw terminal, 4-pin, pitch 5.08 mm		Notice: in domestic environments, for connections over 2 m, in applications where controller and HMI are not installed on the same chassis, shielded cable is recommended
		Screw terminals, 4-pin, pitch 5.08 mm	0.05-1 (30-17 AWG)	

Tab. 8.b

9. ALARMS AND SIGNALS

9.1 Signals

Signals are messages shown on the display to notify the user of the control procedures in progress (e.g. defrost) or to confirm keypad input in the event of incorrect behaviour.

Display code	Description	Display code	Description
Ble	Bluetooth™ connection in progress	Cht	Dirty condenser alarm
dEF	Defrost running	GHI	Generic function high threshold alarm
Loc	Display locked	GLO	Generic function low threshold alarm
Off	Switch OFF	HA	HACCP alarm
On	Switch ON	HF	HACCP alarm
tSt	Test outputs via BMS serial port active	LO	Low temperature alarm
ECO	ECO mode active	HI	High temperature alarm
CC	Continuous cycle running	IOC	I/O configuration alarm
MAn	Manual output mode active	PD	Pump down time alarm
COM	VCC communication offline	SF	Safety timeout alarm
ETC	RTC alarm	CE	Configuration write error alarm
Ed1	Defrost alarm 1	AFr	Frost alarm
Ed2	Defrost alarm 2	ATs	Pump down autostart alarm
rE	Control probe fault alarm	rsF	Refrigerant failure alarm
IA	Immediate alarm from DIN	LP	Low pressure alarm
dA	Delayed external alarm	UCF	VCC malfunction alarm
dor	Open door alarm	SrC	Maintenance required alarm
stb	Standby status alarm	EHI	High voltage alarm
cht	Dirty condenser warning	ELO	Low voltage alarm
Err	Communication error between Split and HMI	IOC	I/O configuration error

Tab. 9.a

9.2 Types of alarms

The iJF controller can display two types of malfunctions:

- **warning**, when this type of error occurs, the alarm code is shown on the display, alternating with the main value, the “Service” icon  isn't shown on the display and the buzzer does not sound, no relay is activated; errors belonging to this category include defrost ended after maximum time, dirty condenser, HACCP alarms, configuration errors.
- **alarms**, when this type of error occurs, the alarm code is shown on the display, alternating with the main value, and the “Service” icon  comes on, the buzzer flashes and the relay is activated; this category includes alarms for which with the relay is configured as an alarm, probe errors, temperature alarms, frost protection, communication errors with the VCC compressor, power supply over and under voltage, etc.



Notice:

- the digital outputs can be configured to signal the alarm status, normally open or normally closed. See “Digital outputs”.
- An alarm can also be activated from an external contact, immediate or delayed. See “Digital inputs”.

The warning and alarm signals can be immediate or delayed by parameter (see the Alarm table).

Both warnings and alarms can be reset automatically, manually or semi-automatically:

- **automatic**, when the cause is no longer present, the alarm also ceases;
- **manual**, when the cause is no longer present, the alarm remains active until manually reset by parameter;
- **semi-automatic**, reset is automatic 3 times in an hour, after which manual reset is required. The only exception is the generic function alarm, in which case both the number of attempts before switching the alarm from automatic to manual and the evaluation time can be specified.

Active alarms are signalled by the buzzer (see parameter Hb) and the “Service” icon on . The alarm code is shown on the display, alternating with the main value. Pressing any button mutes the buzzer and deactivates the output relay. If more than one error occurs, these are displayed in sequence. When an alarm is cleared, it is stored in the alarm log containing a maximum of five alarms, in a FIFO list (the 6th alarm overwrites the 1st alarm, and so on). The error log can be accessed from the user terminal, via supervisor or Applica app (Bluetooth connection only).



Notice: if the alarm signal is activated during the Applica Bluetooth connection, pressing the PRG button will mute the buzzer while the relay will remain energised.

Example

Display after HI error.

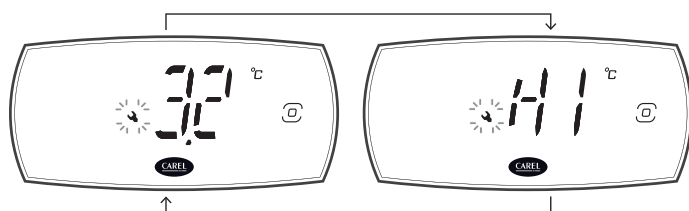


Fig. 9.a

The alarms can be reset manually using parameter rSA, from the user terminal or configuration tool, or in Applica (Bluetooth connection only) using the specific command on the Alarms page ("Service" or "Manufacturer" level access is required). If the condition that generated the alarm is still present, the alarm will be reactivated after resetting.

The alarm log can be deleted using parameter rAL, accessible from the user terminal, configuration tool or in Applica (Bluetooth connection only) using the specific command on the Alarms page ("Service" or "Manufacturer" level access is required).



Notice: deleting the alarm log is irreversible.

9.3 Alarm table

Display code	Log code (*)	Description	Delay (default)	Icon display	Alarm relay	Buzzer	Reset	Effects on control
AFr	29	Frost protection	Afd (1 min)	YES	YES	YES	Automatic	Compressor OFF
AtS	30	Restart in pump down	-	NO	NO	NO	Automatic	-
CE	28	Configuration write error	-	NO	NO	NO	Automatic	-
cht	17	High condensing temperature warning	-	NO	NO	NO	Automatic	-
CHt	18	High condensing temperature alarm	Acd (0 min)	YES	YES	YES	Manual	Compressor OFF
COM	34	VCC communication error	Ctd (15 s)	YES	YES	YES	Automatic	-
dA	14	Delayed alarm from external contact	A7 (1 min)	YES	YES	YES	Automatic	Compressor operation in duty setting mode (par. A6); dead band, lights and auxiliary output OFF
dor	15	Door open	Add (5 min)	YES	YES	YES	Automatic	See "Door management"
E1	1	Probe 1 faulty or disconnected	-	NO	NO	NO	Automatic	According to the associated function
E2	2	Probe 2 faulty or disconnected	-	NO	NO	NO	Automatic	
E3	3	Probe 3 faulty or disconnected	-	NO	NO	NO	Automatic	
E4	4	Probe 4 faulty or disconnected	-	NO	NO	NO	Automatic	
E5	5	Probe 5 faulty or disconnected	-	NO	NO	NO	Automatic	
E6	6	Probe S1H faulty or disconnected	-	NO	NO	NO	Automatic	
E7	7	Probe S2H faulty or disconnected	-	NO	NO	NO	Automatic	
Ed1	10	Defrost terminated after maximum time	-	NO	NO	NO	Automatic	-
Ed2	11	Defrost on second evaporator terminated after maximum time	-	NO	NO	NO	Automatic	-
EHI	36	High power supply voltage alarm	-	YES	YES	YES	Automatic	-
ELO	37	Low power supply voltage alarm	-	YES	YES	YES	Automatic	-
Etc	9	Clock error	-	NO	NO	NO	Manual	Time bands disabled
GHI	19	Generic alarm high threshold	GFA_De (0 s)	YES	YES	YES	Automatic	-
GLO	20	Generic alarm low threshold	GFA_De (0 s)	YES	YES	YES	Automatic	-
HA	21	Type HA HACCP alarm (high temp. during operation)	-	NO	NO	NO	Manual	-
HF	22	Type HF HACCP alarm (high temp. after blackout)	-	NO	NO	NO	Manual	-
HI	24	High temperature	Ad (120 s)	YES	YES	YES	Automatic	-
IA	13	Immediate alarm from external contact	-	YES	YES	YES	Automatic	Compressor operation in duty setting mode (par. A6); dead band OFF
LO	23	Low temperature	Ad (120 s)	YES	YES	YES	Automatic	-
LP	32	Low pressure	-	YES	YES	YES	Semi-automatic	Compressor OFF
MAn	38	Alarm status overridden in manual mode	-	NO	NO	NO	Automatic	-
Pd	26	Maximum pump down time	-	YES	YES	YES	Automatic	-
rE	12	Control probe faulty or disconnected	-	YES	YES	YES	Automatic	Compressor operation in duty setting mode (par. c4); dead band OFF
rSF	31	Refrigerant leak alarm	-	YES	YES	YES	Manual	Switch off all actuators
SF	27	Configuration not completed correctly	-	NO	NO	NO	Manual	-
SrC	35	Maintenance request	-	YES	YES	YES	Manual	-
UCF	33	VCC operation error	-	YES	YES	YES	Automatic	-
IOC	25	I/O configuration error	-	YES	Yes	Yes	Automatic	-

Tab. 9.b

(*) This is the code used to record and display the alarm in Applica.

9.4 Low and high temperature alarms LO and HI

The high and low temperature alarm thresholds can be relative or absolute, depending on the value of parameter A1:

- A1 = 0: the relative thresholds AL and AH are considered and represent the deviation from the set point; the low temperature alarm is activated at set point - AL, and the high temperature alarm at set point + AH. If the set point changes, the alarm activation point also changes automatically.
- A1 = 1, the absolute thresholds ALA and AHA are considered, representing the absolute low temperature and high temperature alarm threshold, respectively. If the set point changes, the activation point remains the same.

Par.	Description	Def	Min	Max	UOM	User	User terminal
d8	Bypass high temperature alarm time after defrost	30	1	240	min	S	YES
A0	High and low temp. alarm reset differential	2	0.1	20	°C/°F	M	NO
A1	Alarm thresholds (AL, AH) relative to the set point St or absolute: 0 = relative; 1 = absolute	0	0	1	-	S	YES
A6	Stop compressor with external alarm (Toff = 15 minutes, fixed): 0 = compressor always OFF; 100 = compressor always ON	0	0	100	min	M	NO
Ad	Delay time for high and low temp. alarms (AH, AL)	120	0	240	min	U	YES
Add	High temp. alarm bypass time for door open	30	1	240	min	U	YES
AH	Relative high temperature alarm threshold	0	0	555/999	Δ °C/°F	U	YES
AHA	Absolute high temperature alarm threshold	537/999	-100/-148	537/999	°C/°F	U	YES
AL	Relative low temperature alarm threshold	0	0	200/360	Δ °C/°F	U	YES
ALA	Absolute low temperature alarm threshold	-100/-148	-100/-148	537/999	°C/°F	U	YES

Tab. 9.c

Relative thresholds

Parameter AL is used to set the activation threshold for the low temperature alarm LO. The value measured by the control probe is continuously compared against the value of $St - AL$, and if it falls below this value for a time longer than Ad, the low temperature alarm LO is activated. The low temperature alarm LO ceases automatically when the temperature rises back above $St - AL + A0$.

Similarly, parameter AH is used to set the activation threshold for the high temperature alarm HI. The value measured by the control probe is continuously compared against the value of $St + AH$, and if it rises above this value for a time longer than Ad, the high temperature alarm HI is activated. The high temperature alarm HI ceases automatically when the probe reading falls below $St + AH - A0$.

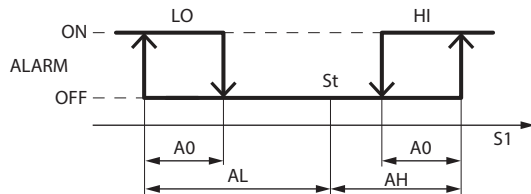


Fig. 9.b

Ref.	Description
LO	Low temperature alarm
HI	High temperature alarm
S1	Control probe
St	Set point
AL	Relative low temperature alarm threshold
AH	Relative high temperature alarm threshold
A0	Return differential

Absolute thresholds

Parameter ALA is used to set the activation threshold for the low temperature alarm LO. The value measured by the control probe is continuously compared against the value of ALA, and if it falls below this value for a time longer than Ad, the low temperature alarm LO is activated. The low temperature alarm LO ceases automatically when the temperature rises back above $ALA + A0$.

Similarly, parameter AHA is used to set the activation threshold for the high temperature alarm HI. The value measured by the control probe is continuously compared against the value of AHA, and if it rises above this value for a time longer than Ad, the high temperature alarm HI is activated.

The high temperature alarm HI ceases automatically when the probe reading falls below $AHA - A0$.

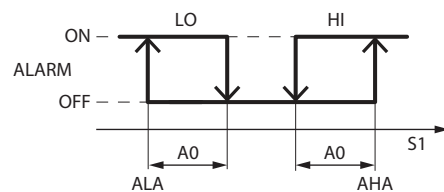


Fig. 9.c

Ref.	Description
LO	Low temperature alarm
HI	High temperature alarm
S1	Control probe
ALA	Low temperature alarm threshold
AHA	High temperature alarm threshold
A0	Return differential

The high temperature alarm is ignored for a time set by parameter Add after opening the door, and for parameter d8 after defrosting, to avoid false signals. Once the times set by parameter Add or d8 have elapsed, the delay set by parameter Ad starts counting and the alarm is signalled when it elapses.

The active low temperature alarm LO is signalled by the buzzer and the code LO shown on the display, while the active high temperature alarm HI is signalled by the buzzer and the code HI.

9.5 HACCP alarms (HACCP = Hazard Analysis and Critical Control Point)

These are specific alarms for controlling the operating temperature, recording any anomalies due to power failures or an increase in the temperature due to other causes (breakages, extreme operating conditions, user errors, etc.); see "HACCP alarm parameters and activating monitoring" for details.

Two types of potentially critical HACCP events are managed:

- type HA alarms, high temperature during operation;

Example: The critical temperature was exceeded, the alarm was not managed and the temperature remained above the threshold for longer than the maximum tolerable time (thresholds defined by site HACCP procedures). The event is critical and potentially hazardous.

- type HF alarms, high temperature after power failure; **Example:** The unit was powered off. When restarted, the temperature is above the threshold and does not return to an acceptable level within an appropriate time (parameters defined by site HACCP procedures). The event is critical and potentially hazardous.

When an alarm occurs, the HACCP icon comes on (if featured), the display shows the alarm code, the alarm is logged and the alarm relay and buzzer are activated.

9.5.1 HACCP alarm parameters and activating monitoring

Type HA alarms

The type HA alarm is generated if during normal operation the temperature read by the control probe exceeds the high temperature threshold for the time Ad+Htd. Consequently, compared to the normal high temperature alarm already signalled by the controller, the type HA HACCP alarm is delayed by a further time Htd specifically for HACCP recording.

Par.	Description	Def	Min	Max	UOM	User	User terminal
------	-------------	-----	-----	-----	-----	------	---------------

Htd	HACCP alarm delay: 0 = monitoring disabled	0	0	240	min	M	NO
-----	--	---	---	-----	-----	---	----

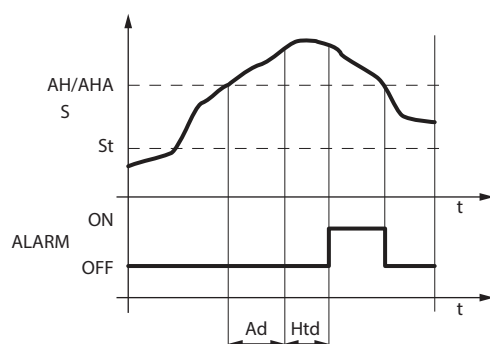


Fig. 9.d

Ref.	Description
------	-------------

S	Control probe
St	Set point
ALARM	Type HA HACCP alarm
Ad	Delay time for high and low temperature alarms
AH/AHA	Low temperature alarm threshold
Htd	HACCP alarm delay - 0 = monitoring disabled
t	Time

Code	Description	Def	Min	Max	UOM	User	User terminal
------	-------------	-----	-----	-----	-----	------	---------------

HAn	Number of type HA alarms (read only)	0	0	6	-	U	YES
HA1, HA2, HA3 (*)	Activation date and time of the first, second and third type HA alarm	...	...	...	-	U	NO

Type HF alarms

The type HF HACCP alarm is generated following a power failure, if when power returns the temperature read by the control probe exceeds the AH high temperature threshold. HF_n indicates the number of type HF alarms activated.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
------	-------------	------	-----	-----	-----	------	---------------

HF _n	Number of type HF alarms (read only)	0	0	6	-	U	YES
HF1, HF2, HF3 (*)	Activation date and time of the first, second and third type HF alarm	...	...	...	-	U	NO

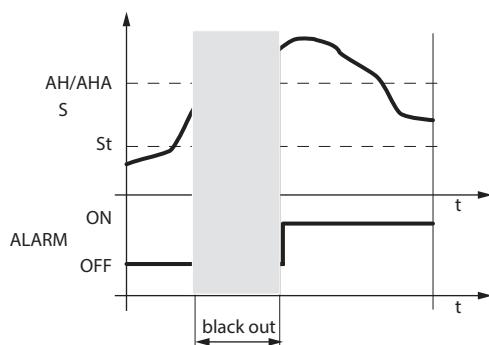


Fig. 9.e

Ref.	Description
------	-------------

S	Control probe
St	Set point
ALARM	Type HF HACCP alarm
AH/AHA	Low temperature alarm threshold
t	Time

(*) Parameters visible in APPLICA.

The HA and HF alarms can be reset using parameter rSA.

The HACCP and reset HA and HF alarm event log can be deleted using parameter rHP, from the configuration tool or in the Applica app (Bluetooth connection only).




Notice: deleting the HACCP event log is irreversible.

9.6 Dirty condenser alarm

If the condensing temperature probe is fitted, the iJF controller can monitor the reading so as to signal a dirty condenser alarm.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
/Fo	Assign condensing temperature probe:	0	0	7	-	U	NO
	0 disabled	4	S4				
	1 S1	5	reserved				
	2 S2	6	S1H				
	3 S3	7	S2H				
Ac	Dirty condenser alarm threshold	70/158	0/32	250/482	°C/°F	S	NO
AE	Dirty condenser alarm differential	5/9	0.1/0.2	20/36	Δ °C/°F	M	NO
ACd	Dirty condenser alarm delay	0	0	240	min	M	NO

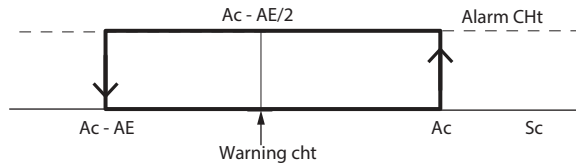

Ref.	Description
Sc	Condensing temperature probe reading
Ac	Dirty condenser alarm threshold
AE	Dirty condenser alarm differential
ACd	Dirty condenser alarm delay
cht	Dirty condenser warning
CHt	Dirty condenser alarm


Fig. 9.f

When the temperature $Ac - AE/2$ is exceeded, warning cht is generated to signal that the condenser is possibly obstructed. If the temperature subsequently returns below $Ac - AE$, the warning ceases automatically. If on the other hand the condensing temperature rises above the alarm threshold Ac for a time greater than the value set for parameter ACd , alarm CHt is generated and the compressor is stopped. Alarm CHt is reset manually; this is done by setting parameter rSA .

9.7 Frost protection alarm

If the frost protection temperature probe is fitted, the iJF controller can manage the frost protection alarm.

Par.	Description	Def.	Min	Max	UOM	User	User terminal
/Fq	Assign frost protection probe:	0	7	1	-	U	NO
	0 disabled	4	S4				
	1 S1	5	reserved				
	2 S2	6	S1H				
	3 S3	7	S2H				
AF	Frost protection alarm threshold	-5/-9	-50/-58	250/392	°C/°F	S	NO
AFd	Frost protection alarm delay	1	0	15	min	S	NO

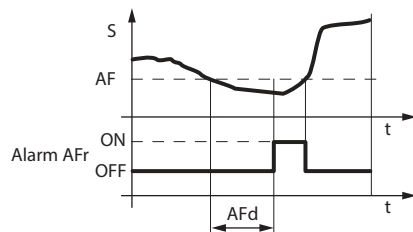

Ref.	Description
t	Time
AF	Frost protection alarm threshold
AFd	Frost protection alarm delay
Afr	Frost protection alarm
S	Frost protection temperature

Fig. 9.g

When the frost protection temperature falls below the alarm threshold AF for a time greater than the value set for parameter AFd , alarm Afr is generated and the compressor is stopped. Alarm Afr is reset automatically when the temperature rises above the threshold AF .

9.8 Refrigerant leak alarm rSF

The iJF controller manages an algorithm that checks if the temperature decreases after the compressor is switched on; if the temperature does not decrease sufficiently, the controller attempts to perform a number of defrosts. If even after defrosting the temperature still does not fall, it is assumed that there has been a refrigerant leak and manual-reset alarm rSF is generated, which stops the unit.

Code	Description	Def.	Min	Max	UOM	User	User terminal
d20	Sampling time for alarm rSF	0	0	240	min	M	NO
d16	Time with no temperature decrease before starting defrost	30	Add	240	min	M	NO
d21	Number of defrosts allowed before signalling alarm rSF	2	1	5	-	M	NO
d22	Temperature difference to verify decrease	0.1/0.2	0.1/0.2	0.5/0.9	Δ °C/°F	M	NO

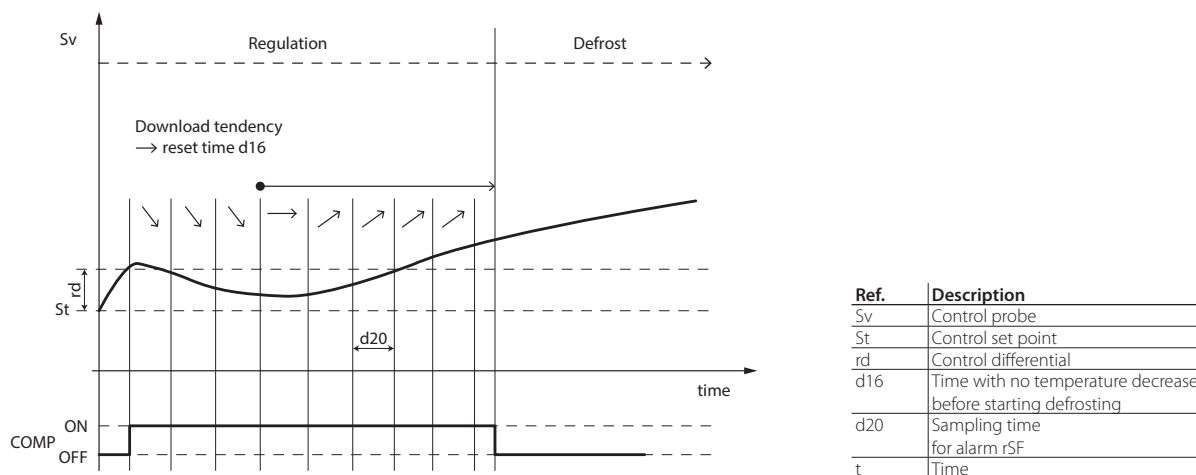


Fig. 9.h

After switching on the compressor, the iJF controller checks at the intervals set for d20 that the control temperature falls by at least by the value set for parameter d22; at the end of each interval, if the temperature decreases, the time with no temperature decrease is reset; on the other hand, if the temperature remains constant or increases, the controller starts counting the time with no temperature decrease, and on reaching the threshold set by parameter d16, a defrost is started. This operating cycle is repeated for a maximum number of defrosts set by parameter d21, after which alarm rSF is activated and the unit is switched off. Alarm rSF is reset manually using parameter rSA.

9.9 Maintenance alarm

The iJF controller can count the time that elapses since maintenance was last carried out, and signal a maintenance request alarm.

Code	Description	Def	Min	Max	UOM	User	User terminal
HMP	Operating hour threshold for maintenance alarm hx1000	0	0	45	h/1000	M	NO
HMr	Reset operating hours	0	0	1	-	S	NO

If the RTC clock is available and working correctly, the iJF controller can count the number of hours that have elapsed since the last time the operating hours were reset. When the threshold set by parameter HMP is exceeded, the maintenance request alarm SrC is signalled. Alarm SrC is reset manually by resetting the operating hours using parameter HMr. Parameter HMr can be used to reset the count of operating hours since maintenance was last carried out even if the alarm has not been activated. If the operating hour threshold HMP=0 (default), the alarm is disabled.

Notice: the maintenance alarm can only be activated on models fitted with RTC and with the clock set correctly.

9.10 VCC compressor alarms with serial control

For VCC compressors with serial control, the iJF controller manages several additional alarms, either detected by the inverter or by the controller itself:

	Description	Message on the display
Detected by the inverter	Failed start-up	UCF
	Overload condition	
	Short circuit	
	Incorrect rotor position	
	Overtemperature	
	Serial communication errors	COM
Detected by the controller	Offline	

Tab. 9.d

Par.	Description	Def	Min	Max	UOM	User	User terminal
CoA	Display alarms detected by the inverter: 0 = display disabled; 1 = display enabled.	1	0	1	-	M	NO
Ctd	Maximum VCC inverter communication failure time before alarm is shown on the display (0 = display disabled)	15	0	60	s	M	NO

To stop these alarms being shown on the display, set the following parameters:

- CoA = display alarms detected by the inverter; when the inverter detects a VCC malfunction, alarm UCF is shown on the display.
- Ctd = maximum time with no communication before the alarm is shown on the display; when the iJF controller detects no communication with the inverter for a time equal to Ctd, alarm COM is shown on the display.

Notice: to disable the alarms relating to VCC compressors on models with the VCC option yet without the inverter connected, set parameters cct and ctd to zero.

10. LOGS

The iJF controller can record both periodic and event logs, which can then be viewed and downloaded using the Applica app and commissioning tools. To view the logs from Applica, select Service Area -> Trend -> (tab) Logs for the periodic logs, or Service Area -> Trend -> (tab) Events for event logs:

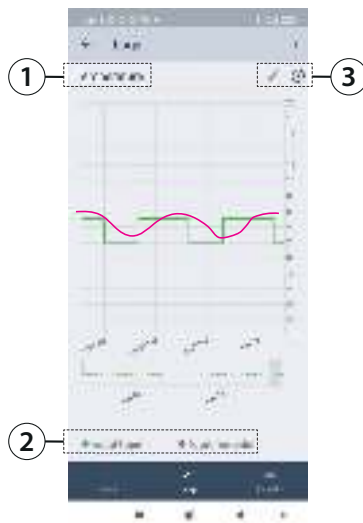


Fig. 10.a

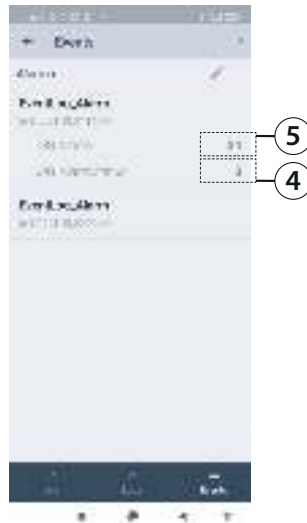


Fig. 10.b

Ref.	Description
1	Preset
2	Periodically logged variables
3	Tools to modify the display
4	Alarm status (0= not active; 1 = active)
5	Alarm code (See the Alarm table)

The log view is pre-set, however it can be changed using the editing tools. In addition, the pre-set views loaded on the device allow the main values to be filtered (temperature, HACCP alarms, blackouts, etc.). To download the logs, use the drop-down menu at the top right.

10.1 Periodic logs

The periodic logs record the main values at regular intervals, as shown in the table. Logged data is stored for a maximum of 30 days.

Logged value	UOM	Period
Control temperature	°C/°F	5 min
Current temperature set point.	°C/°F	1 h
Current humidity	% rh	1 h
Current humidity set point	% rh	1 h
Maximum temperature in the period	°C/°F	1 h
Minimum temperature in the period	°C/°F	1 h
Current evaporation temperature	°C/°F	1 h
Current condensing temperature	°C/°F	1 h
Compressor, minutes ON in the period	min	1 h
Compressor, starts in the period	-	1 h
Evaporator fan, minutes ON in the period	min	1 h
Lights, minutes ON in the period	min	1 h
Defrost, minutes ON in the period	min	1 h
Low temperature alarm relative threshold	Δ °C	1 h
Low temperature alarm relative threshold	Δ °C	1 h

Tab. 10.a

10.2 Event log

Event logs are recorded when specific conditions occur, and can be used to store certain related values, as shown in the table.

Logged value	Event	Other recorded values	Number of samples (*)	Limits
Alarm	Alarm activation	Number of the active alarm with highest priority. Alarm status (active/ceased)	100	max 255 alarm
Blackout	Device ON	Power failure duration in minutes	100	1000 hours
HACCP alarms	HA or HF alarm	Type HA or HF alarm	50	-

Tab. 10.b

(*) The samples are stored in a circular FIFO list (e.g. for the alarms, the 21st alarm overwrites the 1st alarm, and so on). The type of alarm recorded in the log can be identified using the alarm code (see the Alarm table).



Caution:

- changing the time set on the iJF controller by more than 140 minutes will clear the stored logs;
- the power failure duration is not precise and can have a tolerance of up to 10 minutes, due to the logging frequency.

11. APPENDIX

11.1 ir33 and IJ parameter compatibility table

The table below shows the parameters from the Carel PJ and IR33 platforms that have changed name or function in the IJ platform. The parameters not listed in this chapter have retained the same name and the same function.



ir33	ij	Description	Default	Min	Max	UOM
AF	-	Not present	-	-	-	-
AP	-	Not present	-	-	-	-
Apd	-	Not present	-	-	-	-
H6	-	Not present	-	-	-	-
H9	-	Not present	-	-	-	-
/c1, /c2, /c3, /c4, /c5	/cA	Outlet temperature probe (Sm) calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cb	Defrost temperature probe (Sd) calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cc	Intake temperature probe (Sr) calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cF	Auxiliary evaporator defrost temperature probe (Sd2) calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cq	Auxiliary temperature probe 1 calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cH	Auxiliary temperature probe 2 calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cl	Ambient temperature probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cM	Glass temperature probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/co	Condensing temperature probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cp	Humidity probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cq	Frost protection temperature probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
	/cr	Product temperature probe calibration	0	-20/ -36	20/ 36	Δ °C/ °F
/A2, /A3, /A4, /A5	/FA	Assign outlet temperature probe (Sm)	1	0	7	-
	/Fb	Assign defrost temperature probe (Sd) - see /FA	0	0	7	-
	/Fc	Assign intake temperature probe (Sr) - see /FA	0	0	7	-
	/FF	Assign auxiliary evaporator defrost temperature probe (Sd2) - see /FA	0	0	7	-
	/FG	Assign auxiliary temperature probe 1 (Saux1) - see /FA	0	0	7	-
	/FH	Assign auxiliary temperature probe 2 (Saux1) - see /FA	0	0	7	-
	/FI	Assign ambient temperature probe (SA) - see /FA	0	0	7	-
	/FM	Assign glass temperature probe (Svt) - see /FA	0	0	7	-
	/Fo	Assign condensing temperature probe - see /FA	0	0	7	-
	/FP	Assign humidity probe (fixed on S5)	5	5	5	-
	/Fq	Assign frost protection temperature probe - see /FA	0	0	7	-
	/FR	Assign product temperature probe - see /FA	0	0	7	-
H2	/nE	Lock HMI navigation: 0 = disabled; 1 = enabled	0	1	1	-
/P	/P1	Configuration of probes S1, S2, S3, S4: 0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.	2	0	4	-
	/P2	Configuration of multifunction input S3/ ID1: 0, 1, 2, 3, 4 = S3; 5 = ID1.	5	0	5	-
/tl	/t1	Display on user terminal:	9	0	15	-
/tE	/t2	Display on remote display - see /t1	0	0	15	-
A8	A3	Defrost terminated after maximum time signal: 0 = disabled; 1 = enabled	30	1	240	min
d8d	Add	High temp. alarm bypass time for door open	-5.0	-50.0	200.0	°C/°F
ALF	AF	Frost protection alarm threshold	1	0	15	min
AdF	Afd	Frost protection alarm delay time	1	0	15	min
d9	c7	Defrost priority over continuous cycle: 0 = continuous cycle has priority; 1 = defrost has priority	0	0	1	-
cc, cPd	cc	Continuous cycle running time (0 = disabled)	0	0	72	h
c7	cPt	Maximum pump down time (0 = pump down disabled)	0	0	900	s
d3	d15	Start defrost threshold	0	0	240	min
d12	d7	Skip defrost: 0 = disabled; 1 = enabled	0	0	1	-
A4, A5, A9	DIA	Assign immediate external alarm digital input: 0 = Disabled; 1 = ID1; 2 = ID2; 3 = D1H; 4 = D2H.	0	0	4	-
	Dlb	Assign delayed external alarm digital input - see DIA	0	0	4	-
	Dlc	Assign enable defrost digital input - see DIA	0	0	4	-
	Dld	Assign start defrost digital input - see DIA	0	0	4	-
	DIE	Assign door switch with compressor OFF digital input - see DIA	0	0	4	-
	DIF	Assign remote ON/OFF digital input - see DIA	0	0	4	-
	DIG	Assign curtain switch digital input - see DIA	0	0	4	-
	DIH	Assign start/stop continuous cycle digital input - see DIA	0	0	4	-
	Dlo	Assign working parameter set changeover digital input - see DIA	0	0	4	-
	DIP	Assign door switch without compressor OFF digital input - see DIA	0	0	4	-
	DIS	Assign generic function alarm digital input logic - see DIA	0	0	4	-
	Dlt	Assign low pressure switch digital input - see DIA	0	0	4	-
	DIU	Assign AUX output activation digital input - see DIA	0	0	4	-
H1, H5	DOA	Assign solenoid/compressor digital output	1 (small) 5 (large/XL)	0	6	-

ir33	iJ	Description	Default	Min	Max	UOM
H1, H5	DOb	Assign alarm digital output - see DOA	0 (small/XL) 2 (large)	0	6	-
	DOC	Assign AUX auxiliary digital output - see DOA	0 (small) 1 (large) 4 (XL)	0	6	-
	DOE	Assign light digital output - see DOA	4 (small) 3 (large/XL)	0	6	-
	DOG	Assign defrost digital output - see DOA	2 (small) 6 (large) 1 (XL)	0	6	-
	DOH	Assign auxiliary evaporator defrost digital output - see DOA	0	0	6	-
	DOI	Assign evaporator fan digital output - see DOA	3 (small) 4 (large) 2 (XL)	0	6	-
	DOj	Assign dehumidification heater digital output - see DOA	0	0	6	-
	DOK	Assign auxiliary compressor without rotation digital output - see DOA	0	0	6	-
	DOn	Assign pump down valve digital output - see DOA	0	0	6	-
	DOP	Assign drain heater digital output - see DOA	0	0	6	-
	DOQ	Assign anti-sweat heater digital output - see DOA	0	0	6	-
	DOO	Assign generic On/Off function digital output - see DOA	0	0	6	-
	DOt	Assign condenser fan digital output - see DOA	0	0	6	-
	DOu	Assign humidification digital output - see DOA	0	0	6	-
	DOv	Assign reverse digital output with dead band control - see DOA	0	0	6	-
	DOw	Assign auxiliary parallel compressor digital output - see DOA	0	0	6	-
	DOx	Assign gasket heater digital output - see DOA	0	0	6	-
	DOy	Assign auxiliary compressor with rotation digital output - see DOA	0	0	6	-
	DOz	Assign external dehumidifier digital output - see DOA	0	0	6	-
F5	F5d	Condenser fan activation differential	5/ 9	0.1/ 0.2	60/ 108	°C/°F
Ado	H14	Time light stays on after closing the door	0	0	240	min
H4	Hb	Buzzer: 0 = disabled; 1 = enabled	1	0	1	-
HF	HF1	Activation date and time of the first, second and third type HF alarm	...	...	...	-
Hdn	IS	Configuration to be loaded (0 = no configuration selected)	0	0	...	-
Pw	PDM	Manufacturer password (OEM)	44	0	999	-
	PDS	Service password	22	0	999	-
	PDU	User password	0	0	999	-
r3	r30	Control mode: 0 = direct with defrost; 1 = direct; 2 = reverse	0	0	2	-
r5	rM	Enable temperature monitoring: 0 = disabled; 1 = enabled	0	0	1	-
tof_d_	tE1-d, ..., tE8-d	End time band 1 to 8 - day, see (td1...8-d)	0	0	11	-
tof_h_	tE1-hh, ..., tE8-hh	End time band 1 to 8 - hours	0	0	23	hours
tof_m_	tE1-mm, ..., tE8-mm	End time band 1 to 8 - minutes	0	0	59	minutes
toF	tE1-time, ..., tE8-time	End time band 1 to 8 (Applica)	0:00:00	0:00:00	23:59:59	-
ton_d_	tS1-d, ..., tS8-d	Start time band 1 to 8 - day, see (td1...8-d)	0	0	11	-
ton_h_	tS1-hh, ..., tS8-hh	Start time band 1 to 8 - hours	0	0	23	hours
ton_m_	tS1-mm, ..., tS8-mm	Start time band 1 to 8 - minutes	0	0	59	minutes
ton	tS1-time, ..., tS8-time	Start time band 1 to 8 (Applica)	0:00:00	0:00:00	23:59:59	-
-	cuF	Conversion factor from frequency (Hz) to compressor speed (rpm)	30	0	999	rpm *1/ hz

Tab. 11.a

11.2 Input/output configuration procedure

The inputs and outputs can be configured in the Applica app or configuration tool by setting the corresponding parameters.

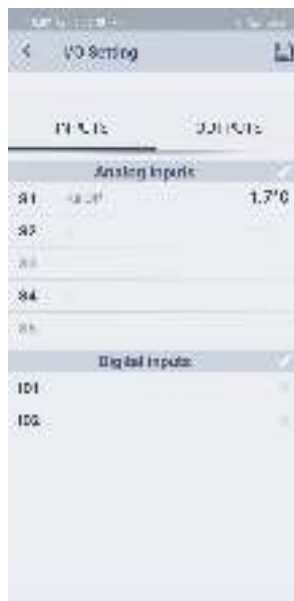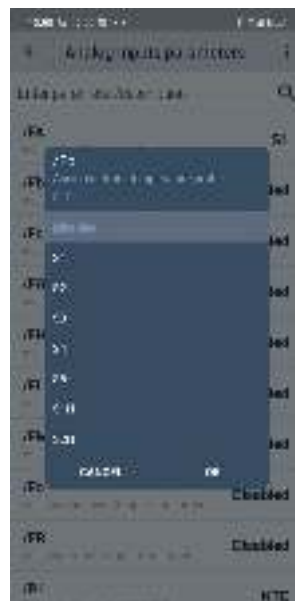
Fig. 11.a

Fig. 11.b

Procedure:

8. open Applica on the smartphone;
9. access the controller via NFC or Bluetooth, entering the profile credentials;
10. move the device closer to the iJF from to modify the input/output configuration on (NFC connection only);
11. access Service Area-> I/O;
12. select the Inputs or Outputs tab;
13. select the modification tool corresponding to the group of inputs/outputs to be modified;
14. select the parameter corresponding to the function to be added or modified (
15. the example in the figure shows the defrost probe assignment) and set the input/output to be associated with the function; press OK to confirm;
16. select "Write" from the drop-down menu at the top right, move the device closer to the iJF and tap "Applica" (NFC connection only).

Analogue inputs

Code	Description	Def	Min	Max	UOM	User	User terminal
/P1	Configuration of probes S1, S2, S3, S4: 0 = PT1000; 1 = PTC; 2 = NTC; 3 = NTC-LT; 4 = NTC-HT.	2	0	4	-	S	NO
/P2	Configuration of multifunction input S3/ ID1: 0, 1, 2, 3, 4 = S3; 5 = ID1.	5	0	5	-	S	NO
/FA	Assign outlet temperature probe (Sm) 0 = Function disabled 1 = Probe S1 2 = Probe S2 3 = Probe S3 4 = Probe S4 5 = Reserved 6 = Probe S1H 7 = Probe S2H	1	0	7	-	U	NO
/Fb	Assign defrost temperature probe (Sd) - see /FA	0	0	7	-	U	NO
/Fc	Assign intake temperature probe (Sr) - see /FA	0	0	7	-	U	NO

To set the type of probe, use parameter /P1.

Digital inputs

Code	Description	Def	Min	Max	UOM	User	User terminal
Dlb	Assign delayed external alarm digital input - see DIA	0	0	4	-	U	NO
Dlc	Assign enable defrost digital input - see DIA	0	0	4	-	U	NO
Dld	Assign start defrost digital input - see DIA	0	0	4	-	U	NO
Dle	Assign door switch with compressor OFF digital input - see DIA	0	0	4	-	U	NO
Dlf	Assign remote ON/OFF digital input - see DIA	0	0	4	-	U	NO
Dlg	Assign curtain switch digital input - see DIA	0	0	4	-	U	NO
Dlh	Assign start/stop continuous cycle digital input - see DIA	0	0	4	-	U	NO
Dlo	Assign working parameter set changeover digital input - see DIA	0	0	4	-	U	NO
Dlp	Assign door switch without compressor OFF digital input - see DIA	0	0	4	-	U	NO
Dis	Assign generic function alarm digital input logic - see DIA	0	0	4	-	U	NO
Dlt	Assign low pressure switch digital input - see DIA	0	0	4	-	U	NO
DIU	Assign AUX output activation digital input - see DIA	0	0	4	-	U	NO
rS1	Working parameter set associated with open digital input - see Dlo	1	0	IS_max	-	M	NO
rS2	Working parameter set associated with closed digital input - see Dlo	2	0	IS_max	-	M	NO

11.3 Setting the default parameters/loading the parameter sets

The working set contains the group of parameters used by the iJF controller during normal operation. This set is loaded whenever the iJF controller is started, and the parameters can be modified at any time from the terminal, supervisor, Applica app and configuration software. This set of parameters, customised by the user to control their refrigeration system, can be saved in a configuration using Applica. Subsequently the configuration can be retrieved and loaded onto the controller again using Applica.

iJF also stores a default parameter set in its memory; this set can never be overwritten, being stored in a non-modifiable memory area. The default configuration can be loaded to restore the system to factory conditions.

Various parameter configurations can also be loaded into the device's internal memory, and then selected as the working set as desired. A specific parameter can therefore be set to apply the different configurations directly from the terminal or in Applica. The configurations can be created, modified and applied using specific configuration tools distributed by Carel (Spark and Sparkly) or can be loaded during production phase (see "Preparing and using the configurations" for details).

11.3.1 Procedure for setting the default parameters/loading the parameter sets

Par.	Description	Def.	Min.	Max.	UoM
IS	Working configuration	0	0	IS_Max	-
IS_max	Number of embedded configurations	0	0	999	-
rSC	Restore default values	0	0	1	-

User terminal (see "User interface" for details)

Procedure:

1. unlock the keypad by holding the PROGRAM button for 3 s;
2. access the parameter setting menu by pressing the PROGRAM button;
3. use the UP and DOWN buttons to scroll the submenus until selecting "Ctl";
4. use the UP and DOWN buttons to scroll the parameters until selecting "rSC" to restore the Carel default values, or "IS" to load one of the parameter sets available on the controller;
5. to reset the parameters to the default values, after having selected parameter "rSC", press UP/DOWN to set the value 1 and confirm by pressing PROGRAM;
6. to load one of the parameter sets available on the controller, after selecting parameter "IS", press UP/DOWN to choose the value corresponding to the parameter set to be loaded as the working set, and confirm by pressing PROGRAM.

Applica

Procedure:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering your profile credentials;
3. scroll to parameter "rSC" (if enabled in the access profile) to restore the Carel default values, or "IS" to load one of the parameter sets available on the controller;
4. set parameter "rSC" or "IS" and confirm.



Notice: the visibility of parameters "rSC" and "IS" depends on the access profile used and whether or not there are any preloaded configurations, respectively.

Applying a configuration means copying the set values of the configuration parameters to the working parameters. Any empty parameters (parameters without values set in that configuration) will remain unaffected. The copy procedure is started by changing the value of parameter IS.

Once the configuration has been applied, the value of any of the parameters can be modified without affecting the configuration loaded on the controller, which can thus be recalled at any time, firstly setting the corresponding parameter to 0 and then to the value associated with the desired configuration.



- Notice:**
- the parameters contained in a configuration cannot be modified in any way.
 - Any parameters that are not included in the configuration will remain unchanged, even if the configuration used is changed.
 - Recalling the factory parameters resets the settings without however changing the configurations.

11.4 Copy configuration parameters

To simplify operations in the field, Applica includes a "Clone" feature to acquire the configuration from one iJF and replicate it on other controllers.

Procedure:

1. open Applica on the smartphone;
2. access the controller via NFC or Bluetooth, entering the profile credentials;
3. follow the path "Configurations/Clone";
4. move the smartphone closer to the iJF controller to acquire the configuration from (NFC connection only);
5. following the acknowledgement message, move the smartphone closer to the iJF controller to apply the same configuration to (NFC connection only);
6. wait for the cloning confirmation message to be shown.



Notice: cloning copies all of the parameters, even those not visible to the user based on the access profile. On the other hand, to copy only the parameters that are visible to the user, use the "Create configuration" option, accessible from Service Area -> Setup -> Parameter list.

11.5 Preparing and using the configurations

A configuration is a set of code-value pairs that can contain all, some, or just one parameter.

Example: configuration "1":

rd = 3

St = 2.5

dI = 10

d0 = 1



Notice: it is strongly recommended for all configurations to contain the same parameters, to avoid any parameter setting errors that may cause alarms or malfunctions.

The following procedure describes how to create the configurations, load them onto the controller and recall them using the tools described under "Configuration tools".

11.5.1 Creating configurations

Spark is the tool used to create configurations.

Procedure:

1. open Spark;
2. open the workspace provided by Carel (unique for each software version)
3. select the "Configurations" tab;
4. select "New configuration" and enter the configuration name, which must be a progressive number;
5. in the parameter list, enter the values corresponding to the parameters to be included in the configuration in the "Configuration value" column.

Notice: the configuration name must be a progressive number, with the following format: 1, 2, 3 ... n, other names or non-consecutive values are not allowed.



Fig. 11.c

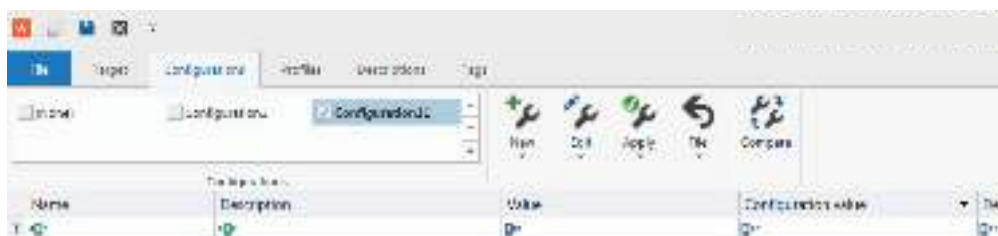


Fig. 11.d

Installing the configurations

Sparkly is the tool used to install configurations on iJF.

Procedure:

1. create a folder on the PC or laptop (C:\Temp);
2. create configurations using Spark and save them in the folder created previously;
3. save the .pack file containing the iJF software version supplied by Carel in the same folder (e.g. HQ000IJF000B0.pack);
4. run Sparkly and write the following command: `pack- file embed -- src "C:\Temp\HQ000IJF000B0.pack" -- configurations "C:\Temp\1.stconfiguration""C:\Temp\2.stconfiguration""C:\Temp\n.stconfiguration"`
5. Press "Enter".

Notice: the configurations must be named with progressive numbers (1.stconfiguration, 2.stconfiguration, etc.). All of the configurations must be entered, no skipped or missing numbers are allowed.

The new .pack file containing the configurations will be generated in the folder and is ready to be installed on the controller.

"Auto-start" configuration

When the .pack file containing the configurations has been created, the configuration that iJF will use when the unit is reset (parameter rSC) can be selected, rather than using parameter IS (see "Selecting a configuration") by simply adding the configuration name to the end of the string.

Example: the command `pack- file embed -- src "C:\Temp\HQ000IJF000B0_1_3_1.pack" -- configurations "C:\Temp\1.stconfiguration""C:\Temp\2.stconfiguration" -- auto-start "2"` will create a .pack file with the second configuration as auto-start.

Notice:

- after loading the .pack file containing the auto-start configuration, a factory reset is required, using parameter rSC.
- In the auto-start configuration, the value of parameter IS must also be set correctly. E.g. if the auto-start configuration is the first configuration, set IS = 1.

Installing configurations via BMS using the CVSTDUMOR0 converter

To install the new .pack file containing the configurations on the iJF controller, run Sparkly and write the following command: app download - - src "HQ000IJF000B0.pack" - - connection Serial,COM4,115200N2,1 - - working directory "C:\Temp", where COMx is the COM port the converter is connected to, and then press "Enter". Where:

- HQ000IJF000B0: is the name of the .pack file containing the configurations; if modified, it must be replaced by the name of the new .pack file generated using Sparkly;
- COM4: this must be replaced with the COM port used for connection to iJF;
- 115200: the serial communication speed must correspond to the value of parameter H10 on iJF; recommended value at 115200 bps (H10 = 7) for faster loading;
- C:\Temp: is the folder containing the files described above;
- 1: must be replaced with the device's serial address (parameter H0, factory set to 1)

Installing configurations via digital input ID2 using the BXOPZIOWD0000 converter

To install the new .pack file containing the configurations on the iJF controller, run Sparkly and write the following command to enable digital input ID2 as a serial port on iJF: device enable-serial-on-ID --port COMx --interval 30 and then power on the controller. From this point on the commands are the same as those used via BMS.



Notice: the serial communication speed for ID2 is fixed at 57600 bps, regardless of the value set for H10.

11.6 Alternative buttons and icons

11.6.1 Buttons

Ver. 2.2	Description	Drawing	Ver. 2.2	Description	Drawing	Ver. 2.2	Description	Drawing
k1	Controller logical On/Off		k14	Reset minimum/maximum recorded control probe temp.		k27	Load embedded configuration 1	
k2	Continuous cycle On/Off		k15	Auxiliary output On/Off		k28	Load embedded configuration 2	
k3	Direct access to the temperature control set point		k16	Display defrost probe temp.		k29	Quick set point 1	
k4	Firmware version		k17	Display HACCP alarms		k30	Quick set point 1	
k5	Defrost On/Off		k18	Display condensing temperature probe		k31	Quick set point 1	
k6	Light On/Off		k19	Set humidity control level		k32	Quick set point 2	
k7	ECO mode On/Off		k20	Direct access to the humidity set point		k33	Quick set point 2	
k8	Display alarms		k21	Adjust light brightness		k34	Quick set point 2	
k9	Display humidity probe		k22	Display alarm log		k35	Quick set point 3	
k10	Display control temperature probe		k23	Display product temperature probe		k36	Quick set point 3	
k11	Display air temperature probe		k24	Enable/disable Bluetooth communication		k37	Quick set point 3	
k12	Display minimum recorded control probe temperature		k25	Enable/disable NFC reading				
k13	Display maximum recorded control probe temperature		k26	Pulldown On/Off				

Tab. 11.b

11.6.2 Icons

Ver. 2.1	Meaning of the icon when it's ON	Drawing	Ver. 2.1	Meaning of the icon when it's ON	Drawing
i1	Controller is ON		i10	The humidity value is being displayed	
i2	Compressor is ON		i11	AUX output is ON	
i3	Evaporator fan is ON		i12	Pulldown is running	
i4	Light is ON		i13	At least one Alarm is logged	
i5	Continuous cycle is running		i14	The MINIMUM recorded temperature is being displayed	
i6	ECO mode is running		i15	The MAXIMUM recorded temperature is being displayed	
i7	There is at least a scheduled activity with Clock		i16	The Bluetooth communication port is available	
i8	Defrost is running		i17	The NFC communication port is available	
i9	At least one HACCP alarm has occurred				

Tab. 11.c



Note: the navigation button "" accesses the various programming menus; if the button is different, for example "" or "" contact the manufacturer for the specific manual.

12. RELEASE NOTES

The software version is shown for a few seconds when the controllers with user interface are switched on (first two digits only), via the BMS variable or Applica app.

The correspondence between the software version and the manual version is shown below.

Software version	Manual version	Description
1.2.2	1.2 20/09/2021	First release
1.3.1		
1.5.0	1.3 29/04/2022	Typos corrected
2.1.0	1.4 29/10/2024	Paragraphs 6.14.5 Defrost with VCC compressor and 6.19.4 Dehumidification output settings added.
		Typos corrected



CAREL INDUSTRIES - Headquarters

Via dell'Industria, 11 - 35020 Brugine - Padova (Italy)
Tel. (+39) 049.9716611 - Fax (+39) 049.9716600
e-mail: carel@carel.com - www.carel.com

iJF +0300100EN rel. 1.6 - 30.04.2026